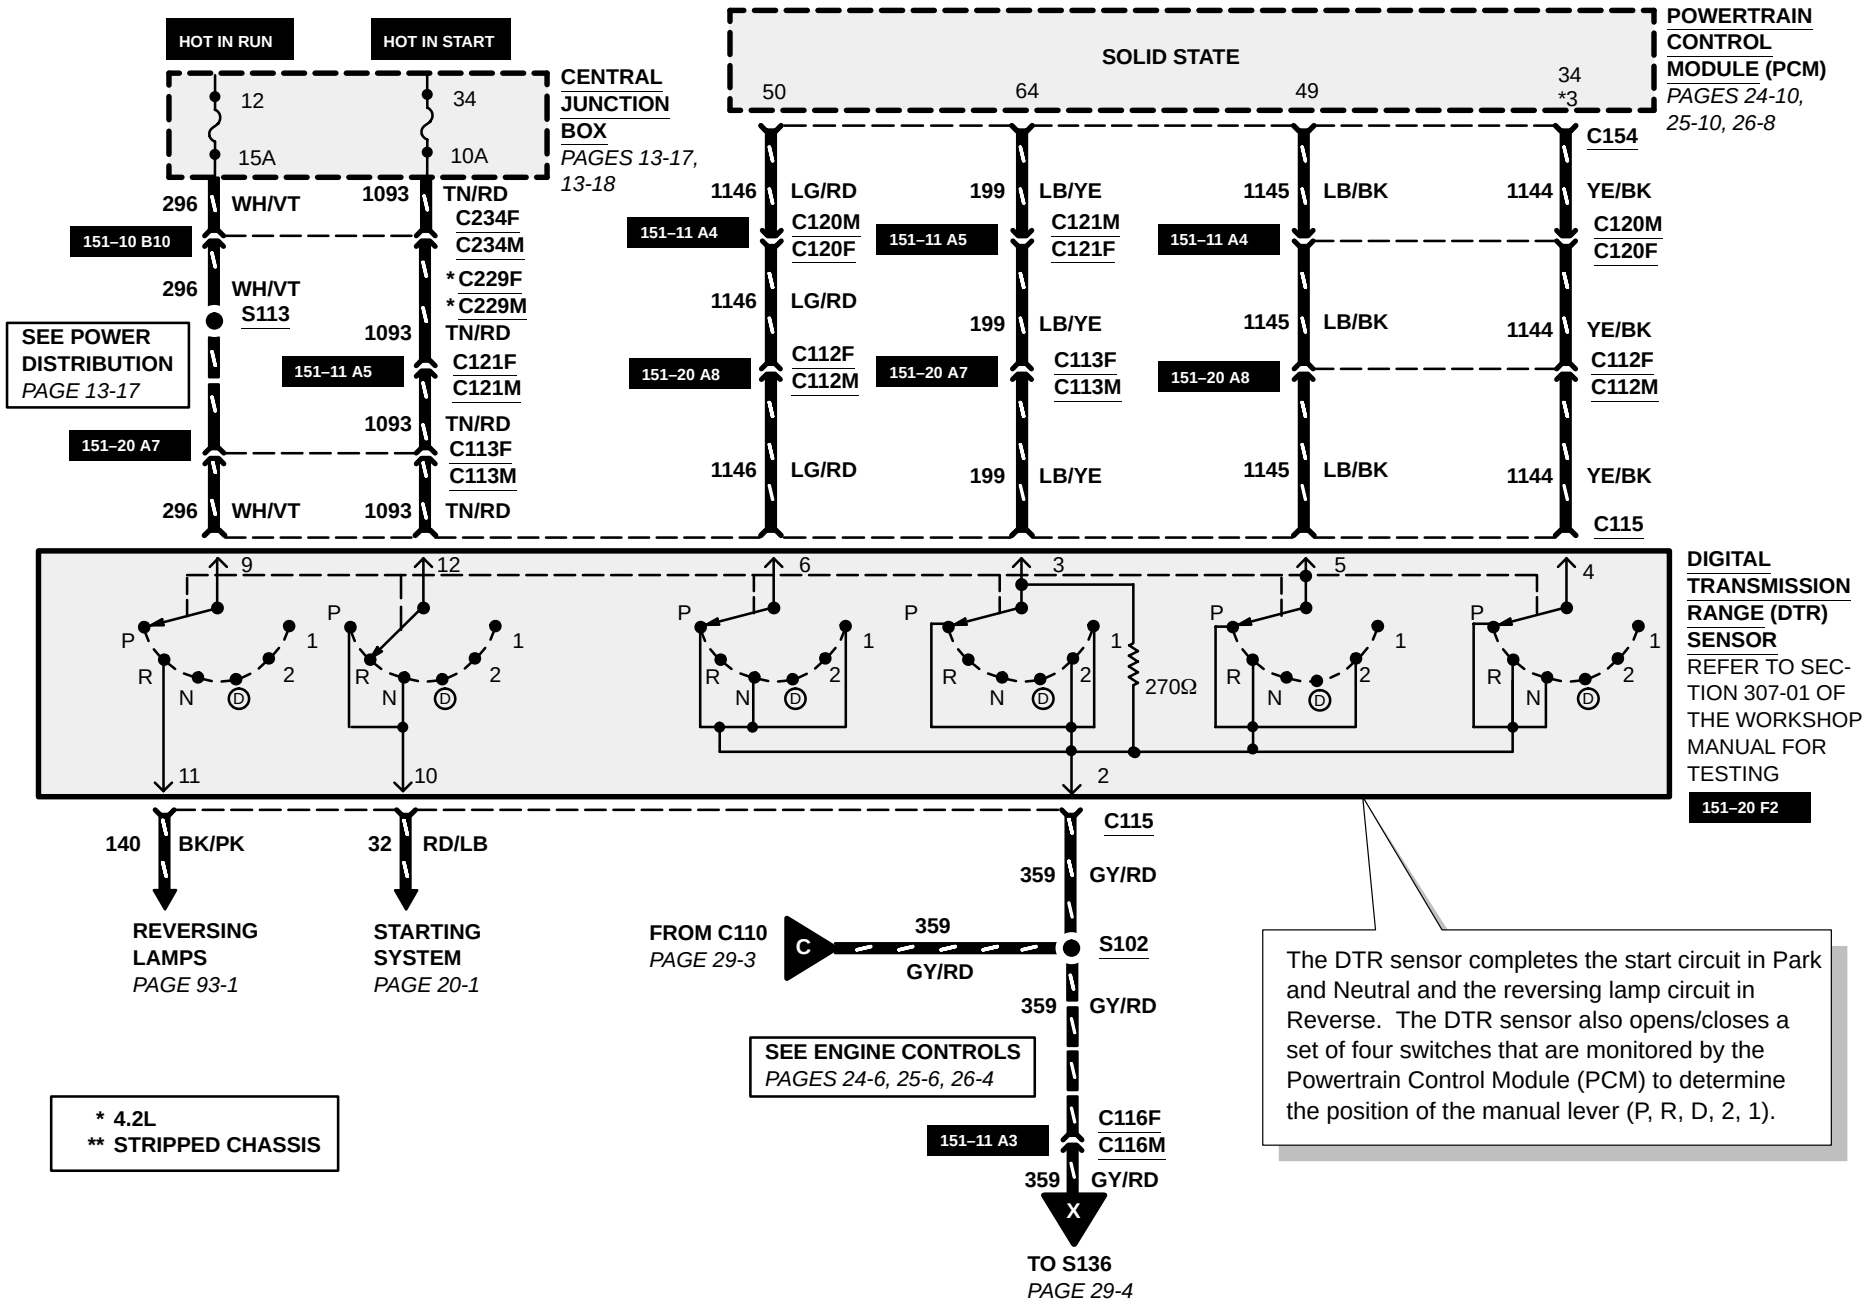
HOT IN RUN
HOT IN START
CENTRAL JUNCTION BOX
PAGES 13-17, 13-18
12
34
15A
10A
SOLID STATE
50
64
49
34
*3
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-10, 25-10, 26-8
C154
296 WH/VT
1093 TN/RD
C234F
C234M
151–10 B10
*C229F
*C229M
SEE POWER DISTRIBUTION
PAGE 13-17
S113
151–11 A5
C121F
C121M
151–20 A7
C113F
C113M
1146 LG/RD
C120M
C120F
151–11 A4
199 LB/YE
C121M
C121F
151–11 A5
1145 LB/BK
151–11 A4
1144 YE/BK
C120M
C120F
C112F
C112M
151–20 A8
151–20 A7
151–20 A8
C115
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
REFER TO SECTION 307-01 OF THE WORKSHOP MANUAL FOR TESTING
151–20 F2
9
12
6
3
5
4
P
R
N
D
1
2
270Ω
11
10
2
140 BK/PK
32 RD/LB
REVERSING LAMPS
PAGE 93-1
STARTING SYSTEM
PAGE 20-1
359 GY/RD
FROM C110
PAGE 29-3
C
S102
SEE ENGINE CONTROLS
PAGES 24-6, 25-6, 26-4
C116F
C116M
151–11 A3
X
TO S136
PAGE 29-4
* 4.2L
** STRIPPED CHASSIS
The DTR sensor completes the start circuit in Park and Neutral and the reversing lamp circuit in Reverse. The DTR sensor also opens/closes a set of four switches that are monitored by the Powertrain Control Module (PCM) to determine the position of the manual lever (P, R, D, 2, 1).