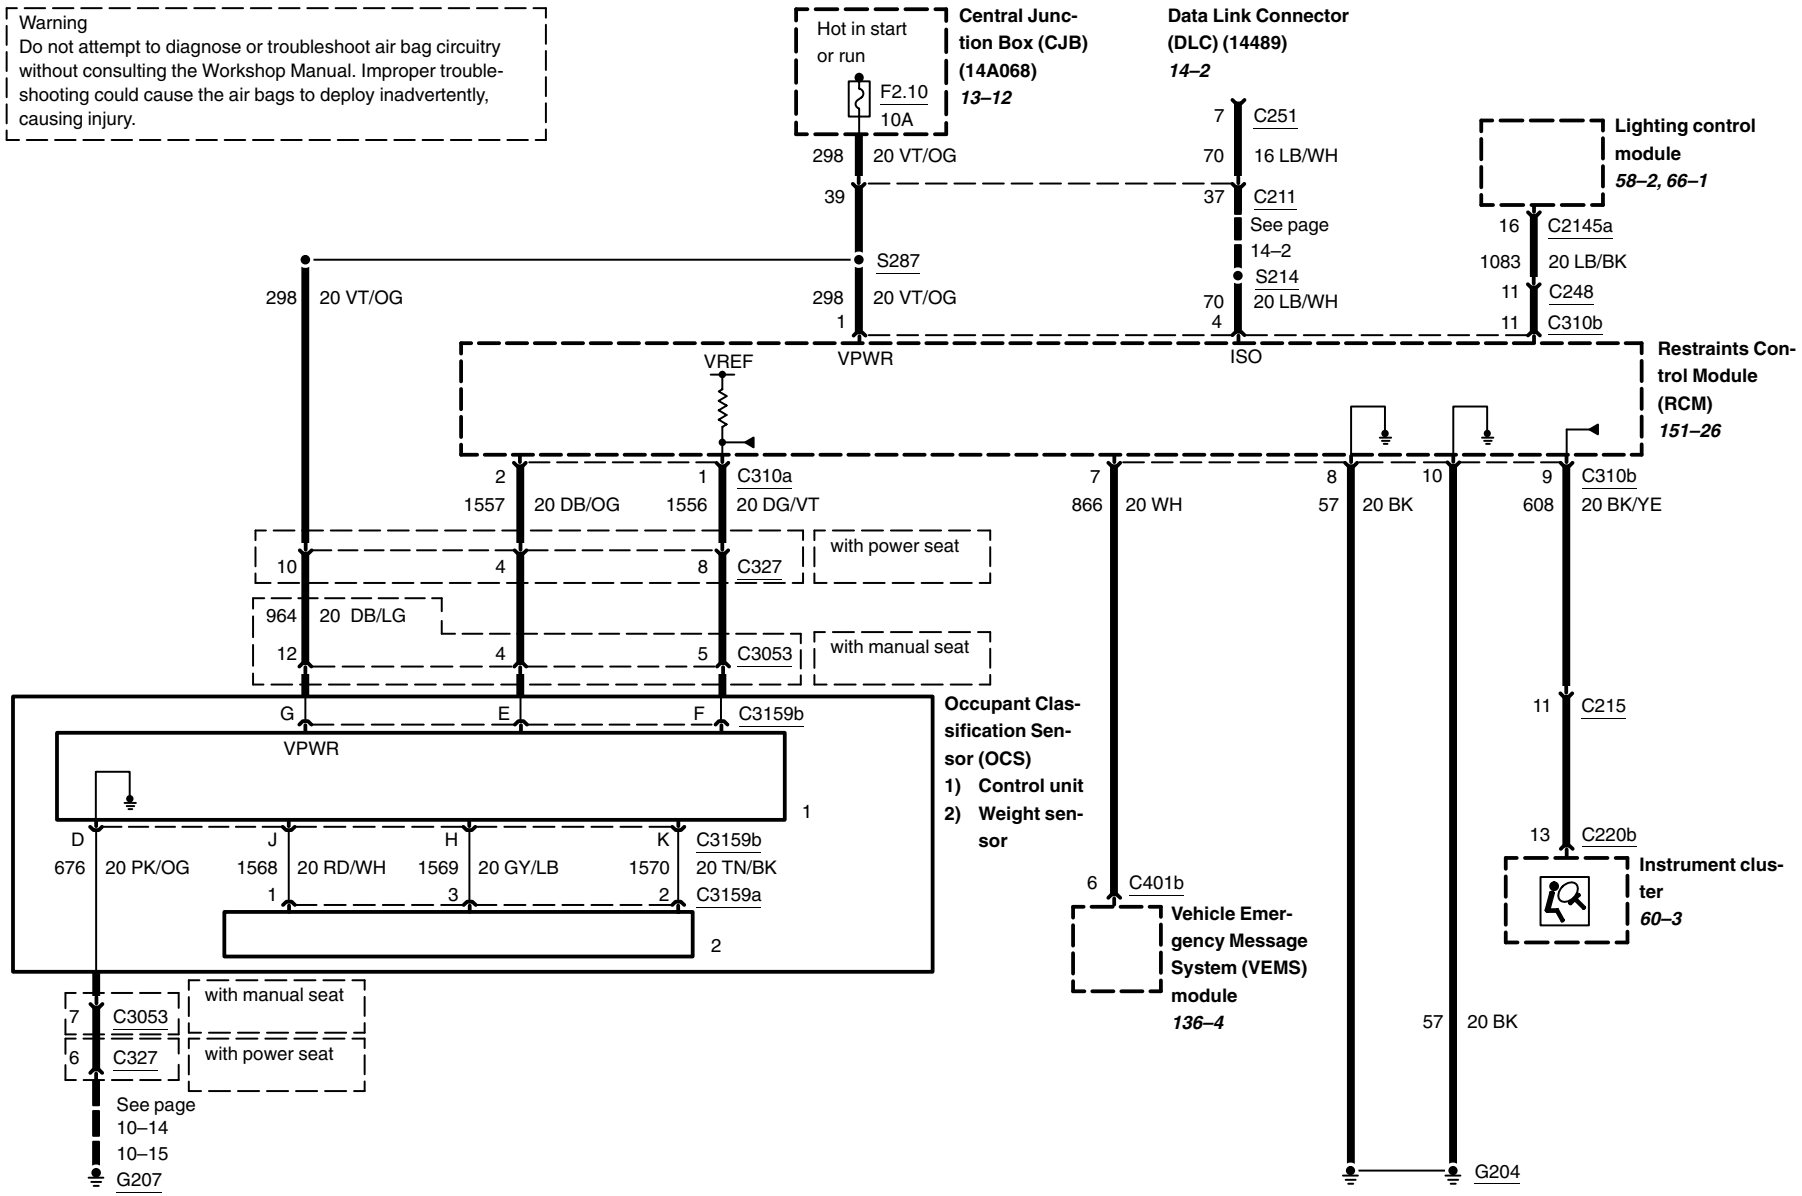
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper trouble-shooting could cause the air bags to deploy inadvertently, causing injury.
Hot in start or run
F2.10
10A
Central Junction Box (CJB) (14A068)
13–12
Data Link Connector (DLC) (14489)
14–2
Lighting control module
58–2, 66–1
298 20 VT/OG
39
S287
298 20 VT/OG
1
VPWR
7 C251
70 16 LB/WH
37 C211
See page 14–2
S214
70 20 LB/WH
4
ISO
16 C2145a
1083 20 LB/BK
11 C248
11 C310b
VREF
Restraints Control Module (RCM)
151–26
2 1557 20 DB/OG
1 1556 20 DG/VT
C310a
7 866 20 WH
8 57 20 BK
10
9 608 20 BK/YE
C310b
10 4 8 C327
with power seat
964 20 DB/LG
12 4 5 C3053
with manual seat
G E F C3159b
VPWR
1
Occupant Classification Sensor (OCS)
1) Control unit
2) Weight sensor
D 676 20 PK/OG
J 1568 20 RD/WH
H 1569 20 GY/LB
K 1570 20 TN/BK
C3159b
1 3 2 C3159a
2
11 C215
13 C220b
Instrument cluster
60–3
6 C401b
Vehicle Emergency Message System (VEMS) module
136–4
57 20 BK
7 C3053
with manual seat
6 C327
with power seat
See page 10–14 10–15
G207
G204