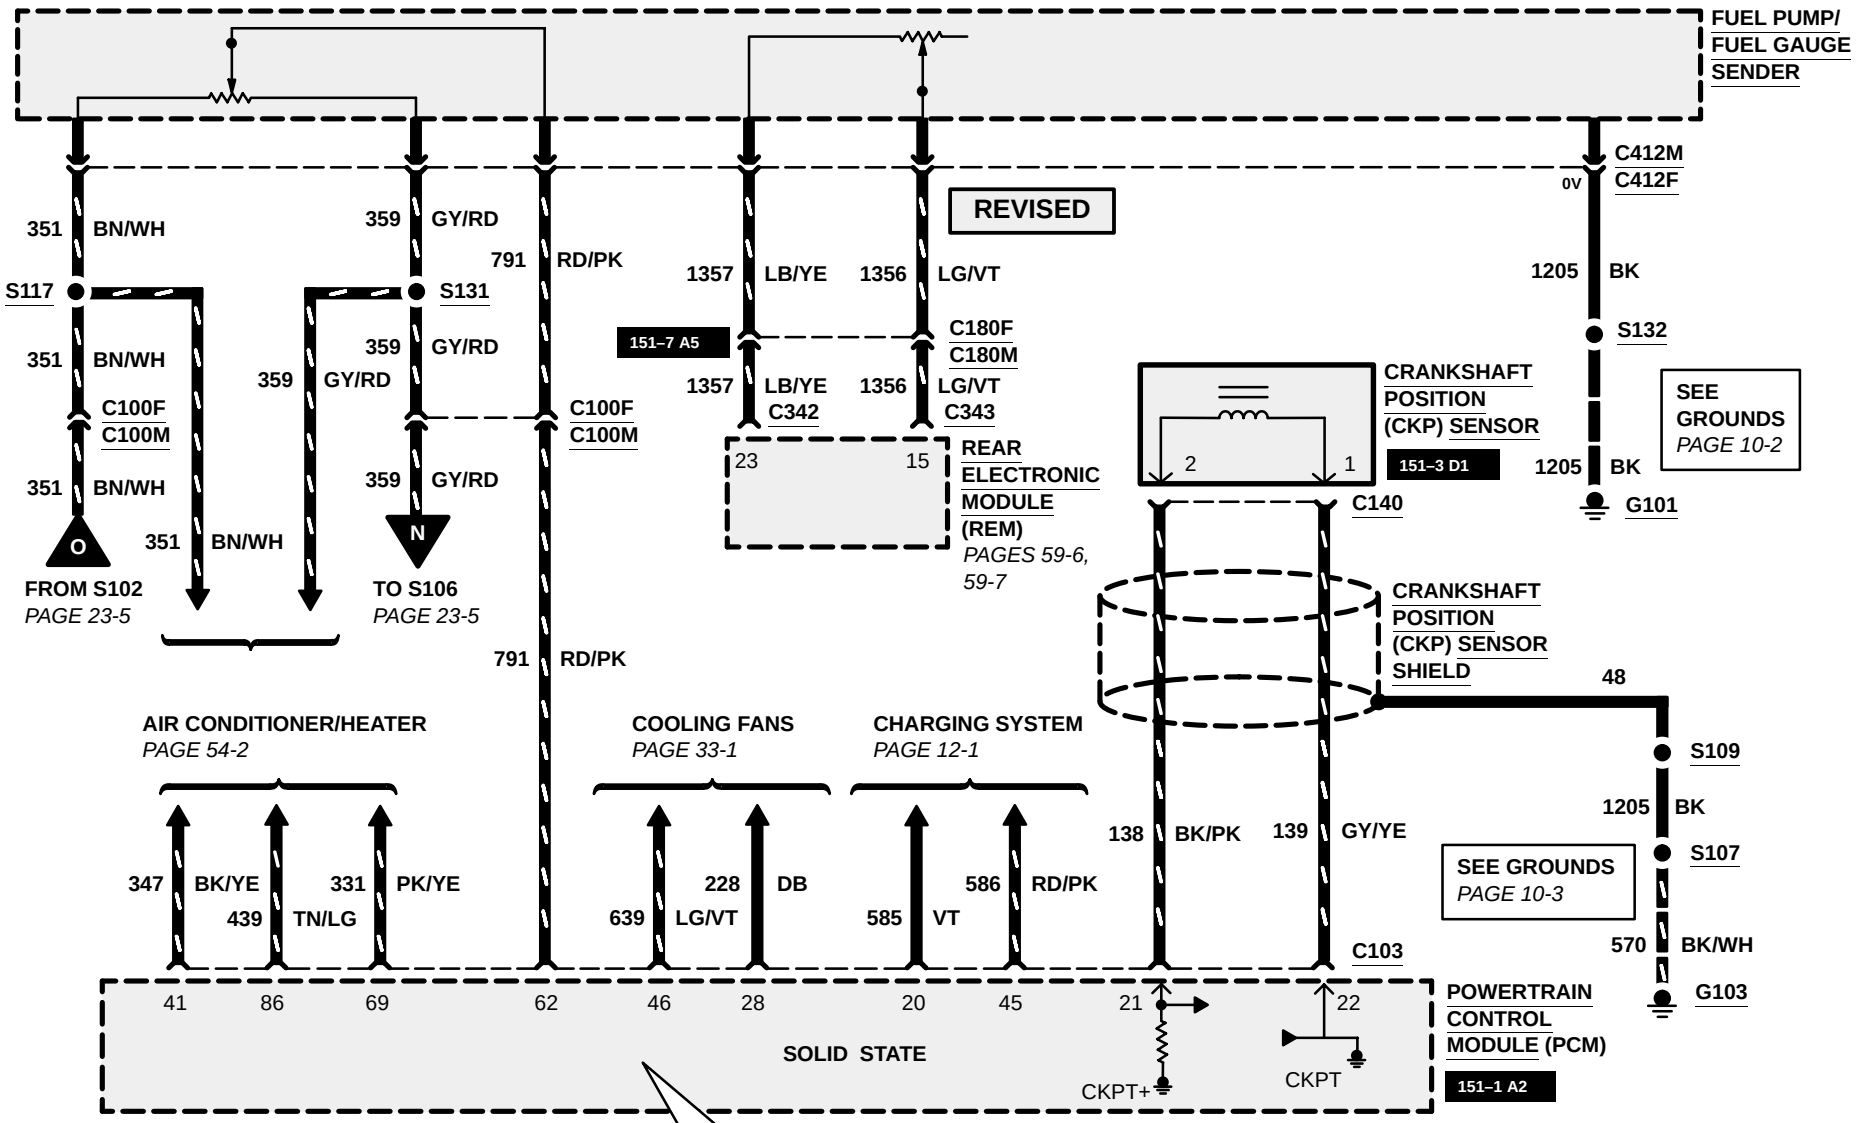

Uses information from various sensors/actuators to determine engine and transmission operating conditions.

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.