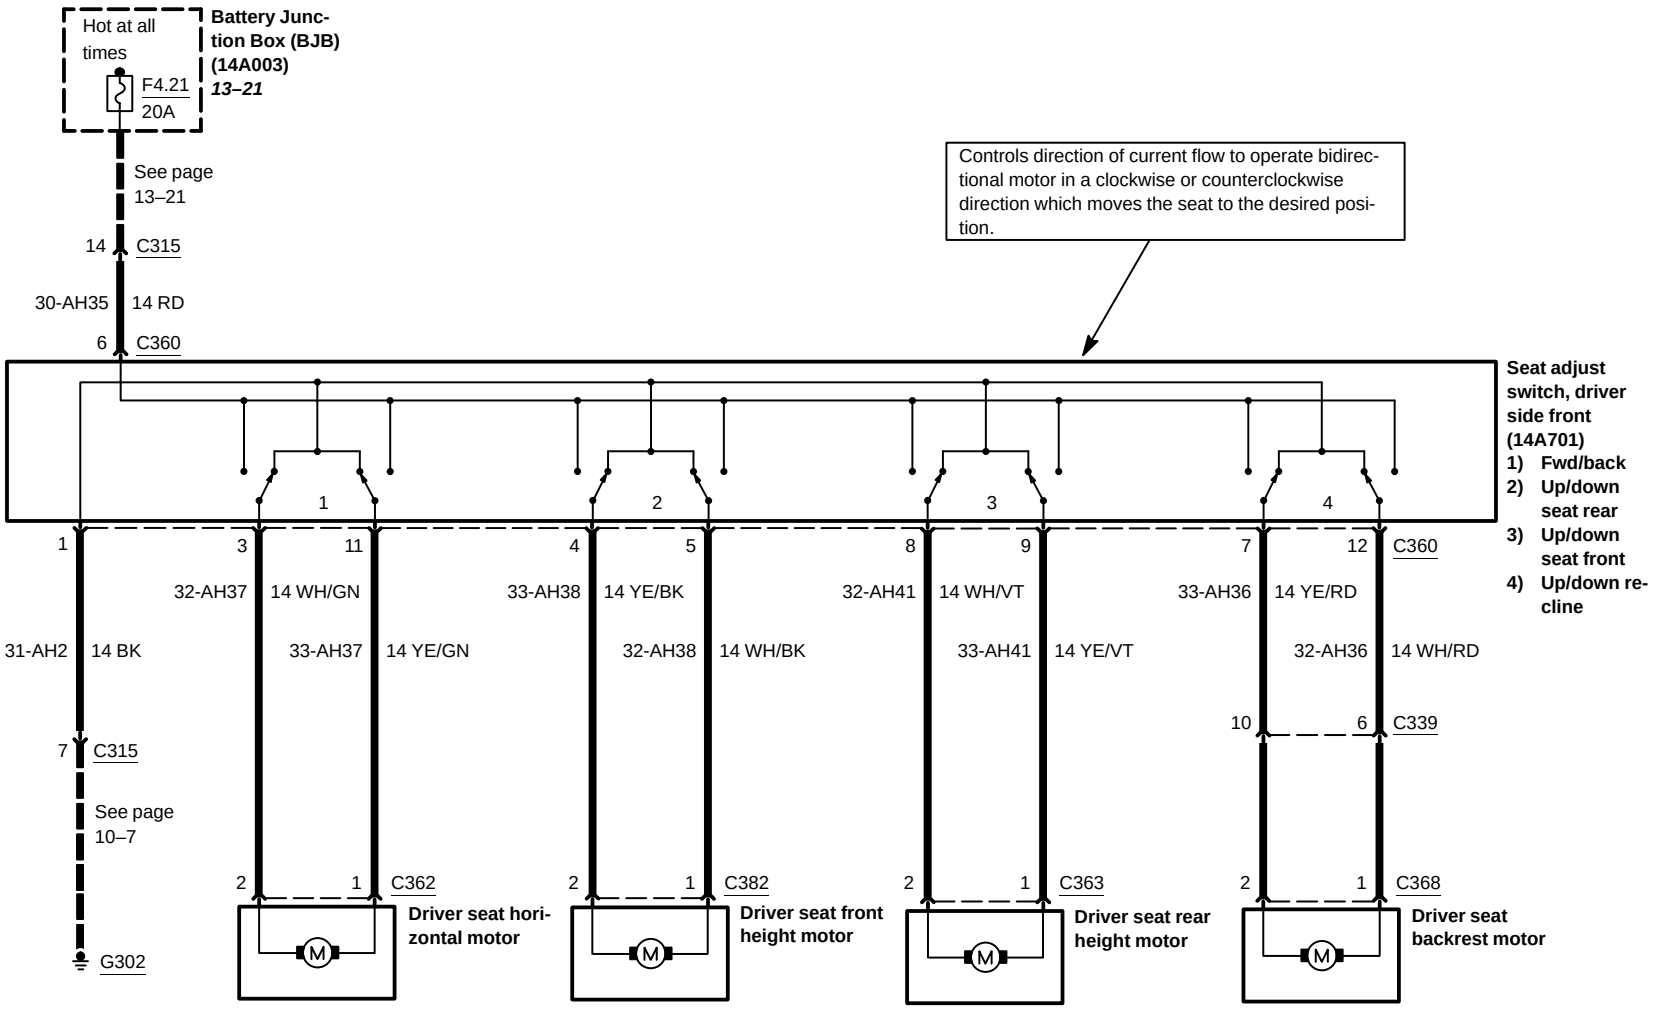
Hot at all times
F4.21
20A
Battery Junction Box (BJB) (14A003)
13–21
See page 13–21
14 C315
30-AH35 14 RD
6 C360
Controls direction of current flow to operate bidirectional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
Seat adjust switch, driver side front (14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
4) Up/down recline
1
2
3
4
1 3 11 32-AH37 14 WH/GN 33-AH37 14 YE/GN
4 5 33-AH38 14 YE/BK 32-AH38 14 WH/BK
8 9 32-AH41 14 WH/VT 33-AH41 14 YE/VT
7 12 C360 33-AH36 14 YE/RD 32-AH36 14 WH/RD
31-AH2 14 BK
7 C315
See page 10–7
G302
10 6 C339
2 1 C362
Driver seat horizontal motor
2 1 C382
Driver seat front height motor
2 1 C363
Driver seat rear height motor
2 1 C368
Driver seat backrest motor
M