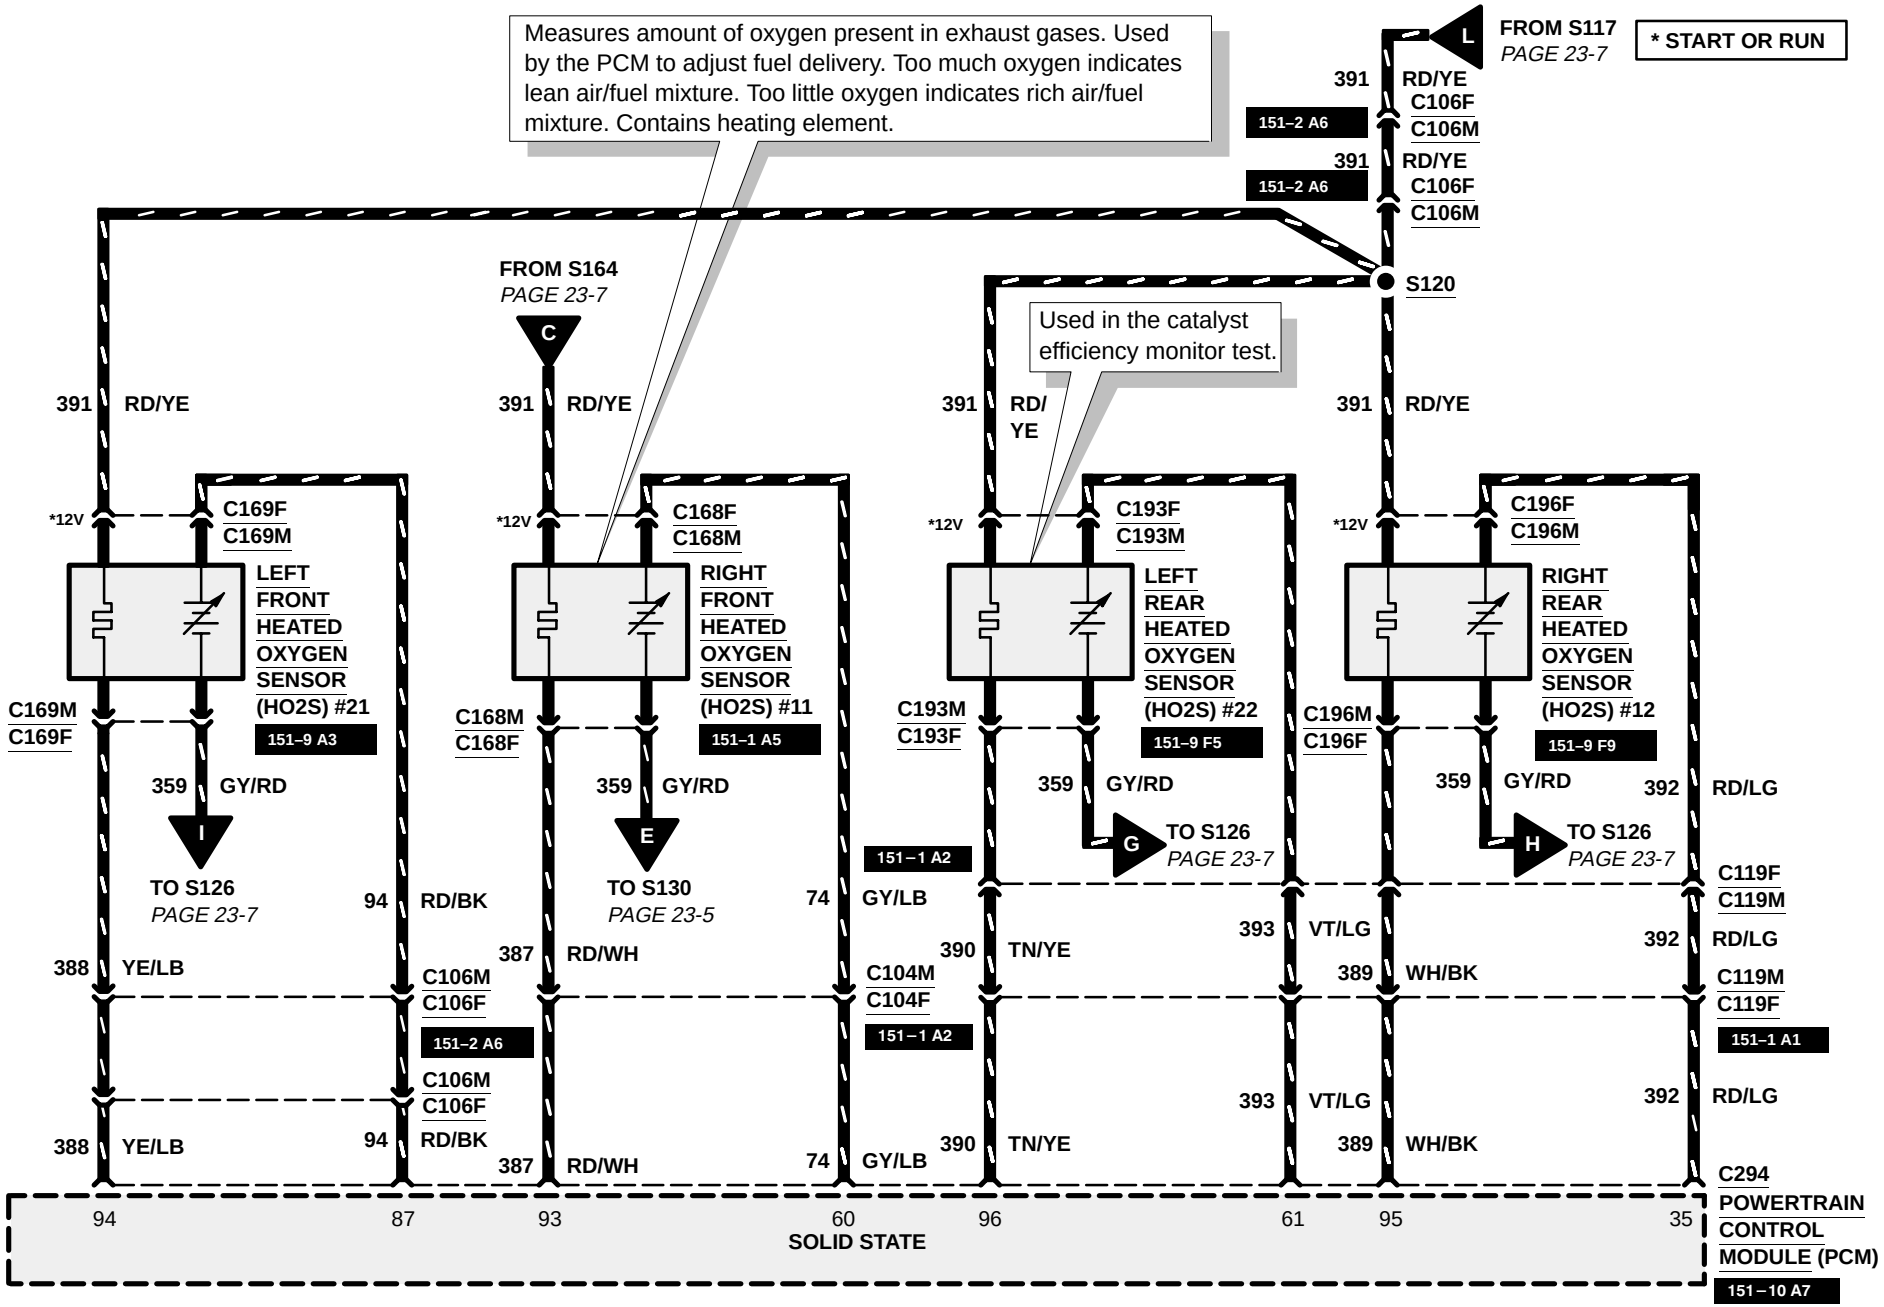
Measures amount of oxygen present in exhaust gases. Used by the PCM to adjust fuel delivery. Too much oxygen indicates lean air/fuel mixture. Too little oxygen indicates rich air/fuel mixture. Contains heating element.
Used in the catalyst efficiency monitor test.
FROM S117
PAGE 23-7
* START OR RUN
391 RD/YE
151–2 A6
C106F
C106M
S120
FROM S164
PAGE 23-7
391 RD/YE
391 RD/YE
391 RD/YE
391 RD/YE
*12V
C169F
C169M
LEFT FRONT HEATED OXYGEN SENSOR (HO2S) #21
151–9 A3
C168F
C168M
RIGHT FRONT HEATED OXYGEN SENSOR (HO2S) #11
151–1 A5
C193F
C193M
LEFT REAR HEATED OXYGEN SENSOR (HO2S) #22
151–9 F5
C196F
C196M
RIGHT REAR HEATED OXYGEN SENSOR (HO2S) #12
151–9 F9
C169M
C169F
C168M
C168F
C193M
C193F
C196M
C196F
359 GY/RD
TO S126
PAGE 23-7
TO S130
PAGE 23-5
TO S126
PAGE 23-7
TO S126
PAGE 23-7
392 RD/LG
94 RD/BK
74 GY/LB
151–1 A2
393 VT/LG
392 RD/LG
C119F
C119M
388 YE/LB
387 RD/WH
390 TN/YE
389 WH/BK
C106M
C106F
151–2 A6
C104M
C104F
151–1 A2
C119M
C119F
151–1 A1
C106M
C106F
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
390 TN/YE
393 VT/LG
389 WH/BK
392 RD/LG
C294
POWERTRAIN CONTROL MODULE (PCM)
94 87 93 60 96 61 95 35
SOLID STATE
151–10 A7