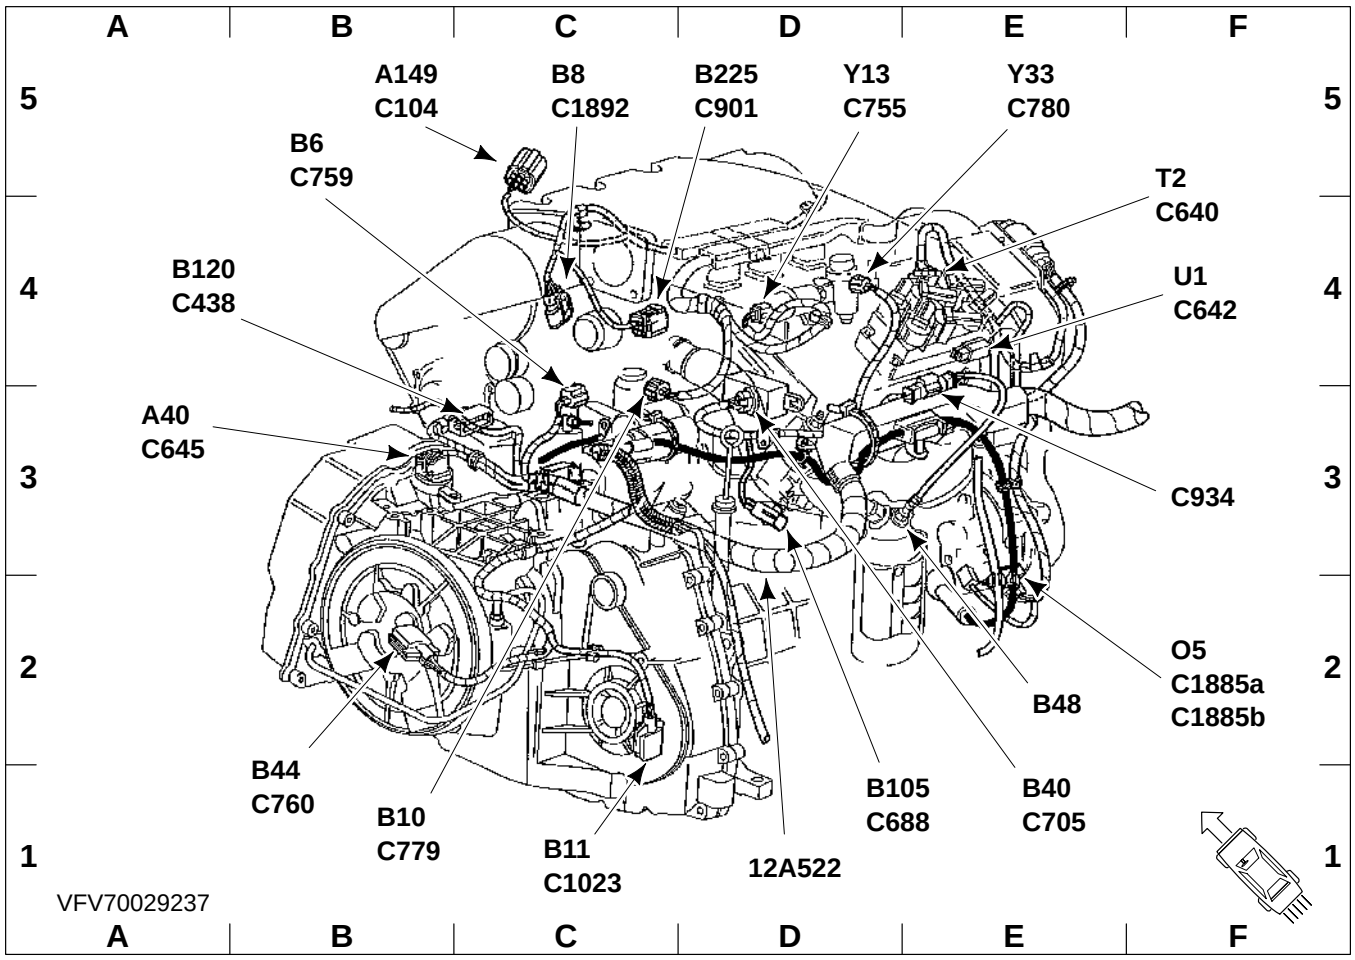

On engine, rear / LH side – Duratec–VE, automatic transmission

12A522 Wiring harness – Engine control ..... D 1
A40 .. Transmission hardware unit ..... A 3
A149 . Inlet manifold runner control (IMRC) module ..... B 5
B6 ... Coolant temperature sensor ..... B 5
B8 ... Throttle Position Sensor (TPS) ..... C 5
B10 .. Engine Coolant Temperature (ECT) sensor ..... B 1
B11 .. Vehicle Speed Sensor (VSS) ..... C 1
B40 .. Exhaust Pressure Transducer (EPT) sensor ..... E 1
B44 .. Turbine shaft speed (TSS) sensor ..... B 1
B48 .. Heated Oxygen Sensor (HO2S) #11 .... E 2
B105 . Knock sensor 1 ..... D 1
B120 . Transmission range sensor ..... A 4
B225 . Fuel rail pressure transducer sensor .... D 5
C104 ..... B 5
C438 ..... A 4
C640 ..... F 4
C642 ..... F 4
C645 ..... A 3
C688 ..... D 1
C705 ..... E 1
C755 ..... D 5
C759 ..... B 5
C760 ..... B 1
C779 ..... B 1
C780 ..... E 5
C901 ..... D 5
C934 ..... F 3
C1023 ..... C 1
C1885a ..... F 2
C1885b ..... F 2
C1892 ..... C 5
O5 ... Generator ..... F 2
T2 ... Ignition transformer ..... F 5
U1 ... Ignition transformer capacitor ..... F 4
Y13 .. Idle speed control valve ..... D 5
Y33 .. Electr. Vacuum Regulator (EVR) solenoid valve ..... E 5