C232

14401

M210
Defrost mode actuator

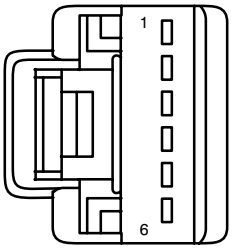

F006179

Pin	Circuit	Circuit Function
1	33-FB5 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB5 (WH/BK)	Sensor signal
4	7-FB5 (YE/BK)	Voltage D.C. supplied at all times (sensor)
5	9-FB5 (BN/YE)	Sensor signal return (reference/ground)
6	32-FB5 (WH/BK)	Switched between: Battery voltage, Ground or Open

C234

14401

M222
Floor mode actuator

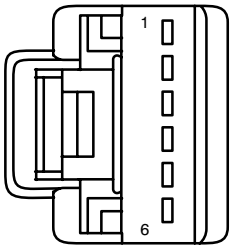

F006179

Pin	Circuit	Circuit Function
1	32-FB6 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB6 (WH/VT)	Sensor signal
4	9-FB6 (BN/WH)	Sensor signal return (reference/ground)
5	7-FB6 (YE/VT)	Voltage D.C. supplied at all times (sensor)
6	33-FB6 (YE/VT)	Switched between: Battery voltage, Ground or Open

C233 GN

14401

B206
In–vehicle temperature sensor

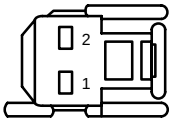

F02307

Pin	Circuit	Circuit Function
1	8-FA48 (WH/GN)	Sensor signal
2	9-FA48 (BN/GN)	Sensor signal return (reference/ground)

C235

14401

B215
Discharge temperature sensor, left



F02056

Pin	Circuit	Circuit Function
1	9-FA47 (BN/GN)	Sensor signal return (reference/ground)
2	8-FA47 (WH/GN)	Sensor signal

C236

14401

M208
Panel mode actuator

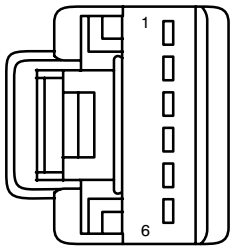

F006179

Pin	Circuit	Circuit Function
1	33-FB7 (YE)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB7 (WH)	Sensor signal
4	7-FB7 (YE)	Voltage D.C. supplied at all times (sensor)
5	9-FB7 (BN)	Sensor signal return (reference/ground)
6	32-FB7 (WH)	Switched between: Battery voltage, Ground or Open