C415 (GY)

12A522

A147
Powertrain control module (PCM)

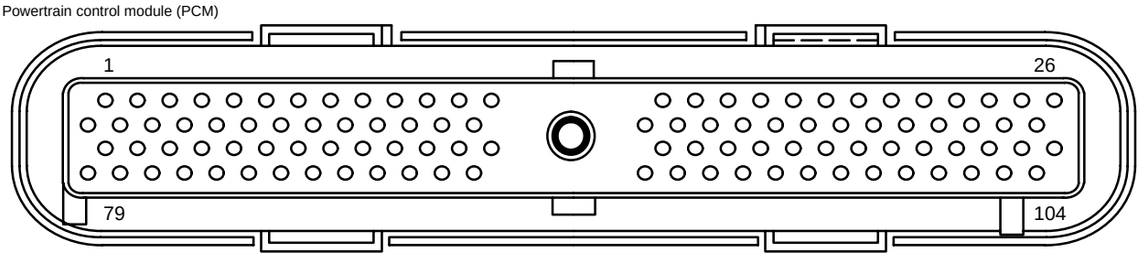

F104001

Pin	Circuit	Circuit Function
1	15S-TA24 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	–	not used
3	8-RJ16 (WH/RD)	Sensor signal
4	15S-TA38A (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	–	not used
6	–	not used
7	15S-TA42 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	15S-TA41 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	8-RJ1 (WH/BK)	Sensor signal
10	–	not used
11	15S-TA40 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
12	91S-RS3 (BK/WH)	Ground, switched
13	29-RE14 (OG/BK)	Module programming signal
14	–	not used
15	5-EG9 (BU/BK)	Data link, bus negative
16	4-EG9 (GY/OG)	Data link, bus positive
17	31S-PA17 (BK/WH)	Ground, switched
18	–	not used

Pin	Circuit	Circuit Function
19	10-GL37 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
20	31S-RL12 (BK/BU)	Ground, switched
21	8-RJ4 (WH/RD)	Sensor signal
22	9-RJ4 (BN/RD)	Sensor signal return (reference/ground)
23	–	not used
24	91-RE8A (BK/YE)	Ground
25	31-RE8 (BK)	Ground
26	31S-RR1 (BK/OG)	Ground, switched
27	31S-BB16 (BK/RD)	Ground, switched
28	8-RE22 (WH/VT)	Sensor signal
29	15S-TA21 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
30	–	not used
31	91S-CE6 (BK/YE)	Ground, switched
	8-CE6 (WH)	Sensor signal
32	9-RJ18 (BN/YE)	Sensor signal return (reference/ground)
33	9-RJ29 (BN/BU)	Sensor signal return (reference/ground)
34	8-TA27 (WH/VT)	Sensor signal
35	8-RJ15 (WH/RD)	Sensor signal
36	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)