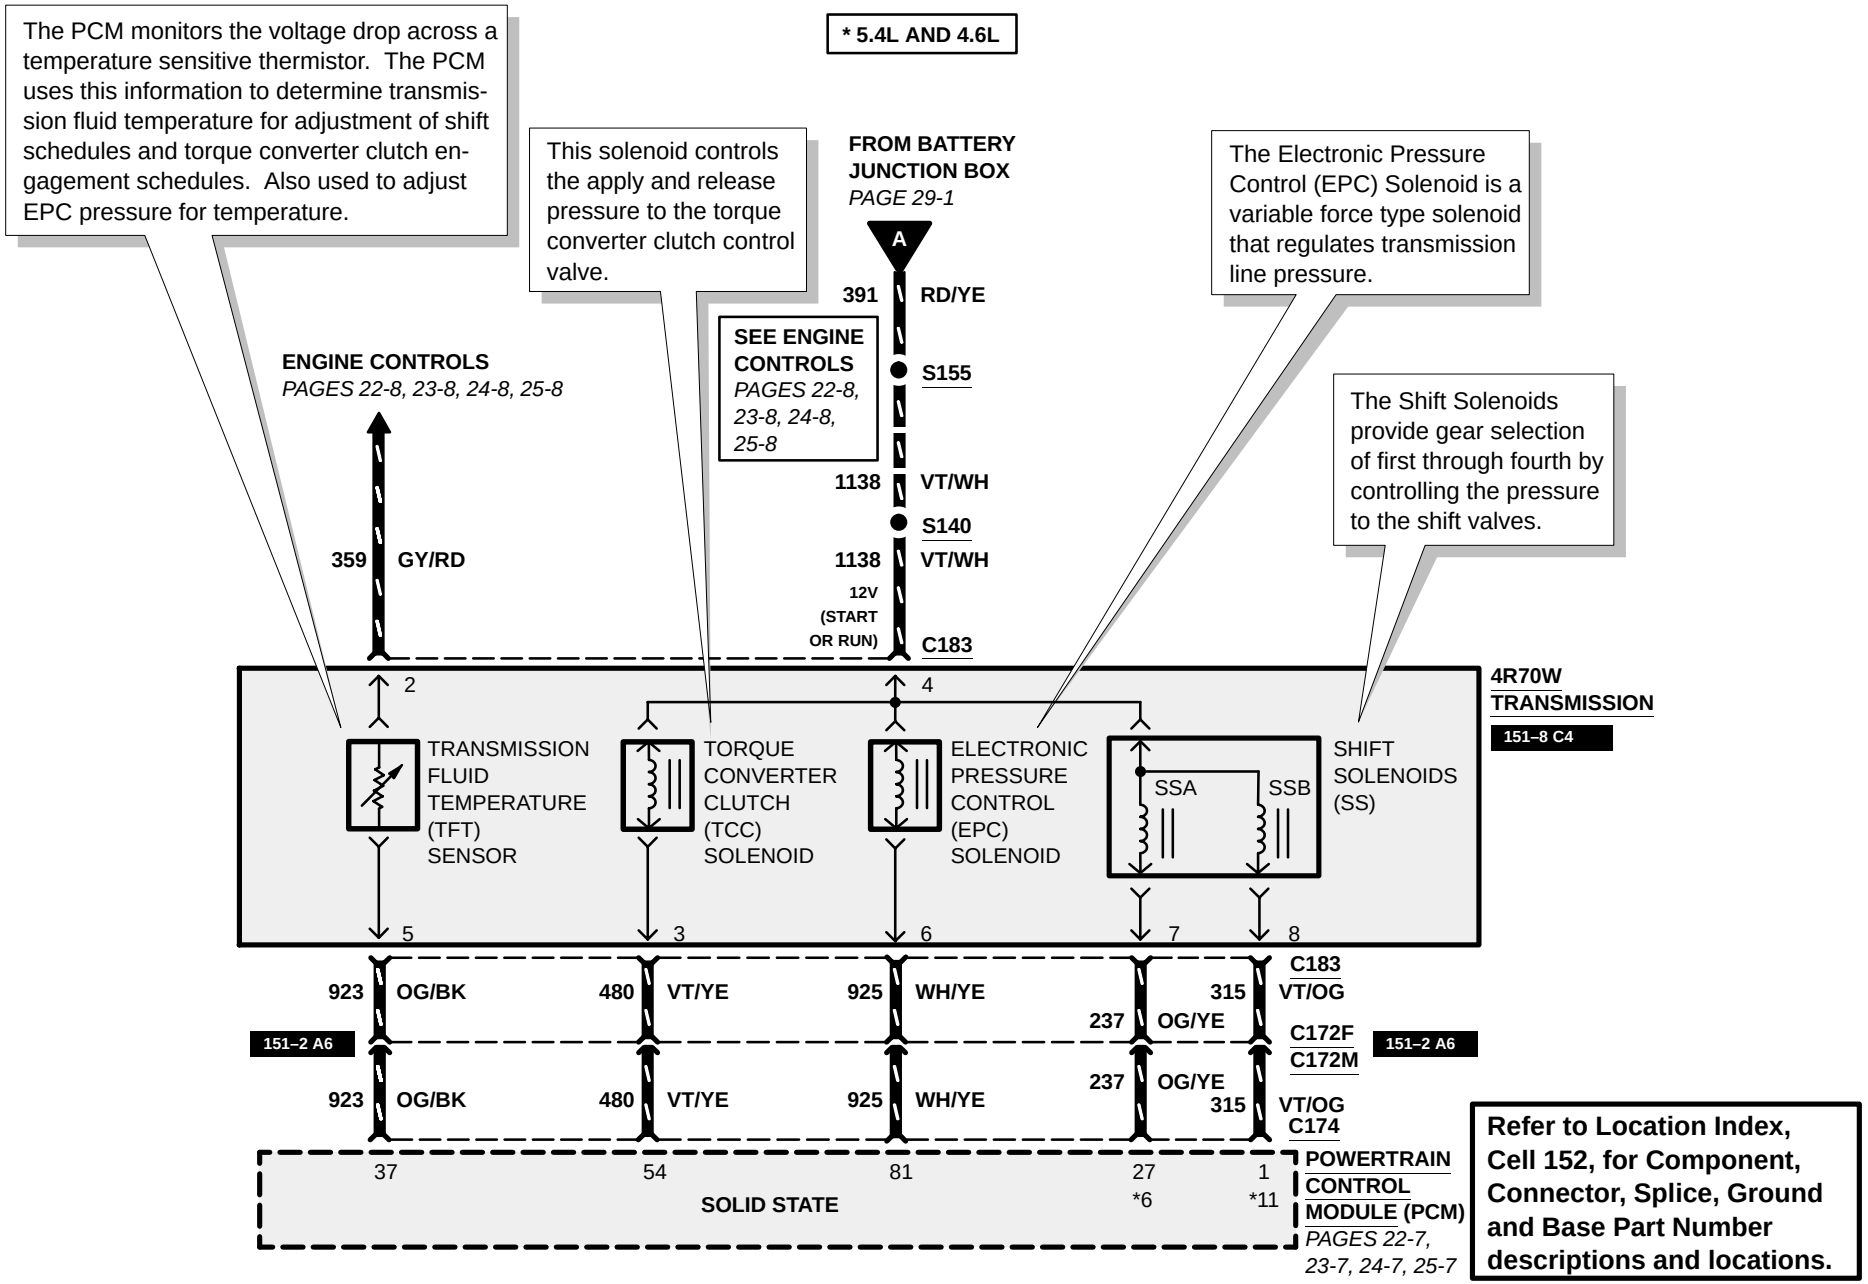
The PCM monitors the voltage drop across a temperature sensitive thermistor. The PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter clutch engagement schedules. Also used to adjust EPC pressure for temperature.
* 5.4L AND 4.6L
This solenoid controls the apply and release pressure to the torque converter clutch control valve.
FROM BATTERY JUNCTION BOX
PAGE 29-1
A
391 RD/YE
SEE ENGINE CONTROLS
PAGES 22-8, 23-8, 24-8, 25-8
S155
1138 VT/WH
S140
1138 VT/WH
12V (START OR RUN)
C183
The Electronic Pressure Control (EPC) Solenoid is a variable force type solenoid that regulates transmission line pressure.
ENGINE CONTROLS
PAGES 22-8, 23-8, 24-8, 25-8
359 GY/RD
The Shift Solenoids provide gear selection of first through fourth by controlling the pressure to the shift valves.
4R70W TRANSMISSION
151–8 C4
2
4
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
SSA
SSB
SHIFT SOLENOIDS (SS)
5
3
6
7
8
923 OG/BK
480 VT/YE
925 WH/YE
237 OG/YE
315 VT/OG
C183
C172F
C172M
151–2 A6
151–2 A6
923 OG/BK
480 VT/YE
925 WH/YE
237 OG/YE
315 VT/OG
C174
37
54
81
27 *6
1 *11
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-7, 23-7, 24-7, 25-7
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.