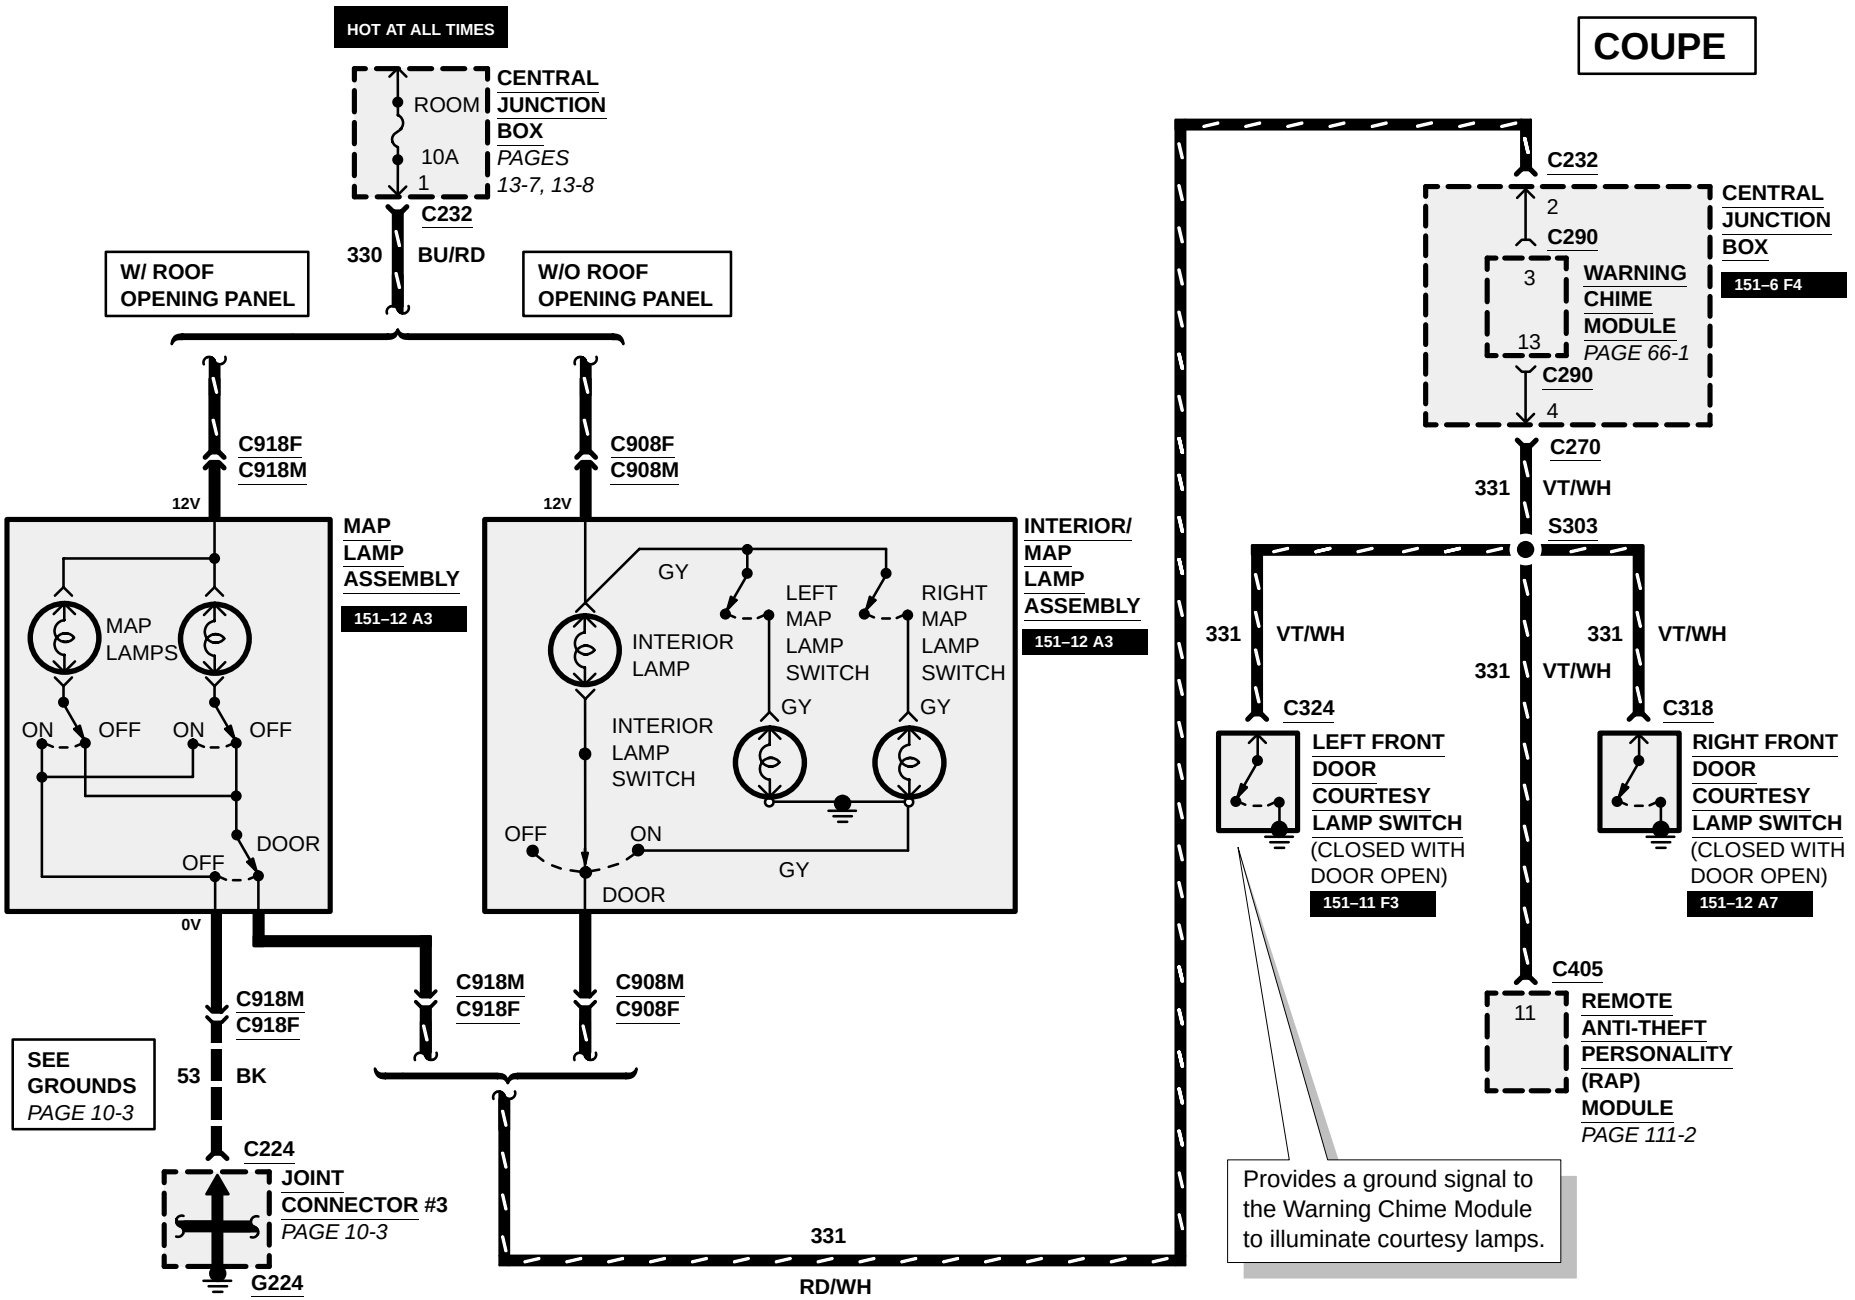
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGES 13-7, 13-8
ROOM
10A
1
C232
330
BU/RD
W/ ROOF OPENING PANEL
W/O ROOF OPENING PANEL
C918F
C918M
C908F
C908M
12V
MAP LAMP ASSEMBLY
151–12 A3
INTERIOR/ MAP LAMP ASSEMBLY
151–12 A3
MAP LAMPS
ON
OFF
ON
OFF
DOOR
OFF
GY
INTERIOR LAMP
LEFT MAP LAMP SWITCH
RIGHT MAP LAMP SWITCH
INTERIOR LAMP SWITCH
OFF
ON
DOOR
0V
C918M
C918F
C908M
C908F
SEE GROUNDS PAGE 10-3
53
BK
C224
JOINT CONNECTOR #3
PAGE 10-3
G224
331
RD/WH
COUPE
C232
2
C290
3
WARNING CHIME MODULE
PAGE 66-1
13
C290
4
CENTRAL JUNCTION BOX
151–6 F4
C270
331
VT/WH
S303
331
VT/WH
331
VT/WH
331
VT/WH
C324
LEFT FRONT DOOR COURTESY LAMP SWITCH
(CLOSED WITH DOOR OPEN)
151–11 F3
C318
RIGHT FRONT DOOR COURTESY LAMP SWITCH
(CLOSED WITH DOOR OPEN)
151–12 A7
C405
11
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 111-2
Provides a ground signal to the Warning Chime Module to illuminate courtesy lamps.