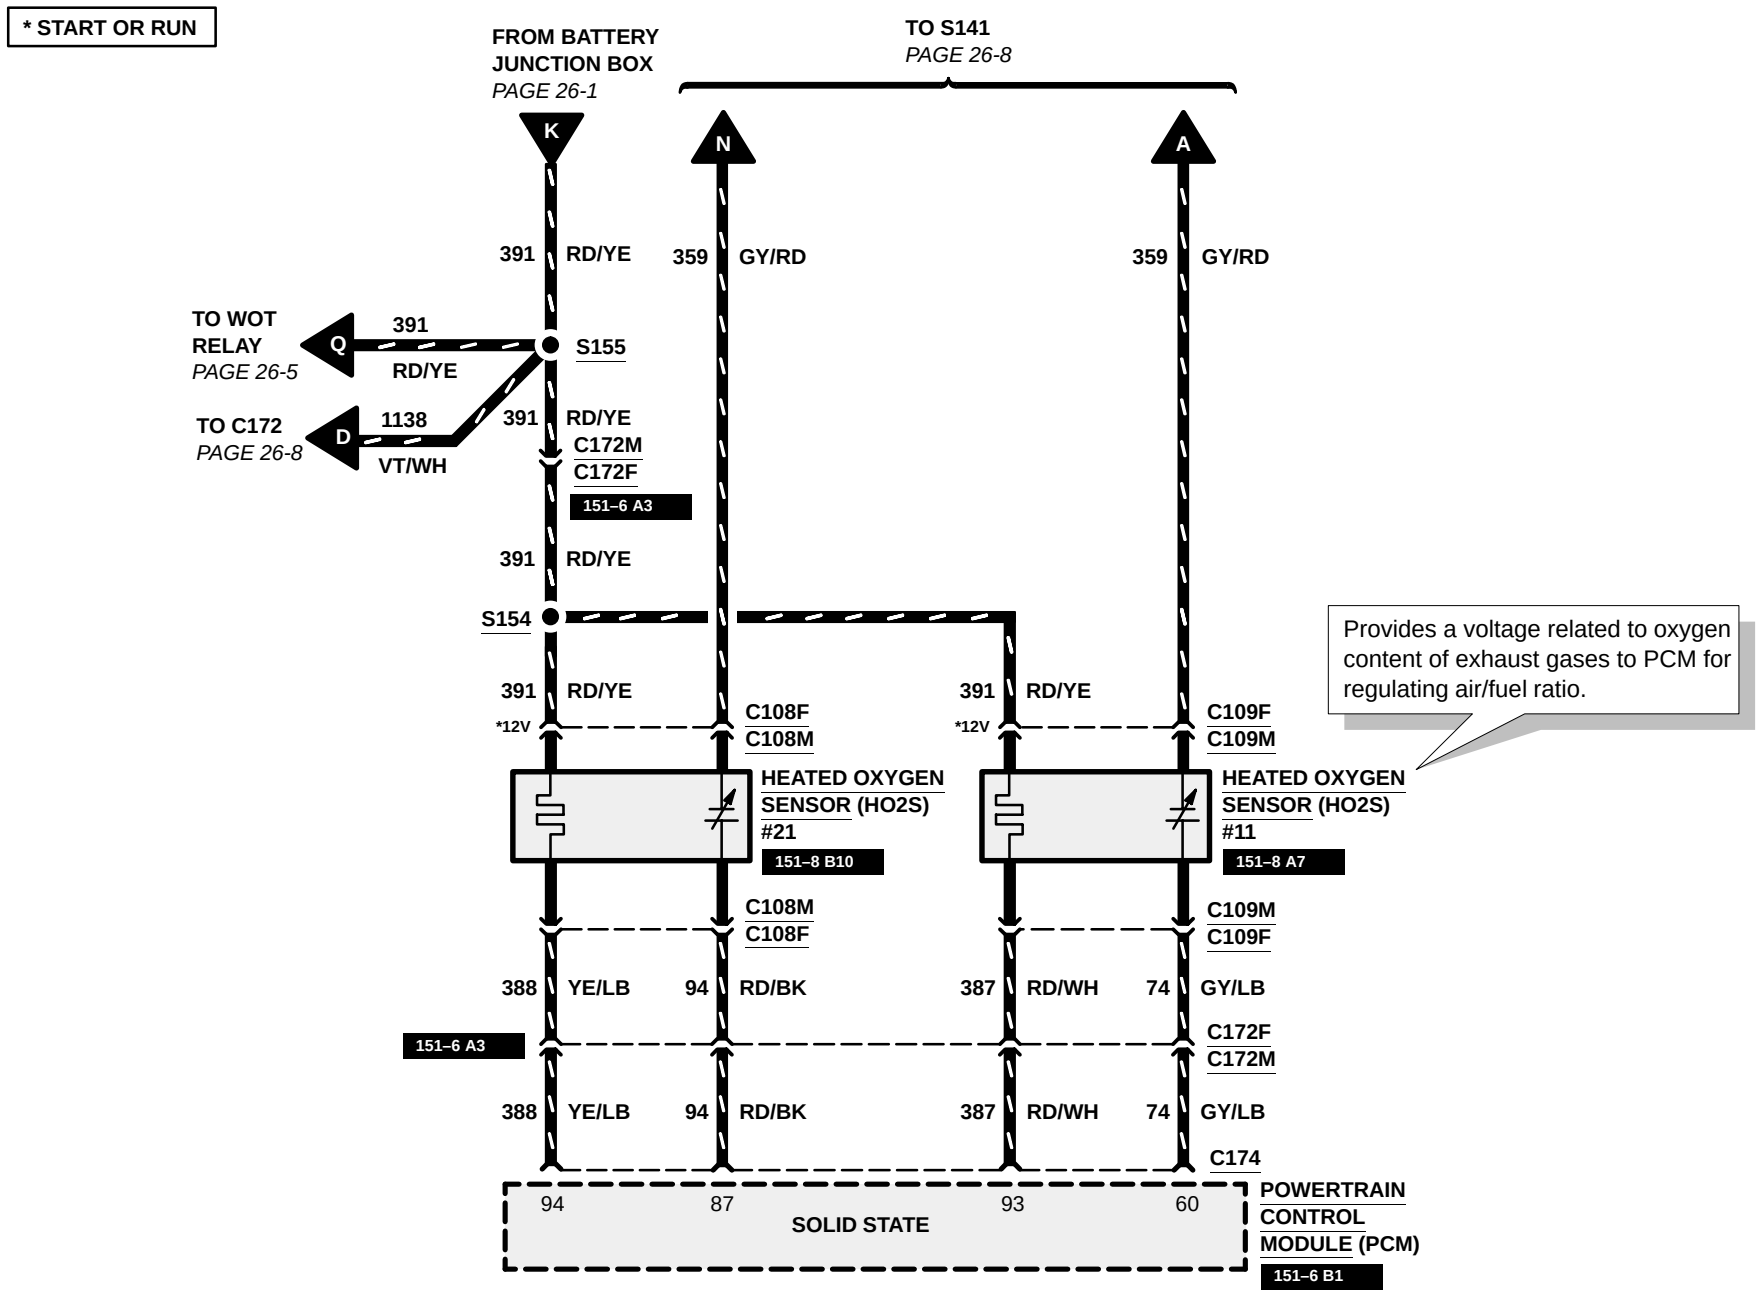
* START OR RUN
FROM BATTERY JUNCTION BOX
PAGE 26-1
TO S141
PAGE 26-8
K
N
A
391 RD/YE
359 GY/RD
359 GY/RD
TO WOT RELAY
PAGE 26-5
Q
391
RD/YE
S155
TO C172
PAGE 26-8
D
1138
VT/WH
391 RD/YE
C172M
C172F
151–6 A3
391 RD/YE
S154
391 RD/YE
*12V
C108F
C108M
391 RD/YE
*12V
C109F
C109M
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
HEATED OXYGEN SENSOR (HO2S) #21
151–8 B10
HEATED OXYGEN SENSOR (HO2S) #11
151–8 A7
C108M
C108F
C109M
C109F
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
151–6 A3
C172F
C172M
388 YE/LB
94 RD/BK
387 RD/WH
74 GY/LB
C174
94
87
93
60
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–6 B1