C701

14A005

N111
Window adjust
switch, left rear

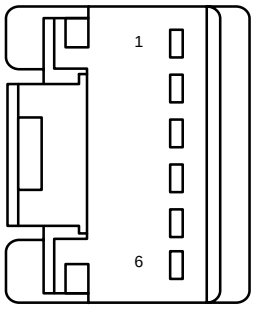

F06163

Pin	Circuit	Circuit Function
1	8-AJ14A (WH/BU)	Sensor signal
2	10-AJ14A (GY/VT)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ14A (YE/BU)	Voltage D.C. supplied at all times (sensor)
4	31-LH16 (BK/OG)	Ground
5	–	not used
6	29S-LH16 (OG)	Voltage supplied at all times (overload protected), Switched

C702

14633

Y17
Speaker, left rear

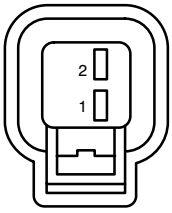

F02069

Pin	Circuit	Circuit Function
1	8-MD11 (WH/VT)	Sensor signal
2	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)

C703

14633

M116
Power window motor, left rear

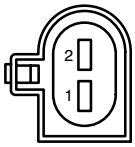

F02065

Pin	Circuit	Circuit Function
1	35-AJ13 (VT/BU)	Switched between: Battery voltage, Ground or Open
2	34-AJ13 (BU/RD)	Switched between: Battery voltage, Ground or Open

C704

14633

M64
Door lock actuator, left rear

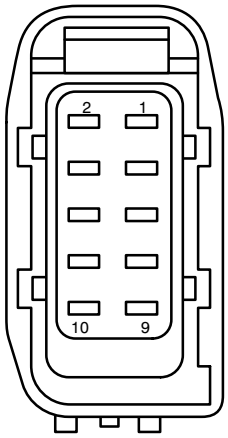

F16030

Pin	Circuit	Circuit Function
1	–	not used
2	33-AA15 (YE/GN)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	–	not used
5	–	not used
6	31-AA58D (BK)	Ground
7	–	not used
8	31S-GL12 (BK/OG)	Ground, Switched
9	–	not used
10	32-AA16 (WH/BK)	Switched between: Battery voltage, Ground or Open