3.9L -11

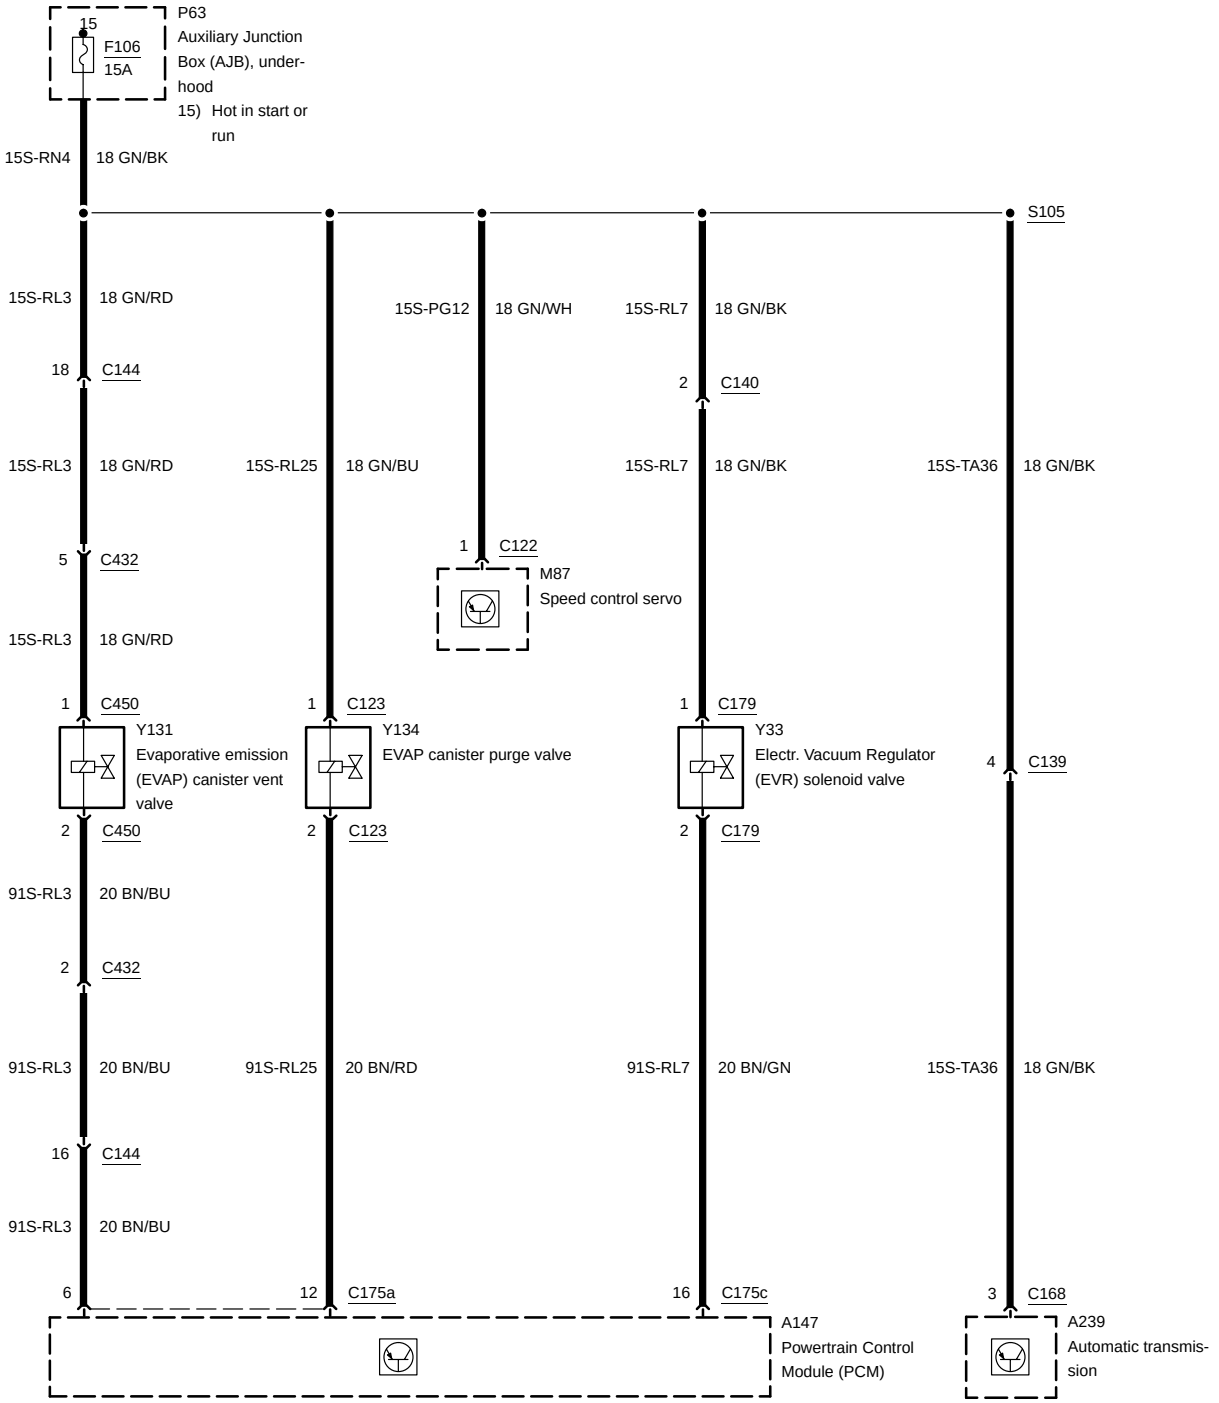
15
F106
15A
P63
Auxiliary Junction Box (AJB), under-hood
15) Hot in start or run
15S-RN4 18 GN/BK
S105
15S-RL3 18 GN/RD
15S-PG12 18 GN/WH
15S-RL7 18 GN/BK
18 C144
2 C140
15S-RL3 18 GN/RD
15S-RL25 18 GN/BU
15S-RL7 18 GN/BK
15S-TA36 18 GN/BK
1 C122
M87
Speed control servo
5 C432
15S-RL3 18 GN/RD
1 C450
1 C123
1 C179
Y131
Evaporative emission (EVAP) canister vent valve
Y134
EVAP canister purge valve
Y33
Electr. Vacuum Regulator (EVR) solenoid valve
4 C139
2 C450
2 C123
2 C179
91S-RL3 20 BN/BU
2 C432
91S-RL3 20 BN/BU
91S-RL25 20 BN/RD
91S-RL7 20 BN/GN
15S-TA36 18 GN/BK
16 C144
91S-RL3 20 BN/BU
6
12 C175a
16 C175c
3 C168
A147
Powertrain Control Module (PCM)
A239
Automatic transmission