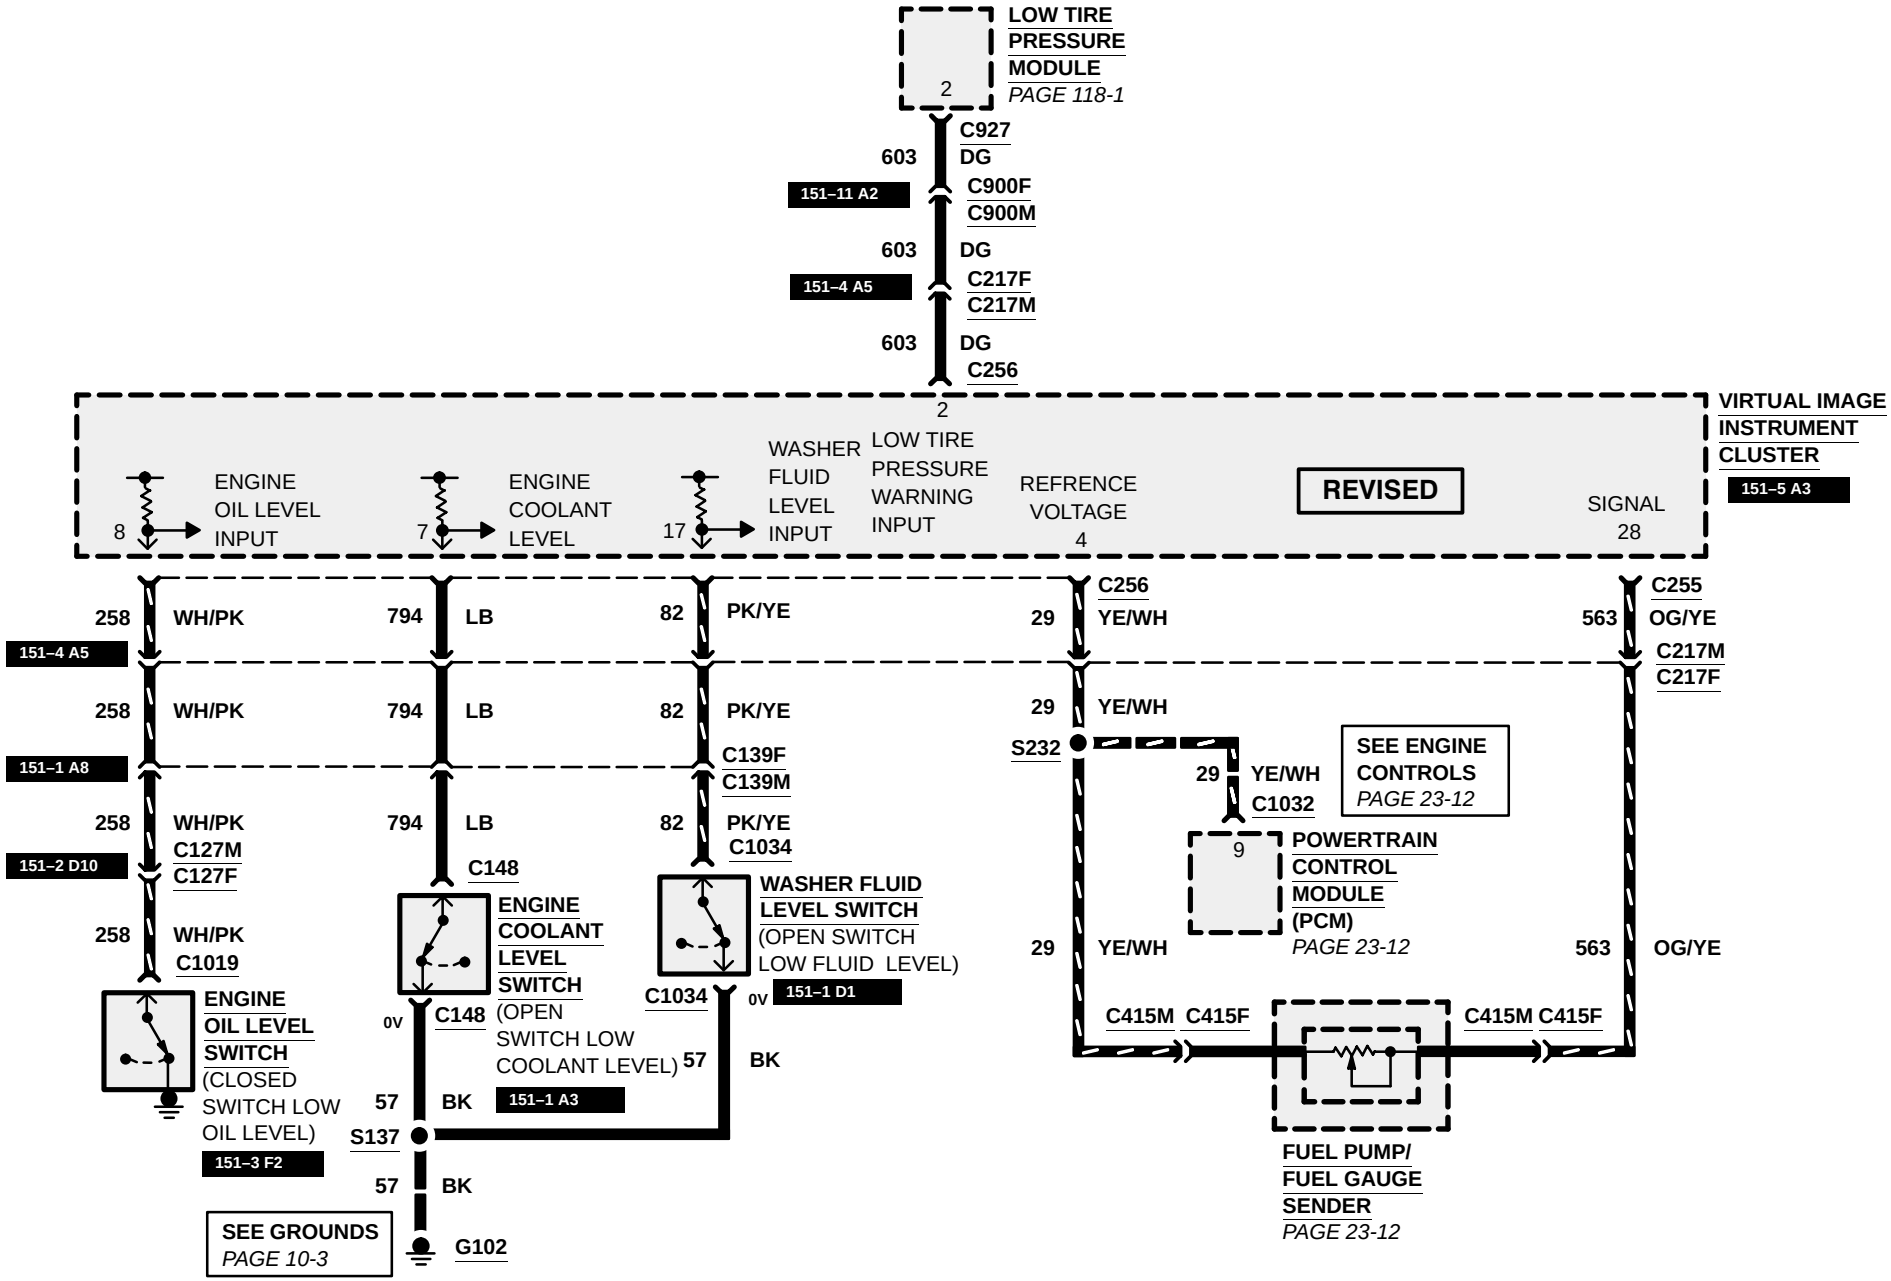
LOW TIRE PRESSURE MODULE
PAGE 118-1
2
C927
603 DG
151–11 A2
C900F
C900M
603 DG
151–4 A5
C217F
C217M
603 DG
C256
2
VIRTUAL IMAGE INSTRUMENT CLUSTER
151–5 A3
8 ENGINE OIL LEVEL INPUT
7 ENGINE COOLANT LEVEL
17 WASHER FLUID LEVEL INPUT
LOW TIRE PRESSURE WARNING INPUT
REFRENCE VOLTAGE 4
REVISED
SIGNAL 28
258 WH/PK
794 LB
82 PK/YE
C256
29 YE/WH
563 OG/YE
C255
C217M
C217F
151–4 A5
151–1 A8
C139F
C139M
C1034
151–2 D10
C127M
C127F
C1019
C148
ENGINE COOLANT LEVEL SWITCH (OPEN SWITCH LOW COOLANT LEVEL)
WASHER FLUID LEVEL SWITCH (OPEN SWITCH LOW FLUID LEVEL)
151–1 D1
0V
57 BK
151–1 A3
S137
ENGINE OIL LEVEL SWITCH (CLOSED SWITCH LOW OIL LEVEL)
151–3 F2
S232
SEE ENGINE CONTROLS
PAGE 23-12
C1032
9
POWERTRAIN CONTROL MODULE (PCM)
PAGE 23-12
C415M C415F
FUEL PUMP/ FUEL GAUGE SENDER
PAGE 23-12
SEE GROUNDS
PAGE 10-3
G102