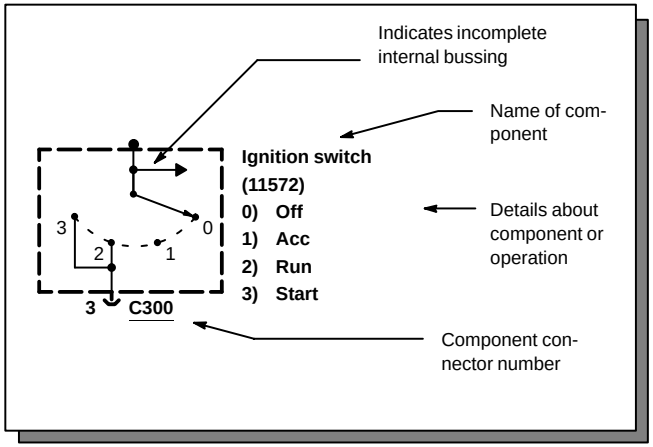
Indicates incomplete internal bussing
Name of component
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
Details about component or operation
3
C300
Component connector number

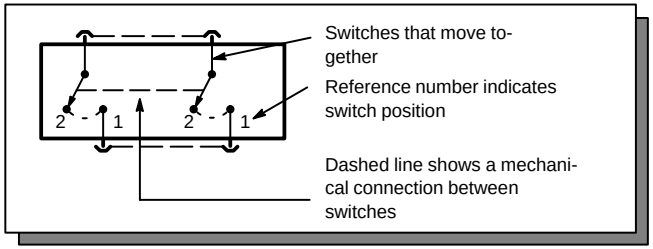
Switches that move together
Reference number indicates switch position
Dashed line shows a mechanical connection between switches

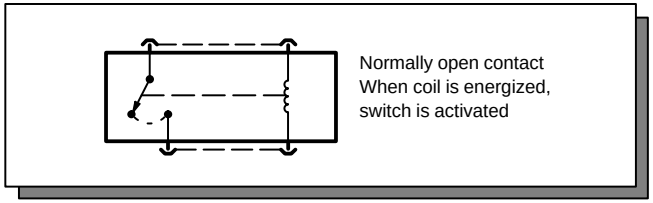
Normally open contact
When coil is energized, switch is activated

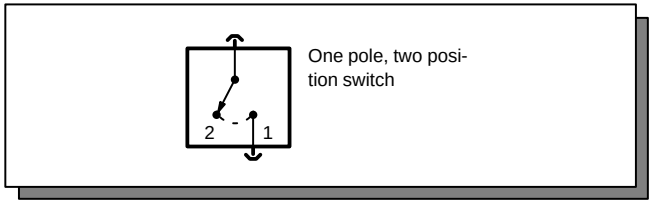
One pole, two position switch

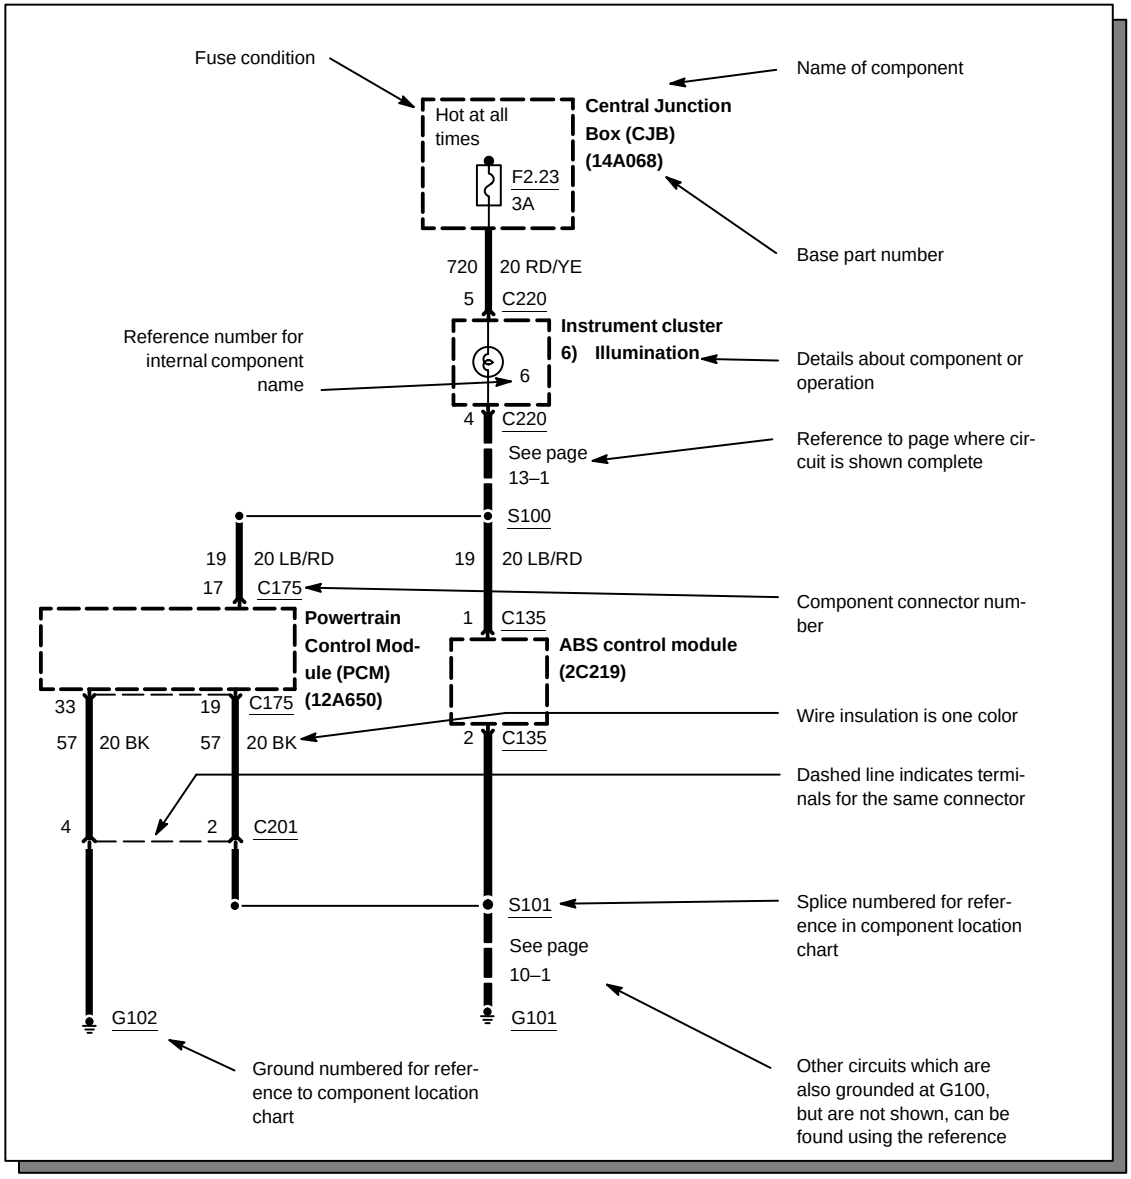
Fuse condition
Name of component
Hot at all times
Central Junction Box (CJB)
(14A068)
F2.23
3A
Base part number
720
20 RD/YE
5
C220
Instrument cluster
6) Illumination
Reference number for internal component name
Details about component or operation
6
4
C220
See page 13–1
Reference to page where circuit is shown complete
S100
19
20 LB/RD
19
20 LB/RD
17
C175
Component connector number
1
C135
Powertrain Control Module (PCM)
(12A650)
ABS control module
(2C219)
33
19
C175
57
20 BK
57
20 BK
2
C135
Wire insulation is one color
Dashed line indicates terminals for the same connector
4
2
C201
S101
Splice numbered for reference in component location chart
See page 10–1
G102
G101
Ground numbered for reference to component location chart
Other circuits which are also grounded at G100, but are not shown, can be found using the reference