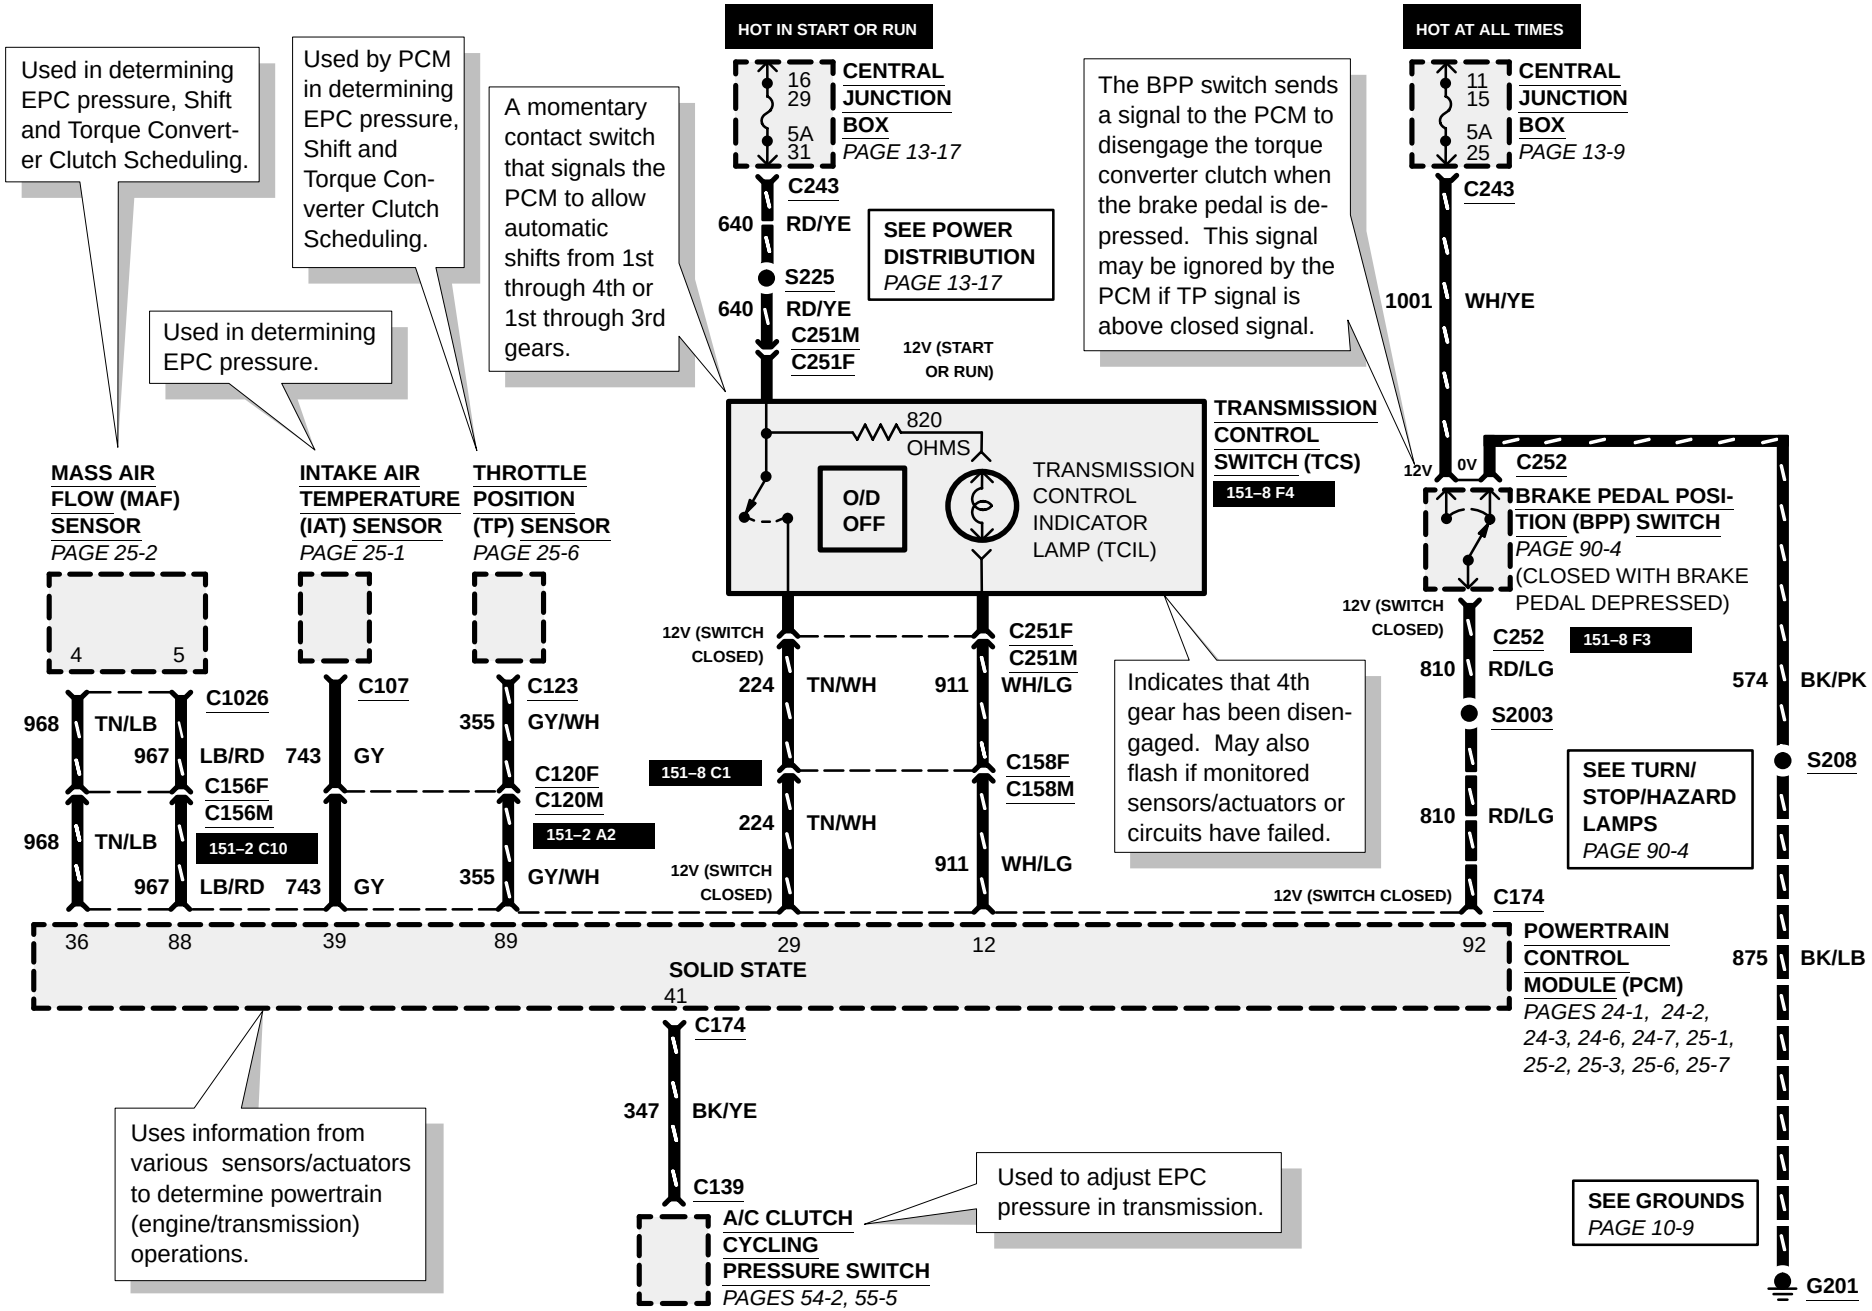
HOT IN START OR RUN
HOT AT ALL TIMES
Used in determining EPC pressure, Shift and Torque Converter Clutch Scheduling.
Used by PCM in determining EPC pressure, Shift and Torque Converter Clutch Scheduling.
A momentary contact switch that signals the PCM to allow automatic shifts from 1st through 4th or 1st through 3rd gears.
Used in determining EPC pressure.
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed signal.
CENTRAL JUNCTION BOX
PAGE 13-17
16
29
5A
31
C243
640 RD/YE
SEE POWER DISTRIBUTION
PAGE 13-17
S225
640 RD/YE
C251M
C251F
12V (START OR RUN)
CENTRAL JUNCTION BOX
PAGE 13-9
11
15
5A
25
C243
1001 WH/YE
820 OHMS
O/D OFF
TRANSMISSION CONTROL INDICATOR LAMP (TCIL)
TRANSMISSION CONTROL SWITCH (TCS)
151–8 F4
12V
0V
C252
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-4
(CLOSED WITH BRAKE PEDAL DEPRESSED)
12V (SWITCH CLOSED)
C252
151–8 F3
810 RD/LG
574 BK/PK
S2003
S208
MASS AIR FLOW (MAF) SENSOR
PAGE 25-2
INTAKE AIR TEMPERATURE (IAT) SENSOR
PAGE 25-1
THROTTLE POSITION (TP) SENSOR
PAGE 25-6
4
5
C1026
968 TN/LB
967 LB/RD
C156F
C156M
968 TN/LB
151–2 C10
967 LB/RD
C107
743 GY
743 GY
C123
355 GY/WH
C120F
C120M
151–2 A2
355 GY/WH
12V (SWITCH CLOSED)
224 TN/WH
C251F
C251M
911 WH/LG
151–8 C1
C158F
C158M
224 TN/WH
911 WH/LG
12V (SWITCH CLOSED)
Indicates that 4th gear has been disengaged. May also flash if monitored sensors/actuators or circuits have failed.
SEE TURN/ STOP/HAZARD LAMPS
PAGE 90-4
810 RD/LG
12V (SWITCH CLOSED)
C174
36
88
39
89
29
12
92
SOLID STATE
41
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-1, 24-2, 24-3, 24-6, 24-7, 25-1, 25-2, 25-3, 25-6, 25-7
875 BK/LB
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.
C174
347 BK/YE
C139
A/C CLUTCH CYCLING PRESSURE SWITCH
PAGES 54-2, 55-5
Used to adjust EPC pressure in transmission.
SEE GROUNDS
PAGE 10-9
G201