2.3L

-3

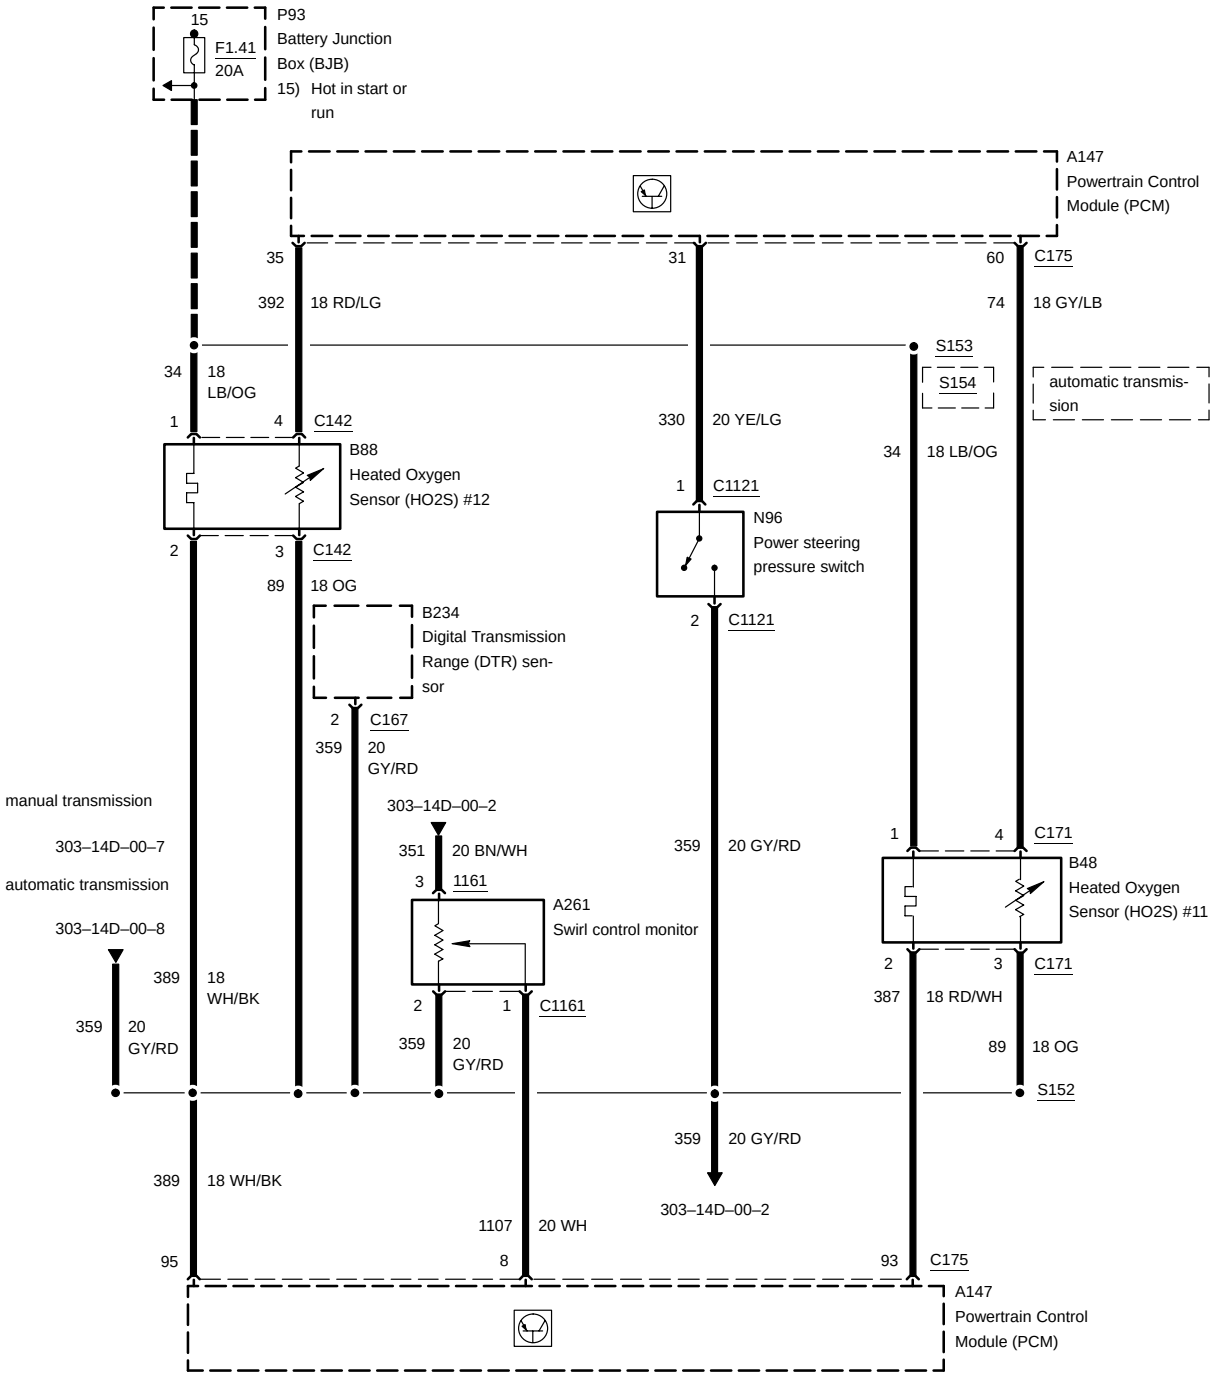
15
F1.41
20A
P93
Battery Junction
Box (BJB)
15) Hot in start or
run
A147
Powertrain Control
Module (PCM)
35
392
18 RD/LG
31
330
20 YE/LG
60
C175
74
18 GY/LB
S153
S154
automatic transmis-
sion
34
18
LB/OG
1
4
C142
B88
Heated Oxygen
Sensor (HO2S) #12
2
3
C142
89
18 OG
1
C1121
N96
Power steering
pressure switch
2
C1121
34
18 LB/OG
B234
Digital Transmission
Range (DTR) sen-
sor
2
C167
359
20
GY/RD
manual transmission
303–14D–00–7
automatic transmission
303–14D–00–8
303–14D–00–2
351
20 BN/WH
3
1161
A261
Swirl control monitor
359
20 GY/RD
1
4
C171
B48
Heated Oxygen
Sensor (HO2S) #11
2
3
C171
389
18
WH/BK
359
20
GY/RD
2
1
C1161
359
20
GY/RD
387
18 RD/WH
89
18 OG
S152
359
20 GY/RD
389
18 WH/BK
303–14D–00–2
1107
20 WH
95
8
93
C175
A147
Powertrain Control
Module (PCM)