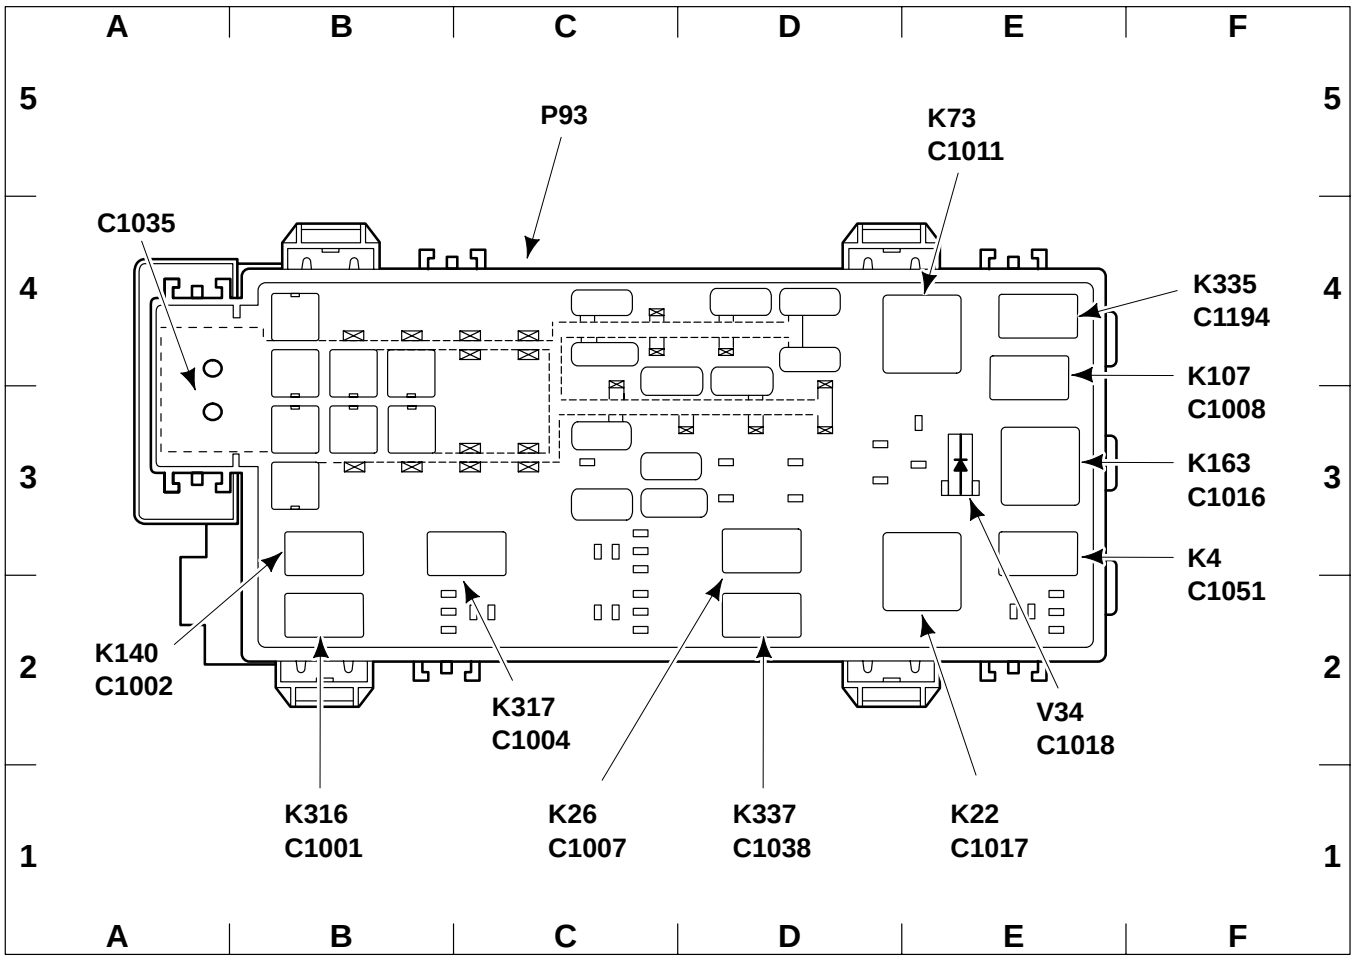


## Battery Junction Box (BJB) – 2.5L, 3.0L, 4.0L

| | | | |
|---|---|---|---|
| C1001 | B 1 | K4 | Fuel pump relay F 3 |
| C1002 | A 2 | K22 | Starter relay E 1 |
| C1004 | C 2 | K26 | Fog lamp relay C 1 |
| C1007 | C 1 | K73 | Blower motor relay E 5 |
| C1008 | F 3 | K107 | A/C clutch relay F 4 |
| C1011 | E 5 | K140 | Wiper run/park relay A 2 |
| C1016 | F 3 | K163 | PCM power relay F 3 |
| C1017 | E 1 | K316 | Wiper high/low relay B 1 |
| C1018 | E 2 | K317 | Windshield washer relay C 2 |
| C1035 | A 4 | K335 | Trailer tow relay F 4 |
| C1038 | D 1 | K337 | Fog lamp isolation relay D 1 |
| C1051 | F 2 | P93 | Battery Junction Box (BJB) C 5 |
| C1194 | F 4 | V34 | PCM Module power diode E 2 |