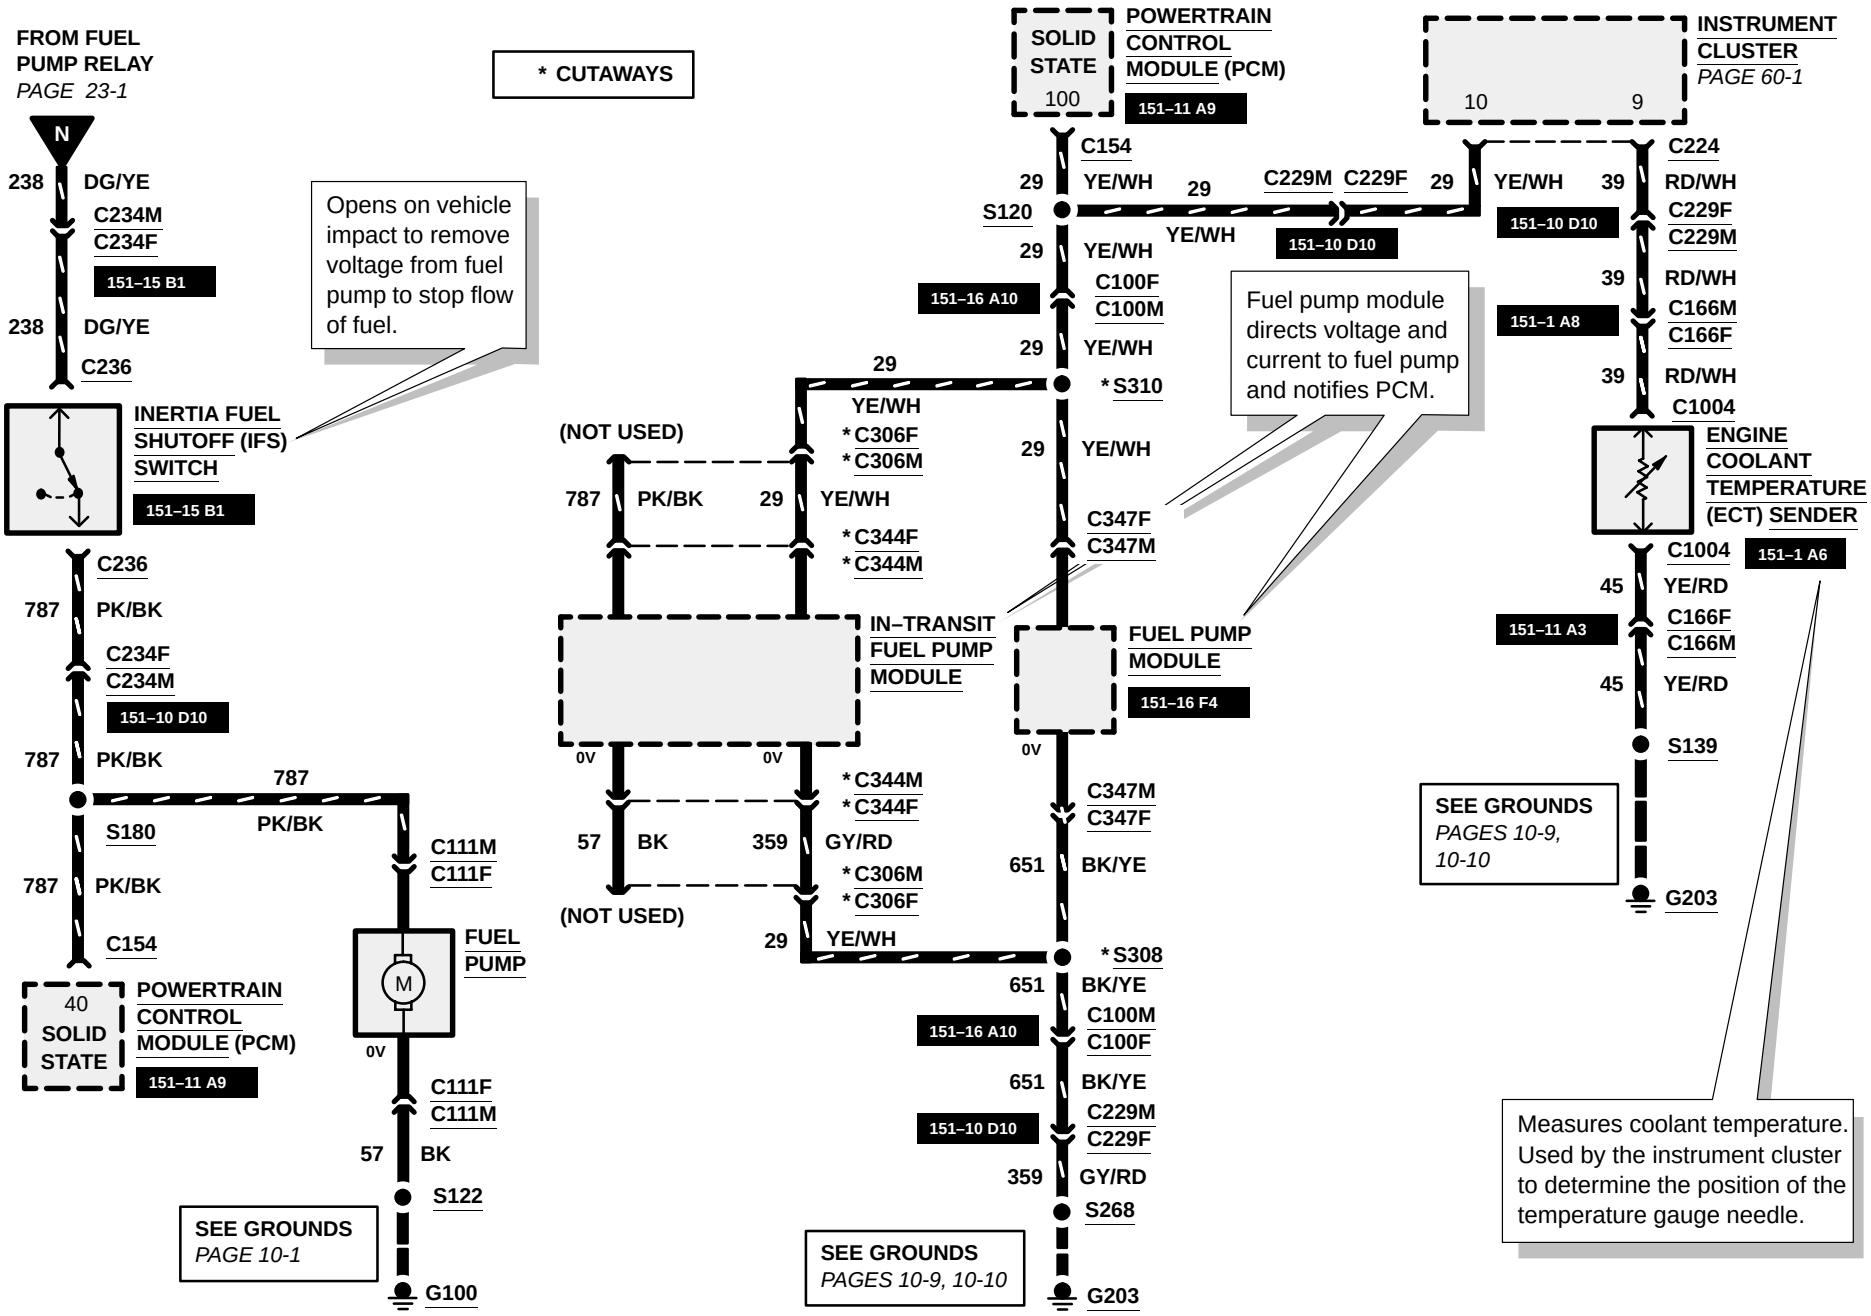
FROM FUEL PUMP RELAY
PAGE 23-1
N
238 DG/YE
C234M
C234F
151–15 B1
238 DG/YE
C236
INERTIA FUEL SHUTOFF (IFS) SWITCH
151–15 B1
C236
787 PK/BK
C234F
C234M
151–10 D10
787 PK/BK
787 PK/BK
S180
787 PK/BK
C154
40
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C111M
C111F
FUEL PUMP
M
0V
C111F
C111M
57 BK
S122
SEE GROUNDS
PAGE 10-1
G100
* CUTAWAYS
Opens on vehicle impact to remove voltage from fuel pump to stop flow of fuel.
SOLID STATE
100
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
29 YE/WH
S120
29 YE/WH
151–16 A10
C100F
C100M
29 YE/WH
29
*S310
YE/WH
(NOT USED)
*C306F
*C306M
787 PK/BK
29 YE/WH
*C344F
*C344M
IN–TRANSIT FUEL PUMP MODULE
0V
0V
*C344M
*C344F
57 BK
359 GY/RD
*C306M
*C306F
(NOT USED)
29 YE/WH
*S308
651 BK/YE
151–16 A10
C100M
C100F
651 BK/YE
151–10 D10
C229M
C229F
359 GY/RD
S268
SEE GROUNDS
PAGES 10-9, 10-10
G203
29 YE/WH
C229M C229F
29 YE/WH
151–10 D10
Fuel pump module directs voltage and current to fuel pump and notifies PCM.
29 YE/WH
C347F
C347M
FUEL PUMP MODULE
151–16 F4
0V
C347M
C347F
651 BK/YE
INSTRUMENT CLUSTER
PAGE 60-1
10
9
YE/WH 39
151–10 D10
C224
RD/WH
C229F
C229M
39 RD/WH
151–1 A8
C166M
C166F
39 RD/WH
C1004
ENGINE COOLANT TEMPERATURE (ECT) SENDER
C1004
151–1 A6
45 YE/RD
151–11 A3
C166F
C166M
45 YE/RD
S139
SEE GROUNDS
PAGES 10-9, 10-10
G203
Measures coolant temperature. Used by the instrument cluster to determine the position of the temperature gauge needle.