C801

14632

N110
Window adjust
switch, right rear

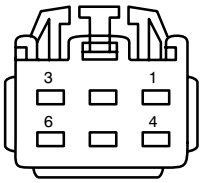

F06213

Pin	Circuit	Circuit Function
1	316 (YE/LB)	Window switch, feed, right rear, Up
2	884 (YE/BK)	Window switch, to, Window motor, right rear
3	170 (RD/LB)	Accessory delay relay, switched power, output
4	-	not used
5	885 (YE/LB)	Window switch, to, Window motor, right rear
6	317 (GY/OG)	Window switch, feed, right rear, Down

C802

14632/19A017

Y19
Speaker, right rear

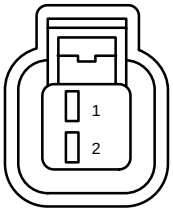

F02069

Pin	Circuit	Circuit Function
1	802 (OG/RD)	Speaker, right rear +
2	803 (BN/PK)	Speaker, right rear -

C803

14632

M117
Power window mo-
tor, right rear

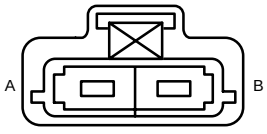

F02311

Pin	Circuit	Circuit Function
A	884 (YE/BK)	Window switch, to, Window motor, right rear
B	885 (YE/LB)	Window switch, to, Window motor, right rear

C804

14632/19A017

M65
Door lock actuator,
right rear

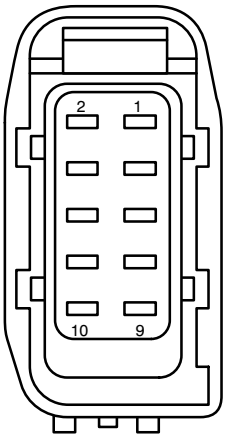

F10089

Pin	Circuit	Circuit Function
1	-	not used
2	117 (PK/BK)	Door lock, output
3	-	not used
4	-	not used
5	-	not used
6	57 (BK)	Ground
7	-	not used
8	760 (PK/LB)	Door ajar switch, right rear
9	-	not used
10	118 (PK/OG)	Door unlock, output

C912

PIA

N411
Roof opening panel
switch



F03211

Pin	Circuit	Circuit Function
1	Q41 (WH)	Switched between: Battery voltage, Ground or Open
2	Z1 (BK)	Ground
3	Q43 (VT)	Switched between: Battery voltage, Ground or Open