## C4009

**15K868**

Parking aid sensor,
outer left

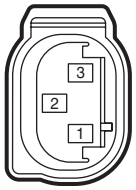


98AG-14A464-RDA (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1439 (BN/PK) | Reverse park aid module: park aid sensor power |
| 2 | 1444 (DB/YE) | Reverse park aid module: right rear park aid sensor input |
| 3 | 1440 (DG/YE) | Reverse park aid module: park aid sensor return |

## C4010

**15K868**

Parking aid sensor,
inner left

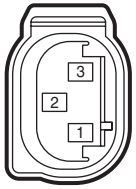


98AG-14A464-RDA (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1439 (BN/PK) | Reverse park aid module: park aid sensor power |
| 2 | 1443 (WH/LB) | Reverse park aid module: rear center park aid sensor input |
| 3 | 1440 (DG/YE) | Reverse park aid module: park aid sensor return |

## C4011

**15K868**

Parking aid sensor,
outer right

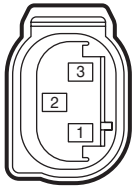


98AG-14A464-RDA (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1439 (BN/PK) | Reverse park aid module: park aid sensor power |
| 2 | 1442 (DG/WH) | Reverse park aid module: left center park aid sensor input |
| 3 | 1440 (DG/YE) | Reverse park aid module: park aid sensor return |

## C4012

**15K868**

Parking aid sensor,
inner right

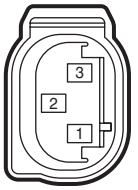


98AG-14A464-RDA (F)

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 1439 (BN/PK) | Reverse park aid module: park aid sensor power |
| 2 | 1441 (WH/LG) | Reverse park aid module: left rear park aid sensor input |
| 3 | 1440 (DG/YE) | Reverse park aid module: park aid sensor return |