## C4014b

### 14A005

Parking Aid Module
(PAM) (15K866)

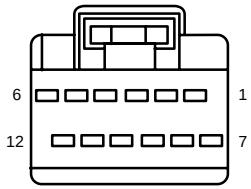

F12077

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 4-GN10 (GY) | UBP Bus |
| 2 | – | not used |
| 3 | 8-GN17 (WH/RD) | Parking aid, mute, signal |
| 4 | – | not used |
| 5 | – | not used |
| 6 | – | not used |
| 7 | 91-GN10 (BN) | Ground |
| 8 | 8-GN14 (WH/BK) | vehicle speed signal |
| 9 | 8-GN12 (WH/BU) | Parking aid disable switch (15A860) - On/Off signal |
| 10 | 7-GN23 (YE/BK) | Parking aid disable switch (15A860) - indicator, feed |
| 11 | 8-GN11 (WH/RD) | Voltage supplied in reverse |
| 12 | 20-GN10 (PK/YE) | Voltage in Run (overload protected) |

## C4066a

### 14A005

Mega fuse


F01219

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 30-DF8A (RD/BU) | Battery cable + |

## C4066b

### 14A005

Mega fuse


F01221

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 30-DF8 (RD/BU) | Fused battery feed |

## C4068

### 19B113/14A005

Subwoofer, left

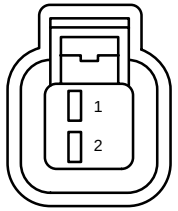

F02069

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 8-MD22 (WH/GN) | Subwoofer, left + |
| 2 | 10-MD22 (GY/OG) | Subwoofer, left - |