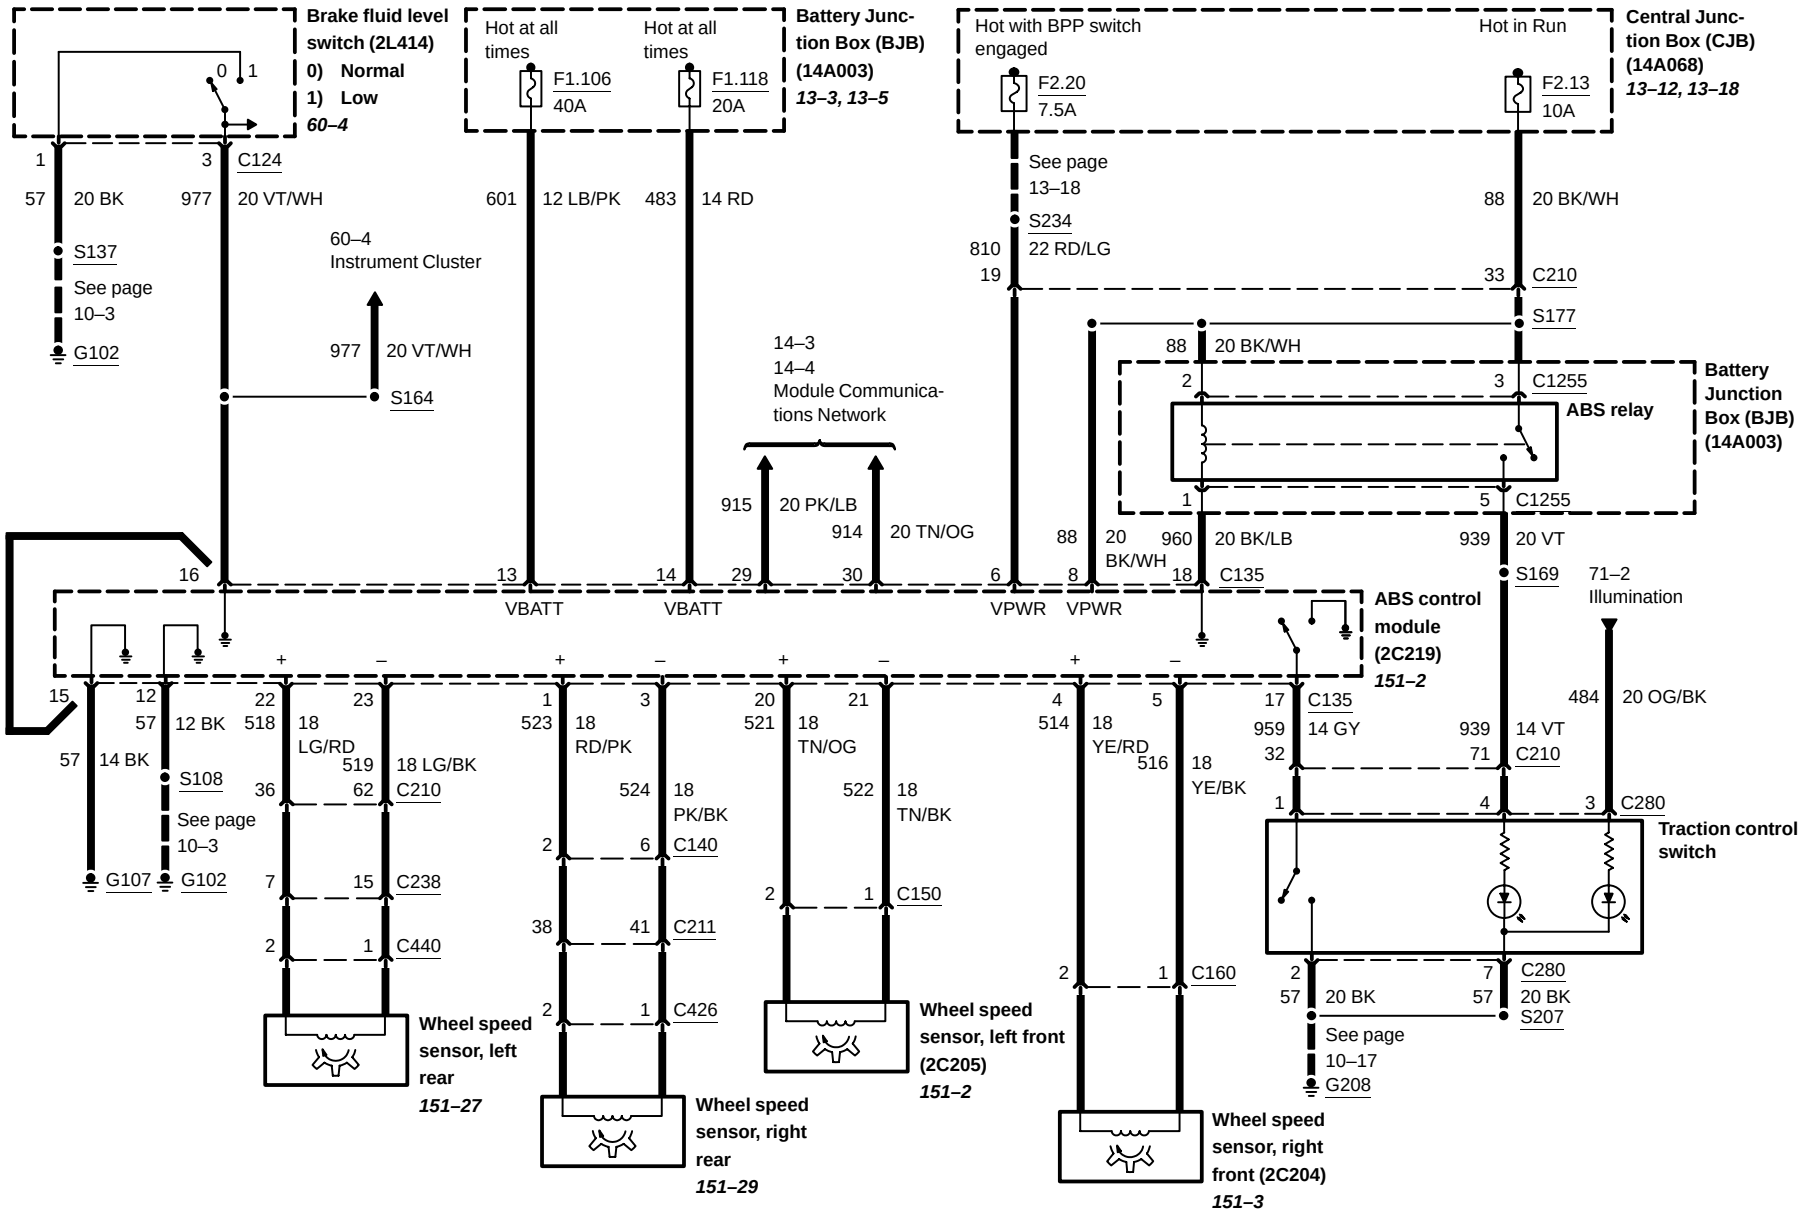
Brake fluid level switch (2L414)
0) Normal
1) Low
60–4
Hot at all times
F1.106
40A
Hot at all times
F1.118
20A
Battery Junction Box (BJB)
(14A003)
13–3, 13–5
Hot with BPP switch engaged
F2.20
7.5A
Hot in Run
F2.13
10A
Central Junction Box (CJB)
(14A068)
13–12, 13–18
C124
S137
See page 10–3
G102
60–4
Instrument Cluster
S164
See page 13–18
S234
22 RD/LG
S177
C210
C1255
ABS relay
Battery Junction Box (BJB) (14A003)
14–3
14–4
Module Communications Network
VBATT
VBATT
VPWR
VPWR
C135
ABS control module (2C219)
151–2
S169
71–2
Illumination
S108
See page 10–3
G107
G102
C210
C238
C440
C140
C211
C426
C150
C160
C280
Traction control switch
S207
See page 10–17
G208
Wheel speed sensor, left rear
151–27
Wheel speed sensor, right rear
151–29
Wheel speed sensor, left front (2C205)
151–2
Wheel speed sensor, right front (2C204)
151–3