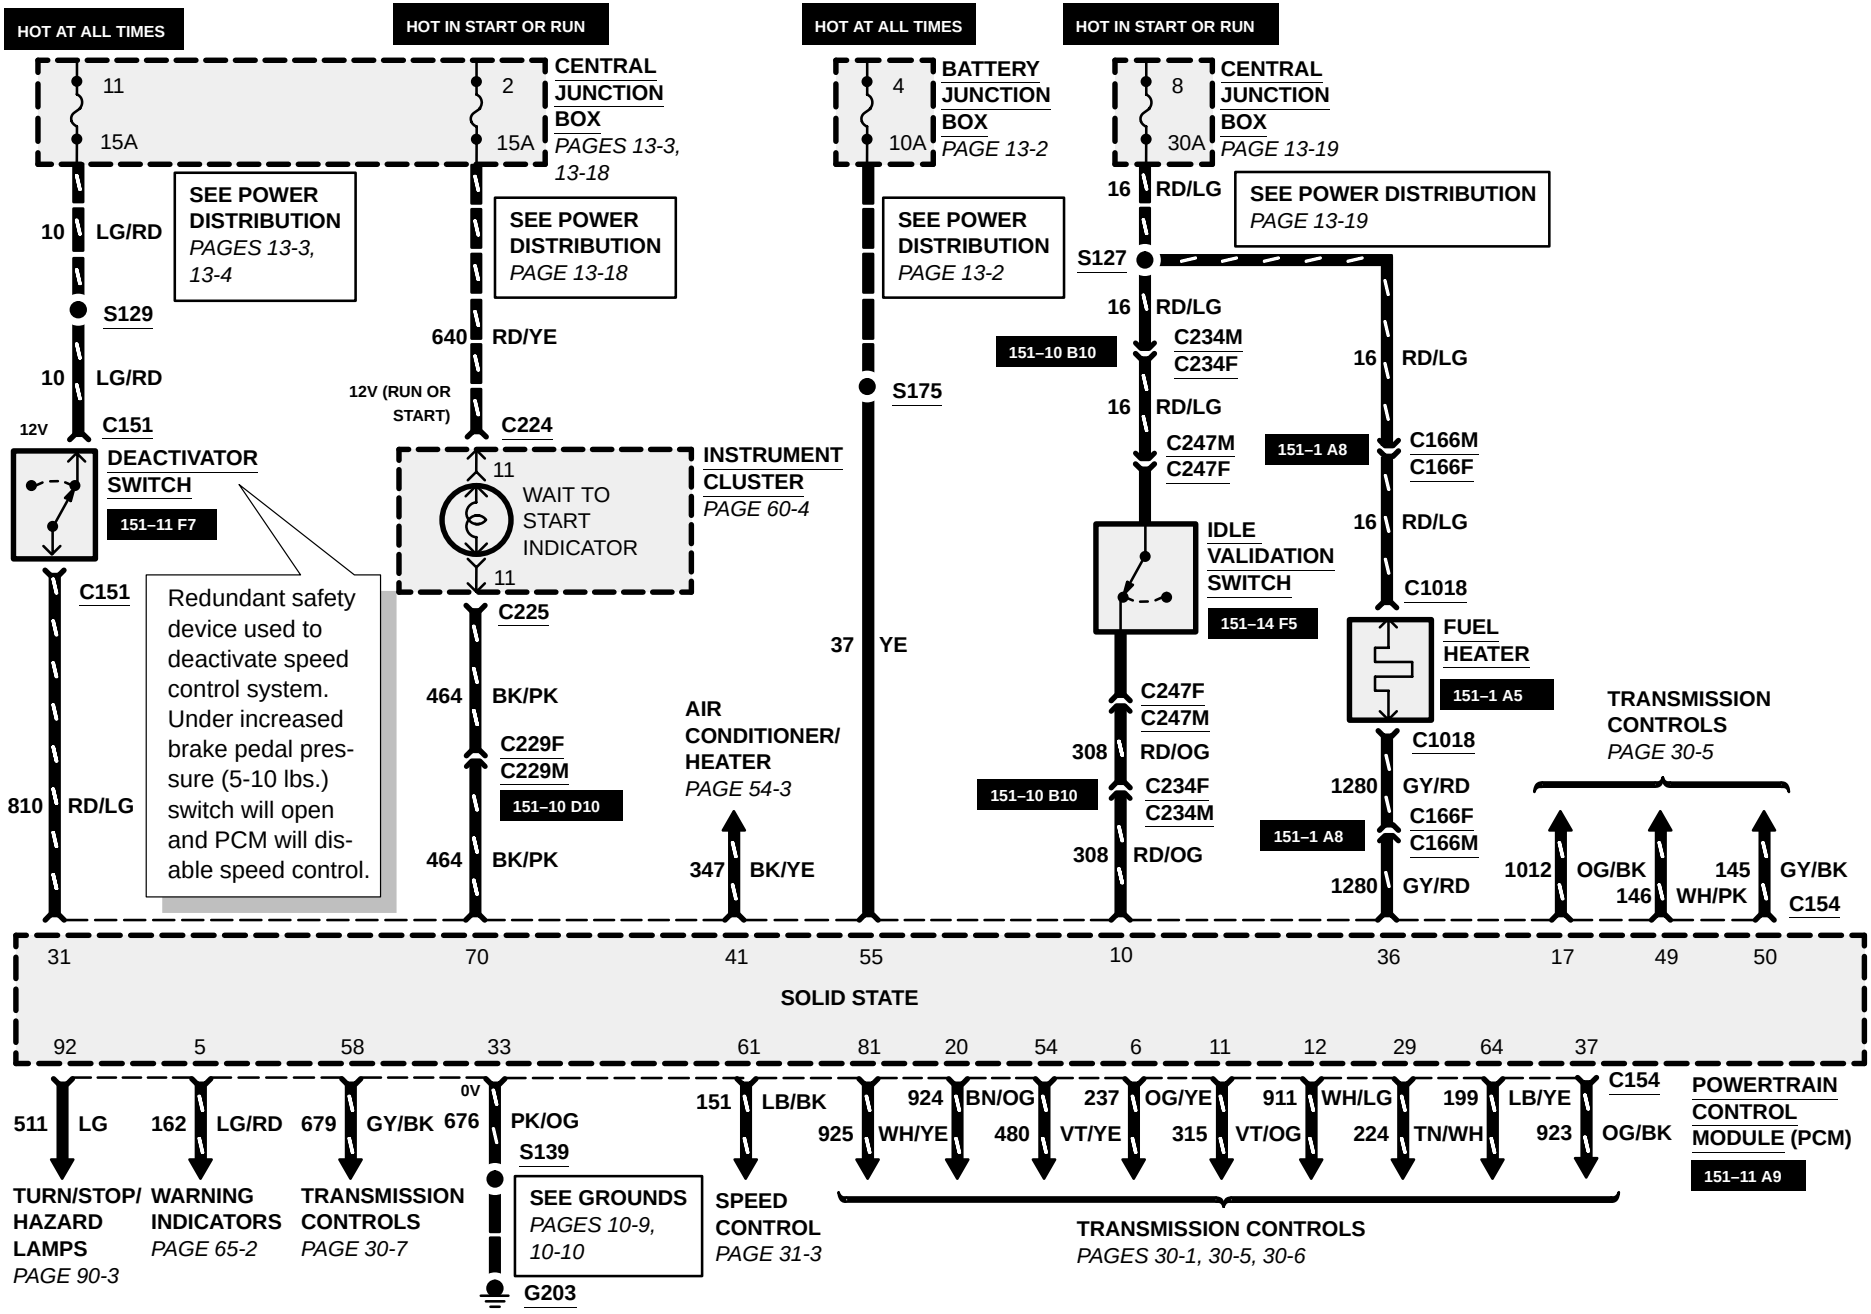
HOT AT ALL TIMES
HOT IN START OR RUN
HOT AT ALL TIMES
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGES 13-3, 13-18
BATTERY JUNCTION BOX
PAGE 13-2
CENTRAL JUNCTION BOX
PAGE 13-19
15A
15A
10A
30A
SEE POWER DISTRIBUTION
PAGES 13-3, 13-4
SEE POWER DISTRIBUTION
PAGE 13-18
SEE POWER DISTRIBUTION
PAGE 13-2
SEE POWER DISTRIBUTION
PAGE 13-19
10 LG/RD
S129
10 LG/RD
12V
C151
DEACTIVATOR SWITCH
151–11 F7
640 RD/YE
12V (RUN OR START)
C224
INSTRUMENT CLUSTER
PAGE 60-4
WAIT TO START INDICATOR
C225
464 BK/PK
C229F
C229M
151–10 D10
464 BK/PK
S175
37 YE
16 RD/LG
S127
16 RD/LG
151–10 B10
C234M
C234F
16 RD/LG
C247M
C247F
151–1 A8
16 RD/LG
C166M
C166F
16 RD/LG
C1018
IDLE VALIDATION SWITCH
151–14 F5
FUEL HEATER
151–1 A5
C247F
C247M
308 RD/OG
151–10 B10
C234F
C234M
308 RD/OG
C1018
1280 GY/RD
151–1 A8
C166F
C166M
1280 GY/RD
TRANSMISSION CONTROLS
PAGE 30-5
1012 OG/BK
146 WH/PK
145 GY/BK
C154
810 RD/LG
Redundant safety device used to deactivate speed control system. Under increased brake pedal pressure (5-10 lbs.) switch will open and PCM will disable speed control.
AIR CONDITIONER/ HEATER
PAGE 54-3
347 BK/YE
31
70
41
55
10
36
17
49
50
SOLID STATE
92
5
58
33
61
81
20
54
6
11
12
29
64
37
511 LG
162 LG/RD
679 GY/BK
0V
676 PK/OG
S139
G203
151 LB/BK
925 WH/YE
924 BN/OG
480 VT/YE
237 OG/YE
315 VT/OG
911 WH/LG
224 TN/WH
199 LB/YE
923 OG/BK
C154
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
TURN/STOP/ HAZARD LAMPS
PAGE 90-3
WARNING INDICATORS
PAGE 65-2
TRANSMISSION CONTROLS
PAGE 30-7
SEE GROUNDS
PAGES 10-9, 10-10
SPEED CONTROL
PAGE 31-3
TRANSMISSION CONTROLS
PAGES 30-1, 30-5, 30-6