C500

14K138

Keypad switch assembly

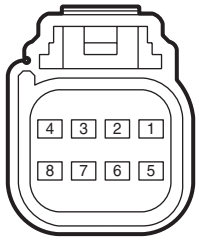

1L2T-14A464-FA (F)

Pin	Circuit	Circuit Function
1	66 (LB)	Keyless door lock sw illumination feed
2	78 (LB/YE)	Keyless door lock switch data bit 1 to module
3	122 (YE)	Keyless door lock switch data bit 4 to module
4	—	not used
5	1205 (BK)	General ground (type 4 ground)
6	124 (BN)	Keyless door lock switch enable from module
7	123 (RD)	Keyless door lock switch data bit 5 to module
8	—	not used

C505

14A488

Door lock switch,
driver side

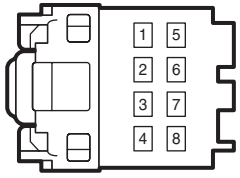

2L7T-14489-CA (F)

Pin	Circuit	Circuit Function
1	1205 (BK)	General ground (type 4 ground)
2	1011 (TN/OR)	Pulse widtch dimmer module - fused feed
3	119 (PK/YE)	Door lock switch (lock)
4	1205 (BK)	General ground (type 4 ground)
5	—	not used
6	—	not used
7	120 (PK/LG)	Door lock switch (unlock)
8	—	not used

C509

14A584

Anti-theft alarm
inhibit switch

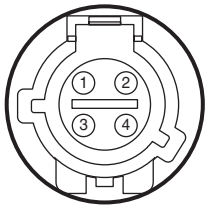

F3LB-14A464-MA (M)

Pin	Circuit	Circuit Function
1	25 (DG/VT)	Anti-theft switch disarm
2	24 (DB/OG)	Anti-theft switch arm
3	1205 (BK)	General ground (type 4 ground)
4	—	not used

C510

14A699

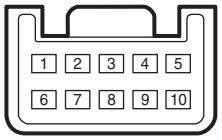

98BG-14A459-EKB (M)

14A488

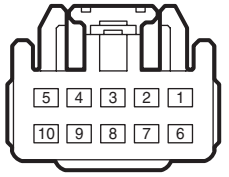

98AG-14489-EKB (F)

(1) 1464 (YE)
(2) 1463 (RD/YE)
(3) 1205 (BK)
(4) 1094 (PK)
(5) 1097 (BN)
(6) 1001 (WH/YE)
(7) 1468 (GY/LB)
(8) 1467 (GY/YE)
(9) 1466 (GY/OG)
(10) 1465 (GY/WH)