C604

14A205

N105
Window adjust
switch, passenger
side

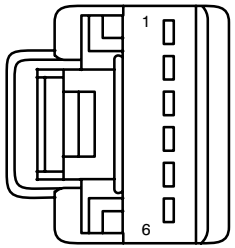

F006179

Pin	Circuit	Circuit function
1	8-AJ18 (WH/VT)	Sensor signal
2	10-AJ18 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
3	7-AJ18 (YE/VT)	Voltage DC supplied at all times (sensor)
4	31-LH31 (BK)	Ground
5	–	not used
6	29S-LH31 (OG/BU)	Voltage supplied at all times (overload protected), Switched

C605

14A205

N205
Door lock switch,
passenger side
(14028)

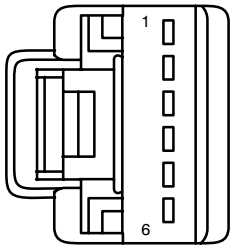

F006179

Pin	Circuit	Circuit function
1	8-AA20 (WH/BU)	Sensor signal
2	8-AA21 (WH/GN)	Signal 2 (Y–direction, reverse, downward)
3	–	Voltage DC supplied at all times (sensor)
4	31-LH42 (BK)	Ground
5	–	not used
6	29S-LH42 (OG/BU)	Voltage supplied at all times (overload protected), Switched

C606

14A205

E178
Door entry lamp,
right front (13776)

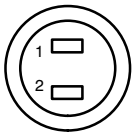

F02063

Pin	Circuit	Circuit function
1	29S-LC36 (OG/YE)	Voltage supplied at all times (overload protected), Switched
2	9-LC36 (BN)	Sensor signal return (reference/ground)