30-3 TRANSMISSION CONTROLS (4R100)

2001 F-150

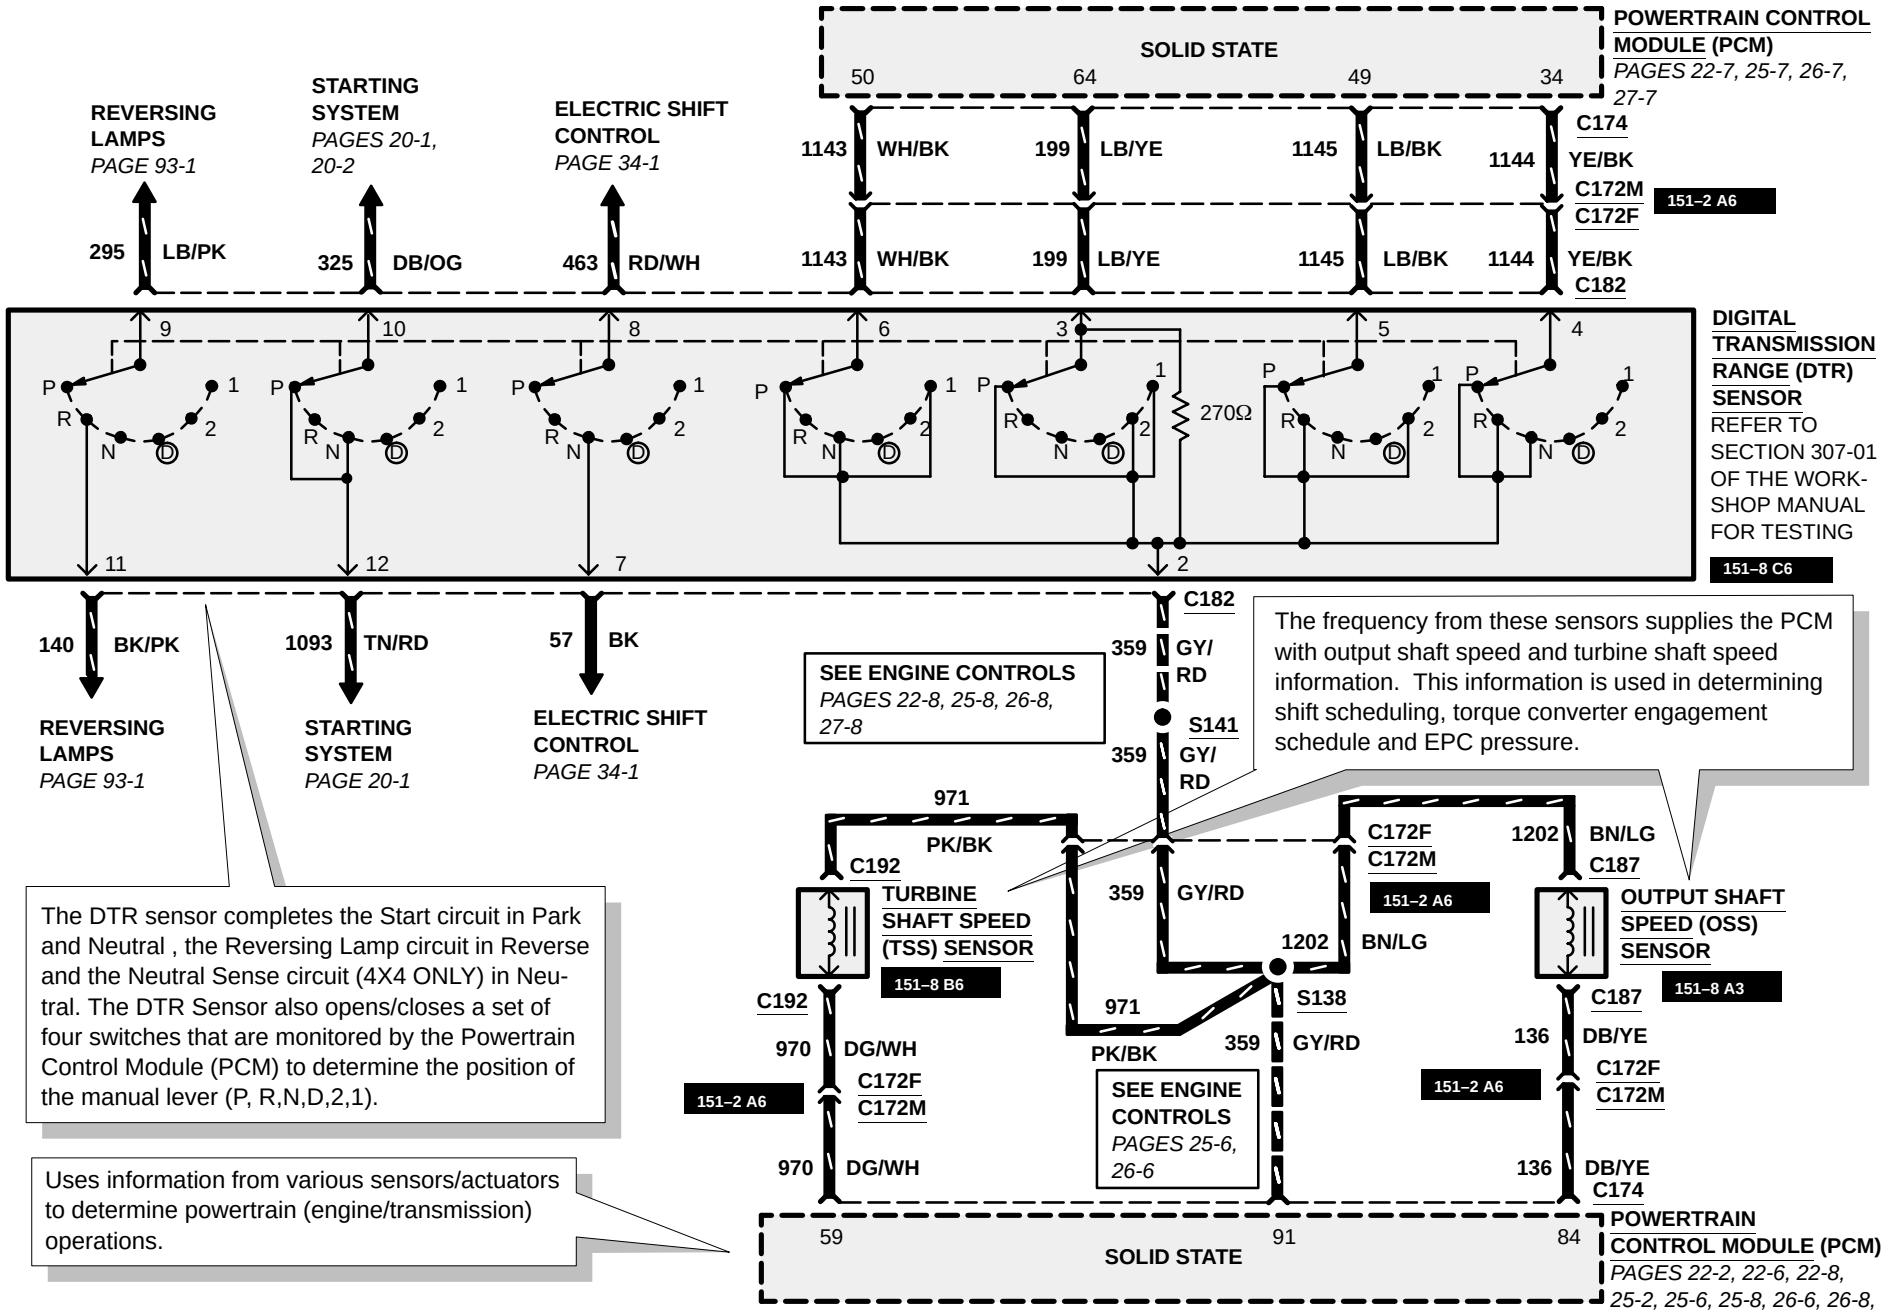

The frequency from these sensors supplies the PCM with output shaft speed and turbine shaft speed information. This information is used in determining shift scheduling, torque converter engagement schedule and EPC pressure.

The DTR sensor completes the Start circuit in Park and Neutral , the Reversing Lamp circuit in Reverse and the Neutral Sense circuit (4X4 ONLY) in Neutral. The DTR Sensor also opens/closes a set of four switches that are monitored by the Powertrain Control Module (PCM) to determine the position of the manual lever (P, R,N,D,2,1).

Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.