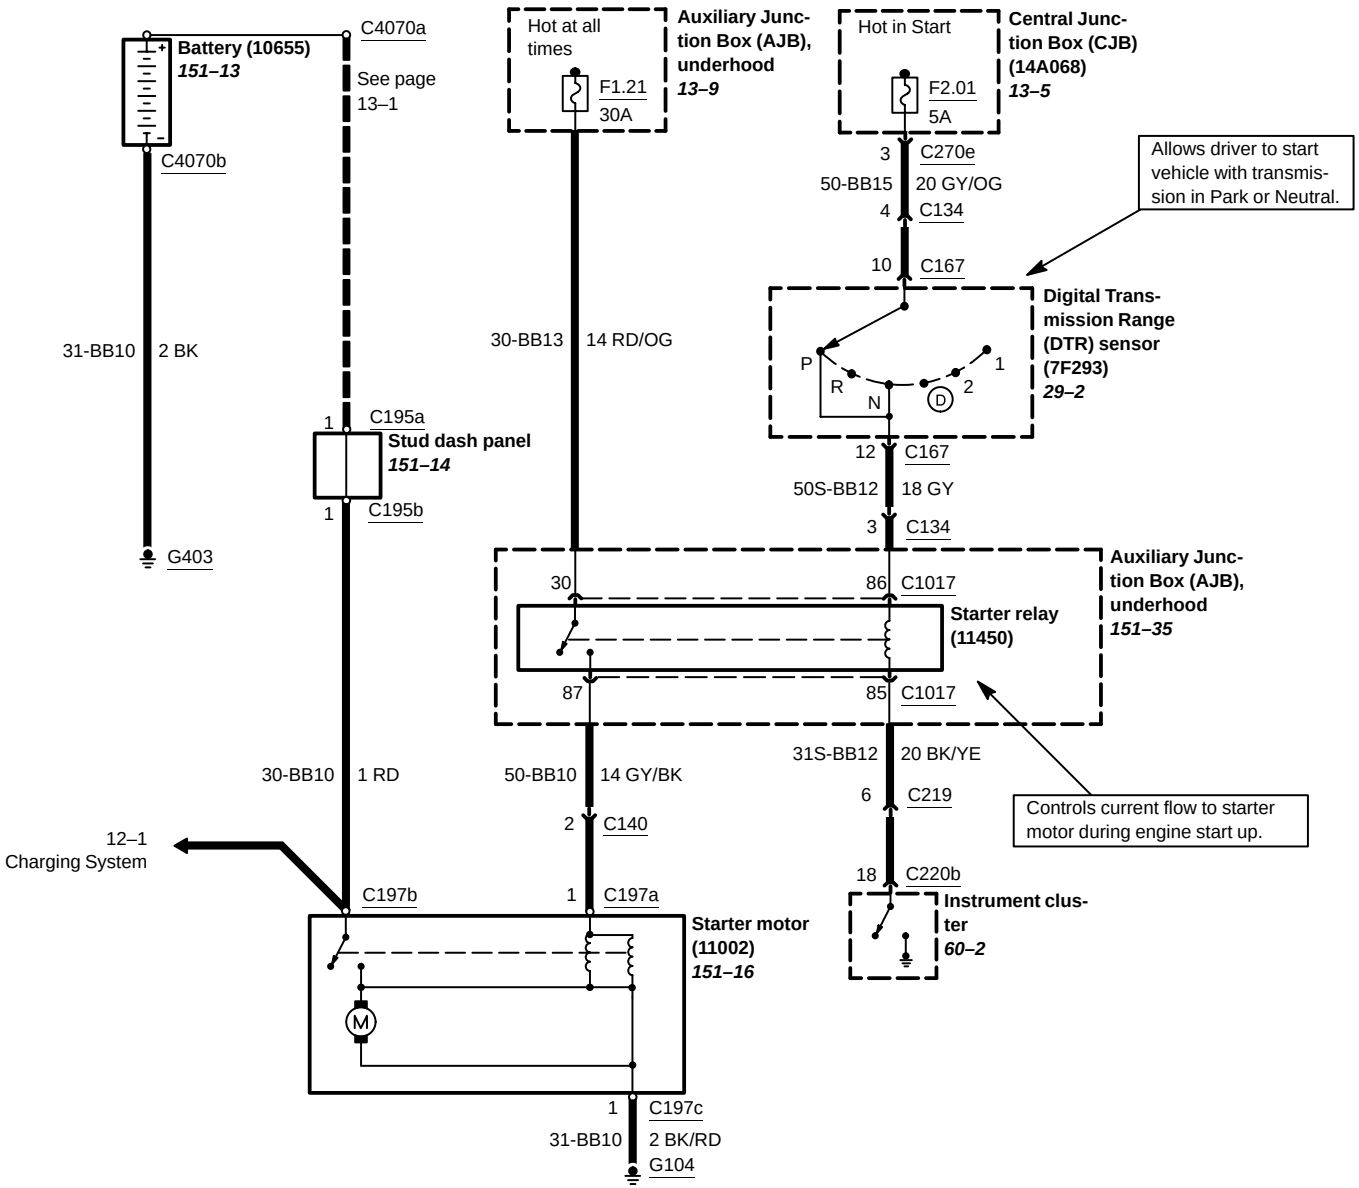
Battery (10655)
151–13
C4070a
See page 13–1
C4070b
31-BB10 2 BK
G403
1 C195a
Stud dash panel
151–14
1 C195b
30-BB10 1 RD
12–1
Charging System
C197b
Starter motor (11002)
151–16
M
1 C197c
31-BB10 2 BK/RD
G104
Hot at all times
F1.21
30A
Auxiliary Junction Box (AJB), underhood
13–9
30-BB13 14 RD/OG
Hot in Start
F2.01
5A
Central Junction Box (CJB) (14A068)
13–5
3 C270e
50-BB15 20 GY/OG
4 C134
10 C167
Allows driver to start vehicle with transmission in Park or Neutral.
Digital Transmission Range (DTR) sensor (7F293)
29–2
P R N D 1 2
12 C167
50S-BB12 18 GY
3 C134
30 86 C1017
Starter relay (11450)
87 85 C1017
Auxiliary Junction Box (AJB), underhood
151–35
50-BB10 14 GY/BK
2 C140
31S-BB12 20 BK/YE
6 C219
Controls current flow to starter motor during engine start up.
18 C220b
Instrument cluster
60–2