C14 (BN)

14401

P91
Central Junction
Box (CJB)



F11012

Pin	Circuit	Circuit Function
1	32-KA6A (WH/BK)	Switched between: Battery voltage, Ground or Open
2	29-LC7 (OG/BU)	Voltage supplied at all times (overload protected)
3	31-DA1 (BK)	Ground
4	32-KA19 (WH/BK)	Switched between: Battery voltage, Ground or Open
5	32-KA35 (WH/RD)	Switched between: Battery voltage, Ground or Open
6	33-KA6 (YE/BK) +	Switched between: Battery voltage, Ground or Open
	33-KA34 (YE/BK)	Switched between: Battery voltage, Ground or Open
7	29S-GJ1 (OG/YE)	Voltage supplied at all times (overload protected), switched
8	29-AA17 (OG/WH)	Voltage supplied at all times (overload protected)
9	32-KA9 (WH/BU)	Switched between: Battery voltage, Ground or Open
10	32-KA28 (WH/RD)	Switched between: Battery voltage, Ground or Open
11	15-KA28 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C15 (BU)

14401

P91
Central Junction
Box (CJB)

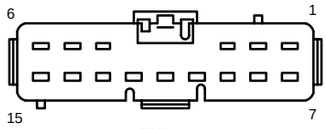

F15009

Pin	Circuit	Circuit Function
1	31S-LB25 (BK/BU)	Ground, switched
2	–	not used
3	15-GG14 (GN/RD) +	Voltage, ignition switch in Start or Run (not overload protected)
	15-LG27 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
4	31S-HB1 (BK/YE)	Ground, switched
5	8-EE8 (WH/BU)	Sensor signal
6	8-KA19 (WH/BK)	Sensor signal
7	91S-GJ7 (BK/BU)	Ground, switched
	31S-GL43 (BK/GN) +	Ground, switched
	91S-GJ7 (BK/BU)	Ground, switched
8	29-LB25 (OG/BU)	Voltage supplied at all times (overload protected)
9	91-DA1 (BN)	Ground
10	91S-JA14A (BN/GN)	Ground, switched
11	8-AA36 (WH)	Sensor signal
12	29S-LE18 (OG/YE)	Voltage supplied at all times (overload protected), switched
13	31S-GL5 (BK/BU)	Ground, switched
14	31S-GL9 (BK/YE)	Ground, switched
15	31S-AA7 (BK/BU)	Ground, switched