C717 (GY)

14401

N83
Traction Control System (TCS) disable switch

N373
ESP deactivation switch

F08088

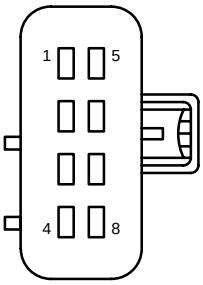

Pin	Circuit	Circuit Function
1	91-CF54 (BK/WH)	Ground
	91-CF54 (BK/WH)	Ground
	91-LH45 (BK/WH)	Ground
2	91S-CF54 (BK/WH)	Ground, switched
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	91-LH45 (BK/WH)	Ground
8	29S-LH45 (OG/WH)	Voltage supplied at all times (overload protected), switched

C731

12A522

A195
Fuel pump driver module

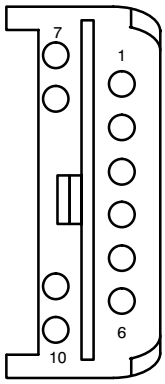

F10009

Pin	Circuit	Circuit Function
1	31S-RE32 (BK/WH)	Ground, switched
2	31-RE31 (BK)	Ground
3	31-RG2 (BK)	Ground
4	–	not used
5	–	not used
6	–	not used
7	15-RE16 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
8	–	not used
9	15S-RE31 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	15S-RG2 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched