4WABS

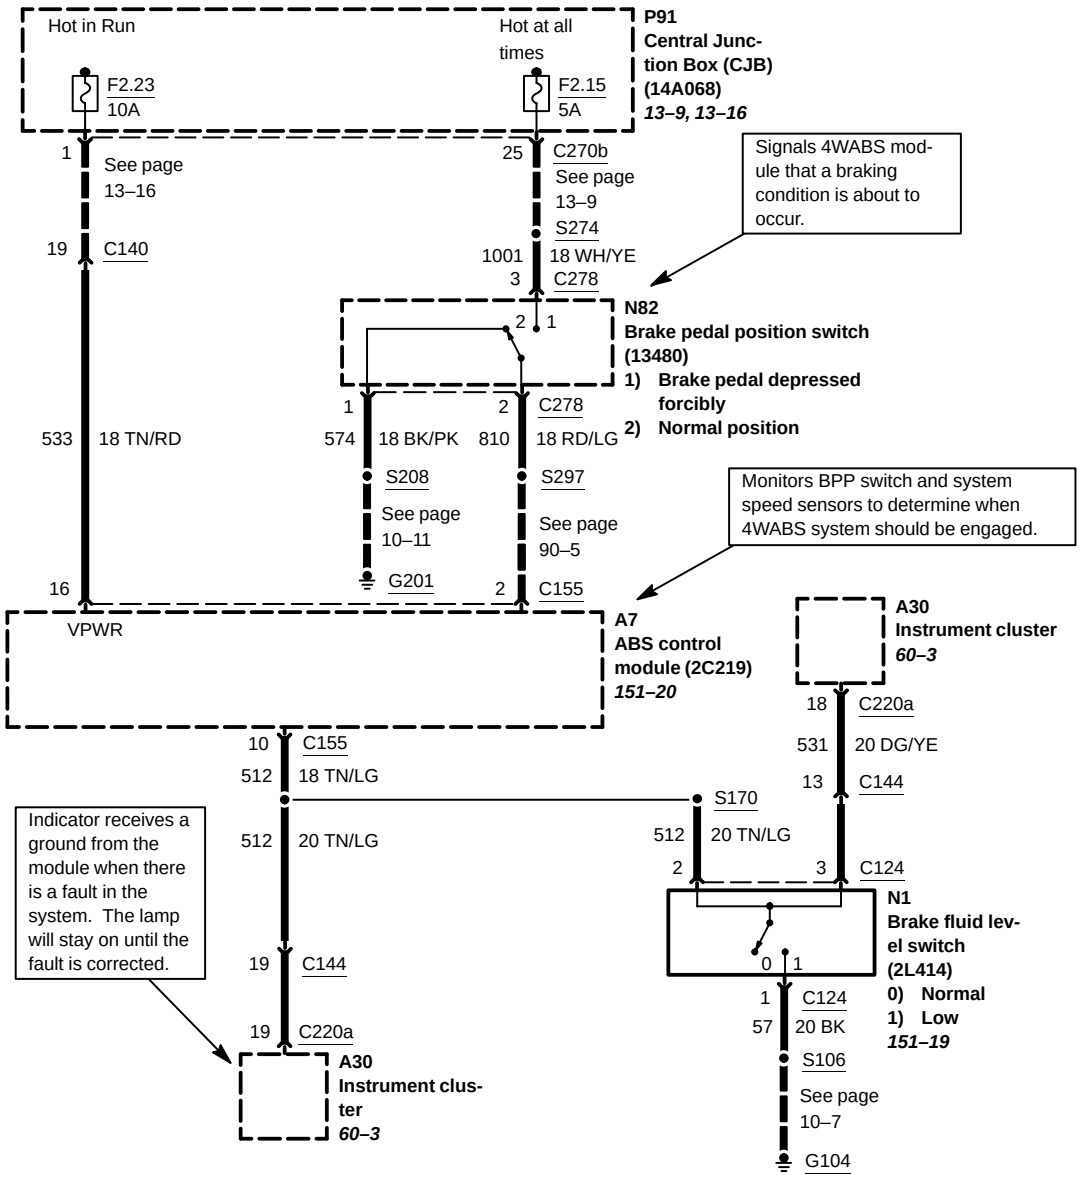
Hot in Run
Hot at all times
P91
Central Junction Box (CJB)
(14A068)
13–9, 13–16
F2.23
10A
F2.15
5A
1
See page 13–16
25
C270b
See page 13–9
S274
19
C140
1001
18 WH/YE
3
C278
Signals 4WABS module that a braking condition is about to occur.
N82
Brake pedal position switch
(13480)
1) Brake pedal depressed forcibly
2) Normal position
2 1
1
2
C278
533
18 TN/RD
574
18 BK/PK
810
18 RD/LG
S208
S297
See page 10–11
See page 90–5
G201
16
2
C155
Monitors BPP switch and system speed sensors to determine when 4WABS system should be engaged.
VPWR
A7
ABS control module (2C219)
151–20
A30
Instrument cluster
60–3
18
C220a
531
20 DG/YE
13
C144
10
C155
512
18 TN/LG
S170
512
20 TN/LG
2
3
C124
Indicator receives a ground from the module when there is a fault in the system. The lamp will stay on until the fault is corrected.
512
20 TN/LG
19
C144
19
C220a
A30
Instrument cluster
60–3
N1
Brake fluid level switch
(2L414)
0) Normal
1) Low
151–19
0 1
1
C124
57
20 BK
S106
See page 10–7
G104