## C804 (WH)

**14A005**

Door lock actuator, right rear (218A42)

F02116

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 118 (PK/OG) | passenger door, Unlock, output |
| 2 | 117 (PK/BK) | Door lock, output |

## C820a (BK)

**14A005**

Door ajar switch, passenger side rear (14018)

F01067

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |

## C820b (GY)

**14A005**

Door ajar switch, passenger side rear (14018)



F01053

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 627 (BK/OG) | Door ajar indicator, control |

## C906

**14334**

Vanity mirror lamp, right (04100)

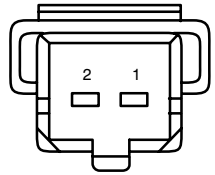


F02217

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 705 (LG/OG) | Interior lamps, Power, feed |

## C907

**14334**

Vanity mirror lamp, left (04100)

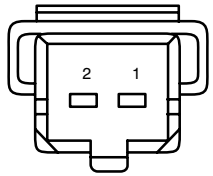


F02217

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 705 (LG/OG) | Interior lamps, Power, feed |