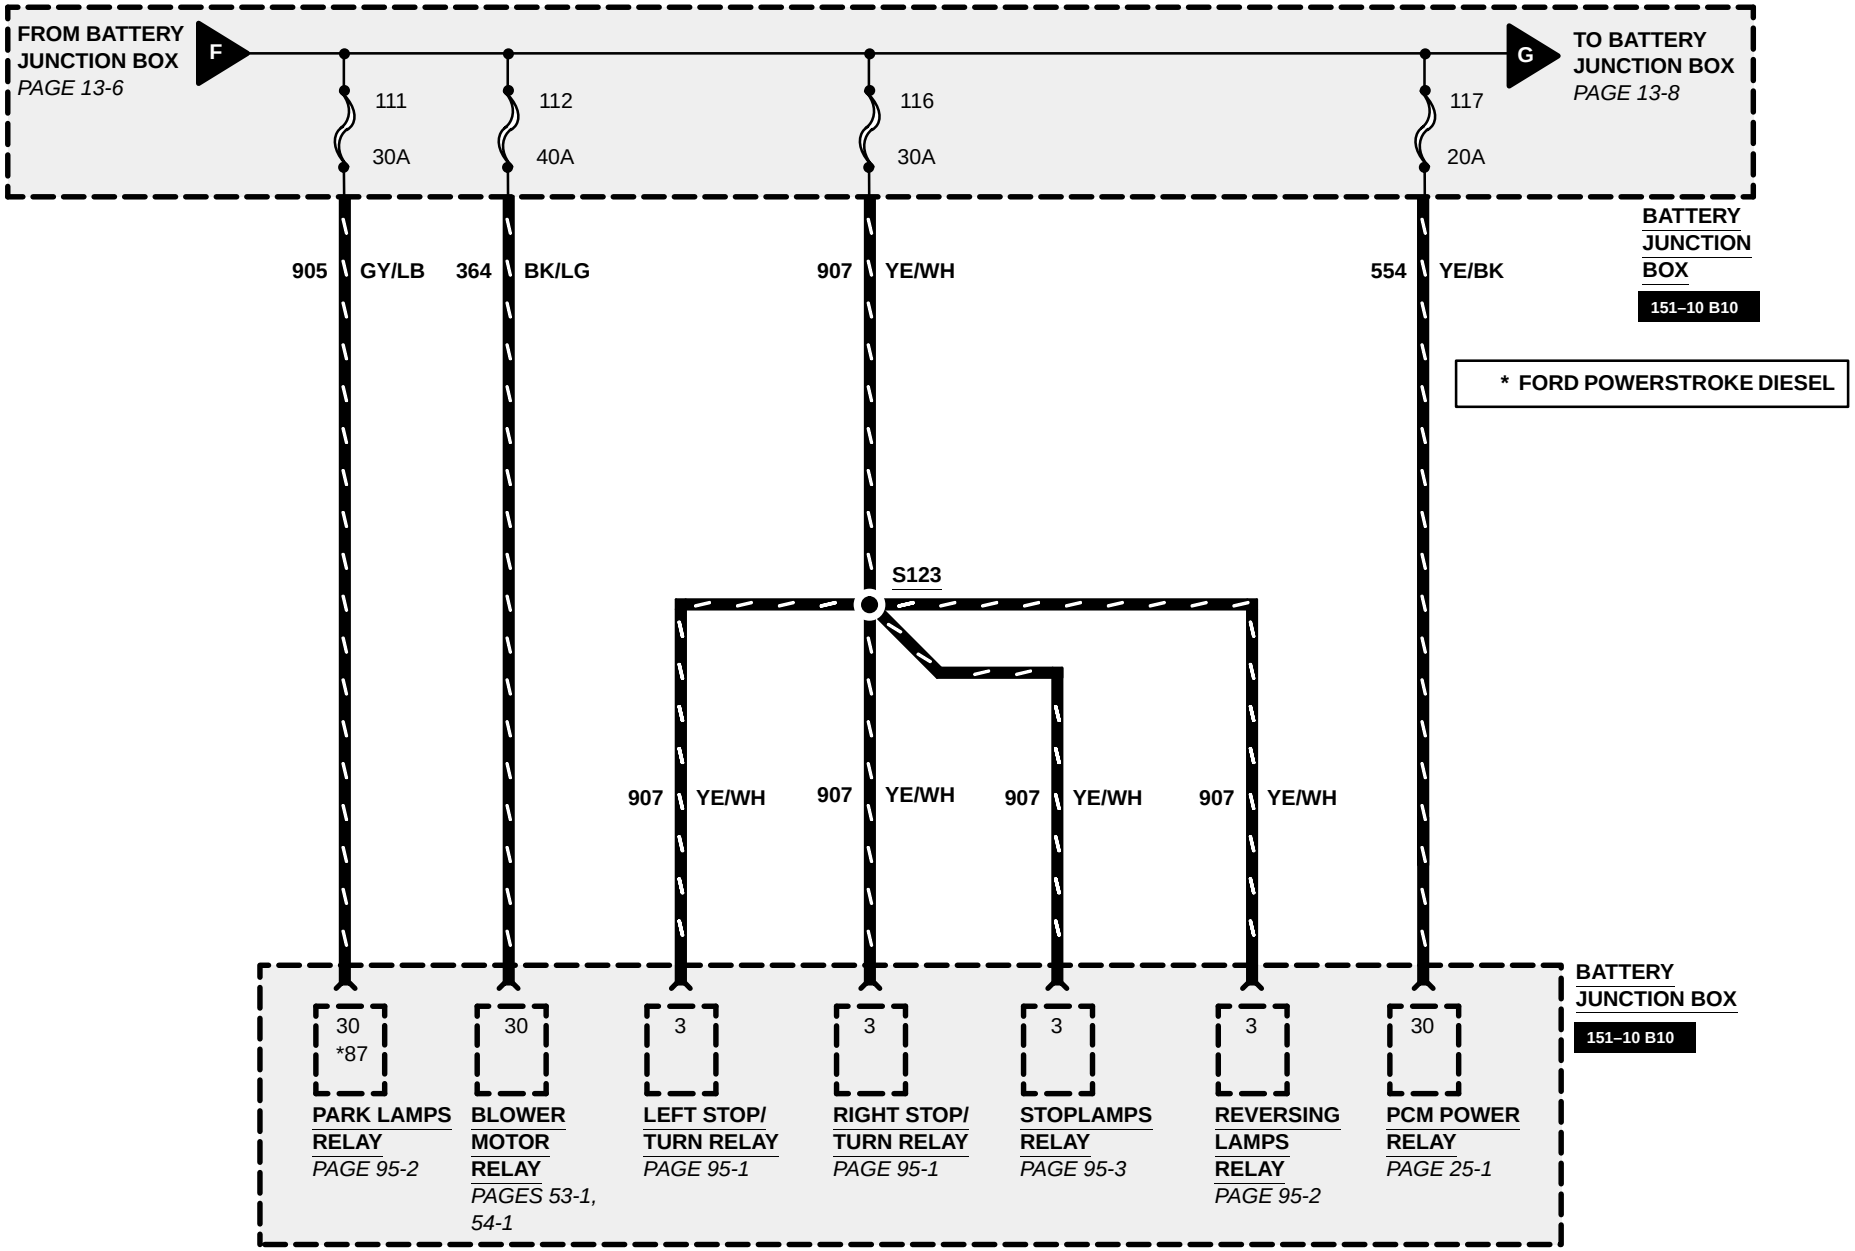
FROM BATTERY JUNCTION BOX
PAGE 13-6
F
111
30A
112
40A
116
30A
117
20A
G
TO BATTERY JUNCTION BOX
PAGE 13-8
905 GY/LB
364 BK/LG
907 YE/WH
554 YE/BK
BATTERY JUNCTION BOX
151–10 B10
* FORD POWERSTROKE DIESEL
S123
907 YE/WH
907 YE/WH
907 YE/WH
907 YE/WH
30 *87
PARK LAMPS RELAY
PAGE 95-2
30
BLOWER MOTOR RELAY
PAGES 53-1, 54-1
3
LEFT STOP/ TURN RELAY
PAGE 95-1
3
RIGHT STOP/ TURN RELAY
PAGE 95-1
3
STOPLAMPS RELAY
PAGE 95-3
3
REVERSING LAMPS RELAY
PAGE 95-2
30
PCM POWER RELAY
PAGE 25-1
BATTERY JUNCTION BOX
151–10 B10