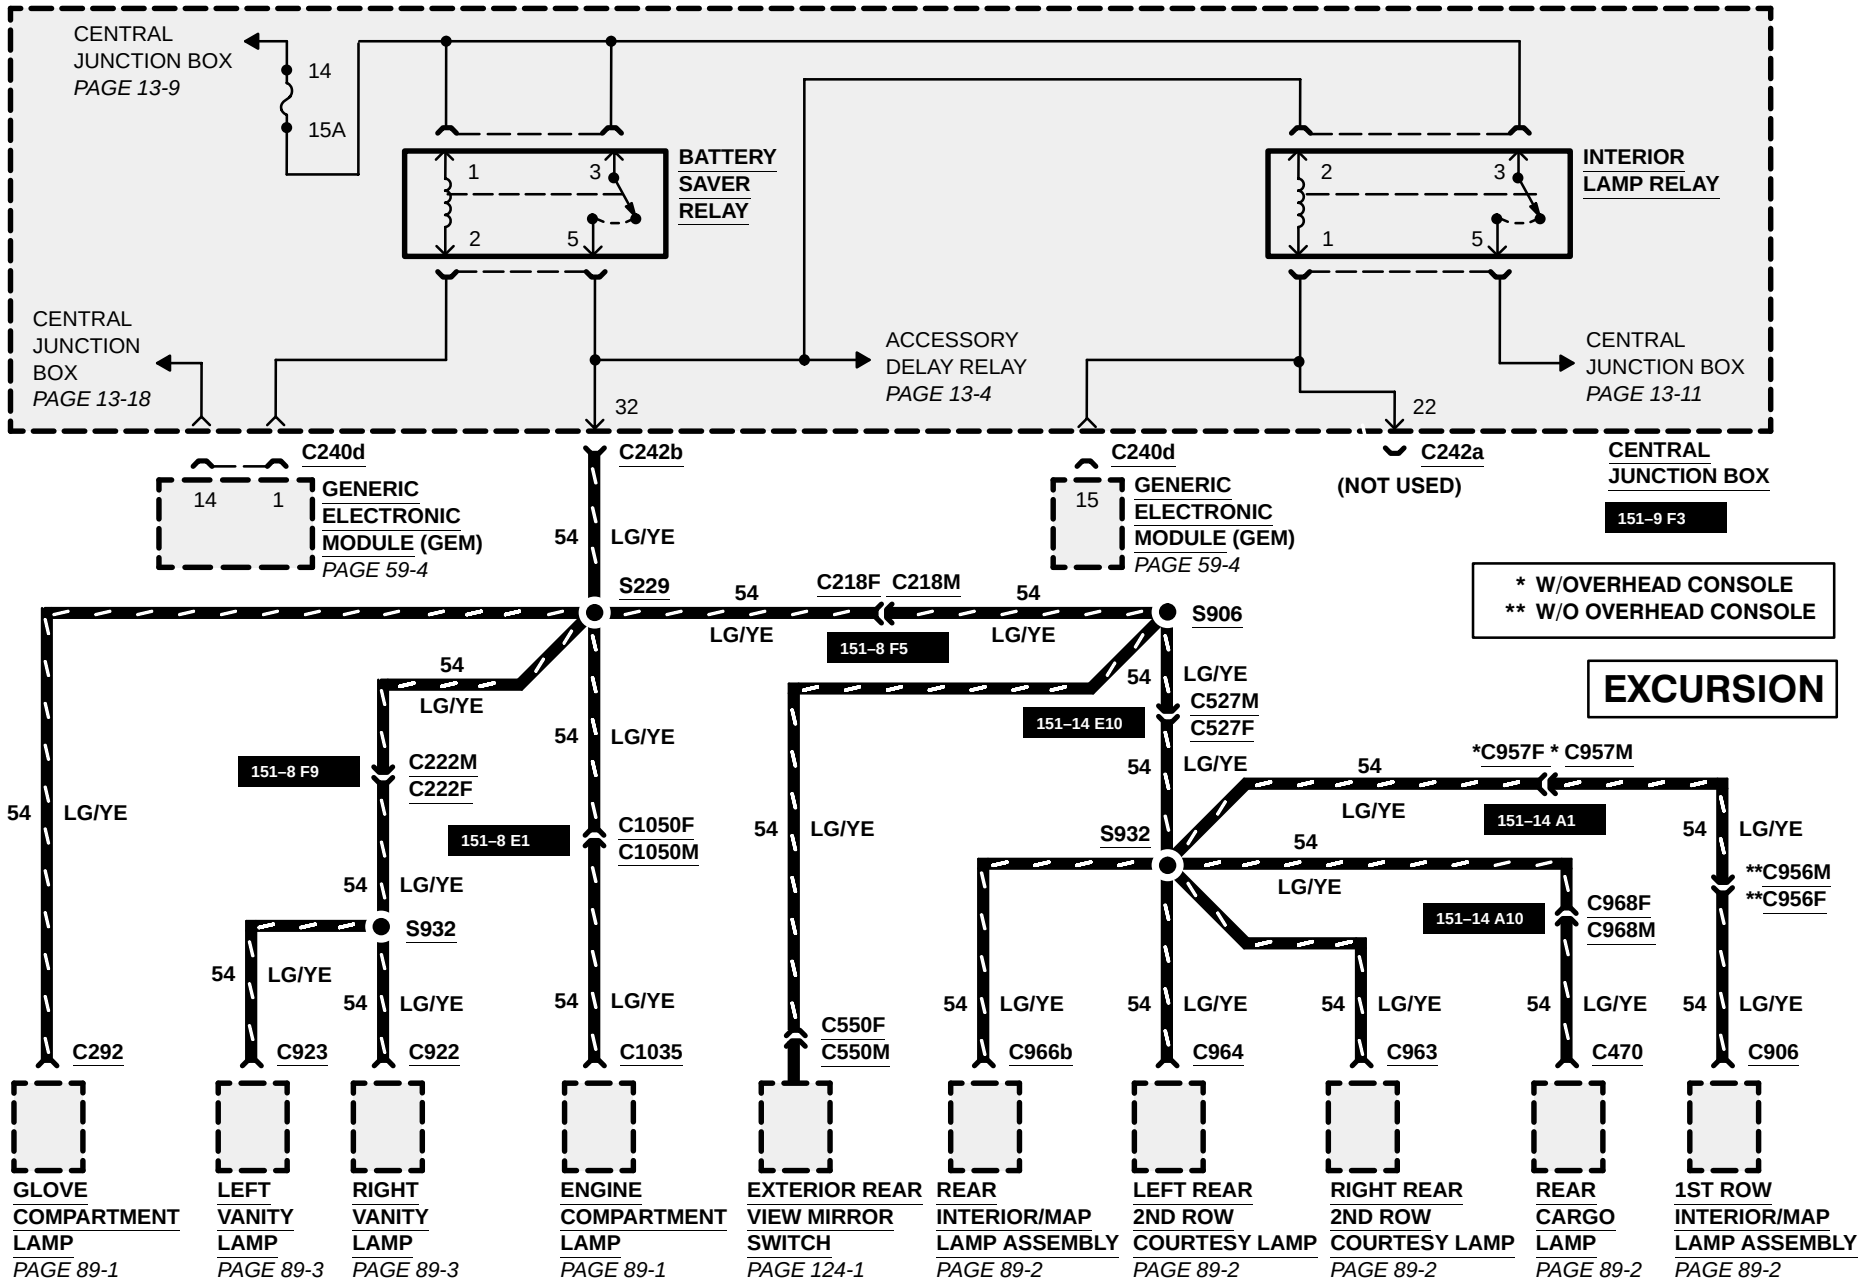
CENTRAL JUNCTION BOX
PAGE 13-9
14
15A
BATTERY SAVER RELAY
INTERIOR LAMP RELAY
CENTRAL JUNCTION BOX
PAGE 13-18
ACCESSORY DELAY RELAY
PAGE 13-4
CENTRAL JUNCTION BOX
PAGE 13-11
32
22
C240d
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-4
C242b
C242a
(NOT USED)
CENTRAL JUNCTION BOX
151–9 F3
* W/OVERHEAD CONSOLE
** W/O OVERHEAD CONSOLE
EXCURSION
54 LG/YE
S229
S906
C218F C218M
151–8 F5
151–14 E10
C222M C222F
151–8 F9
C1050F C1050M
151–8 E1
S932
C527M C527F
*C957F * C957M
151–14 A1
**C956M **C956F
C968F C968M
151–14 A10
C292
C923
C922
C1035
C550F C550M
C966b
C964
C963
C470
C906
GLOVE COMPARTMENT LAMP
PAGE 89-1
LEFT VANITY LAMP
PAGE 89-3
RIGHT VANITY LAMP
PAGE 89-3
ENGINE COMPARTMENT LAMP
PAGE 89-1
EXTERIOR REAR VIEW MIRROR SWITCH
PAGE 124-1
REAR INTERIOR/MAP LAMP ASSEMBLY
PAGE 89-2
LEFT REAR 2ND ROW COURTESY LAMP
PAGE 89-2
RIGHT REAR 2ND ROW COURTESY LAMP
PAGE 89-2
REAR CARGO LAMP
PAGE 89-2
1ST ROW INTERIOR/MAP LAMP ASSEMBLY
PAGE 89-2