C353

14A699/14A005

M214
Power seat motor
assembly, left

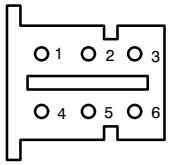

F06257

Pin	Circuit	Circuit function
1	980 (YE/WH)	Fwd/Rwd motor, Rearward
2	983 (RD/LG)	Rear height motor, Up
3	982 (YE/LG)	Rear height motor, Down
4	981 (RD/WH)	Fwd/Rwd motor, Forward
5	990 (YE/LB)	Front height motor, Down
6	979 (RD/LB)	Front height motor, Up

C358

14A699

B231
Seat track position
sensor, left

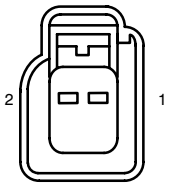

F02132

Pin	Circuit	Circuit function
1	1558 (TN/BK)	Seat track position sensor, driver, return
2	1520 (LG)	Seat position sensor, – horizontal sense

C361

14A699

N445
Lumbar adjust
switch, left front
(14B691)

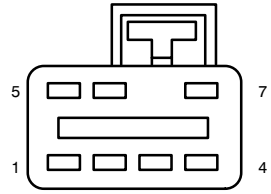

F07055

Pin	Circuit	Circuit function
1	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	517 (BK/WH)	Voltage supplied at all times (overload protected)
3	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor
4	–	not used
5	–	not used
6	–	not used
7	1097 (BN)	Power lumbar switch, left, to, Front seat lumbar compressor motor

C366

14A699

M230
Driver seat backrest
motor

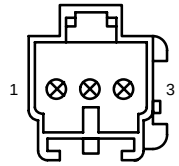

F03062

Pin	Circuit	Circuit function
1	1094 (PK)	Power lumbar switch, left, to, Front seat lumbar compressor motor
2	1097 (BN)	Power lumbar switch, left, to, Front seat lumbar compressor motor
3	57 (BK)	Ground