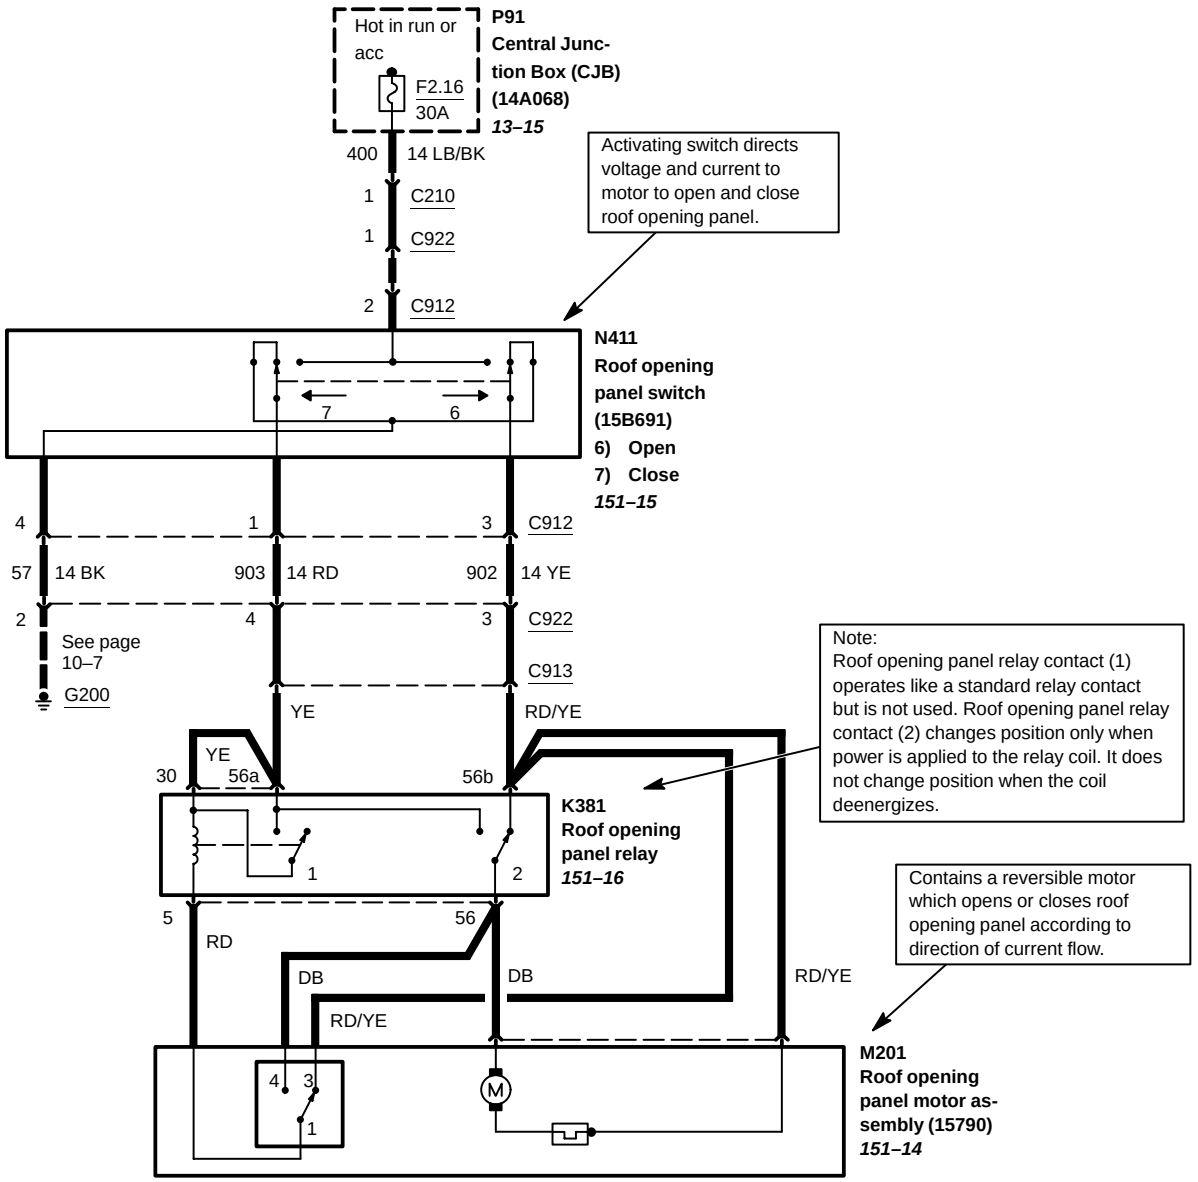
Hot in run or acc
F2.16
30A
P91
Central Junction Box (CJB)
(14A068)
13–15
400
14 LB/BK
1
C210
1
C922
2
C912
Activating switch directs voltage and current to motor to open and close roof opening panel.
N411
Roof opening panel switch
(15B691)
6) Open
7) Close
151–15
7
6
4
1
3
C912
57
14 BK
903
14 RD
902
14 YE
2
4
3
C922
C913
See page 10–7
G200
YE
RD/YE
YE
30
56a
56b
K381
Roof opening panel relay
151–16
1
2
5
56
RD
DB
DB
RD/YE
RD/YE
Note:
Roof opening panel relay contact (1) operates like a standard relay contact but is not used. Roof opening panel relay contact (2) changes position only when power is applied to the relay coil. It does not change position when the coil deenergizes.
Contains a reversible motor which opens or closes roof opening panel according to direction of current flow.
4
3
1
M
M201
Roof opening panel motor assembly (15790)
151–14