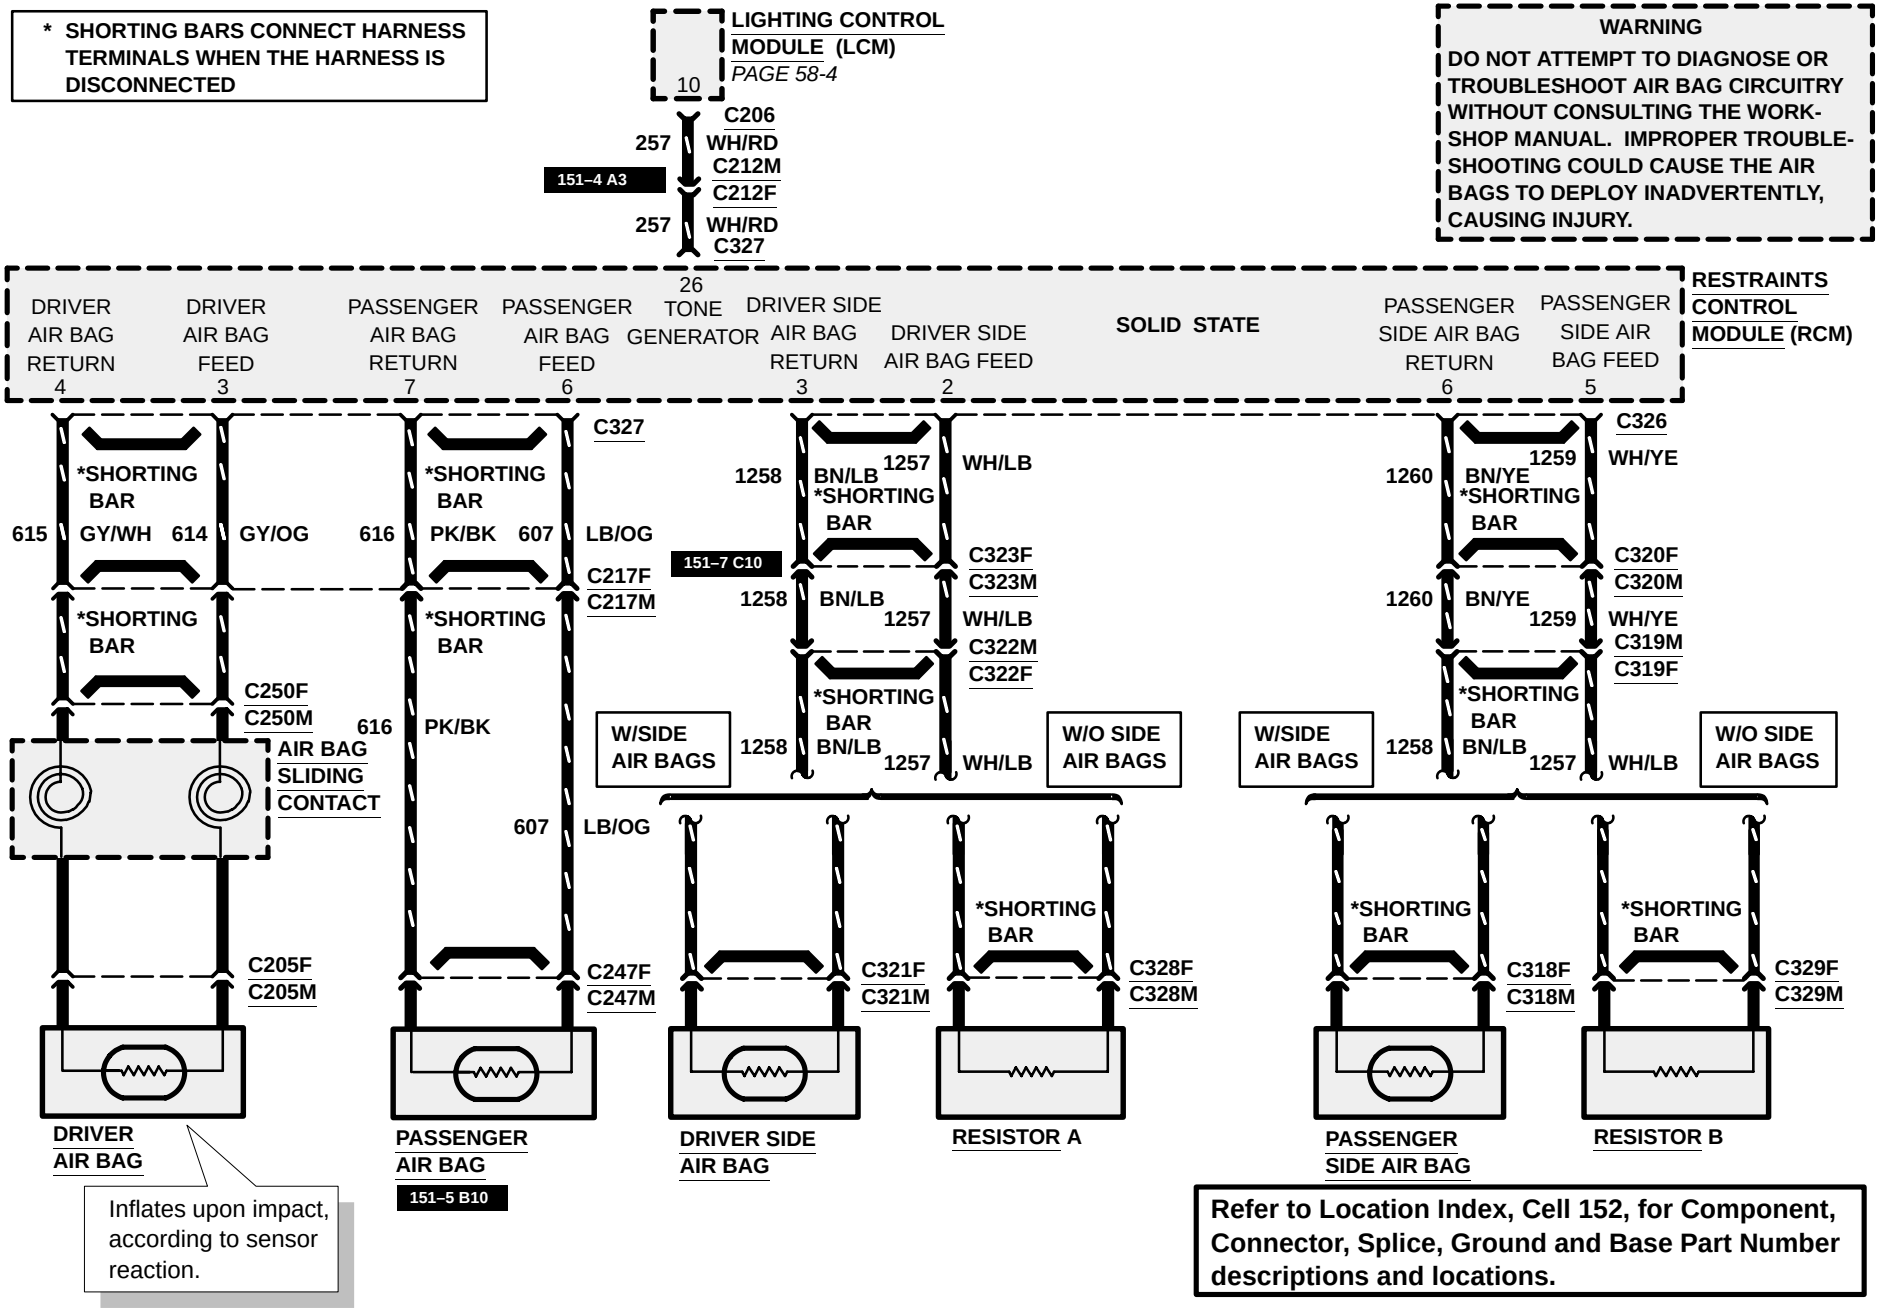
* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED
LIGHTING CONTROL MODULE (LCM)
PAGE 58-4
10
C206
257 WH/RD
C212M
151–4 A3
C212F
257 WH/RD
C327
26
WARNING
DO NOT ATTEMPT TO DIAGNOSE OR TROUBLESHOOT AIR BAG CIRCUITRY WITHOUT CONSULTING THE WORKSHOP MANUAL. IMPROPER TROUBLESHOOTING COULD CAUSE THE AIR BAGS TO DEPLOY INADVERTENTLY, CAUSING INJURY.
DRIVER AIR BAG RETURN 4
DRIVER AIR BAG FEED 3
PASSENGER AIR BAG RETURN 7
PASSENGER AIR BAG FEED 6
TONE GENERATOR
DRIVER SIDE AIR BAG RETURN 3
DRIVER SIDE AIR BAG FEED 2
SOLID STATE
PASSENGER SIDE AIR BAG RETURN 6
PASSENGER SIDE AIR BAG FEED 5
RESTRAINTS CONTROL MODULE (RCM)
C327
*SHORTING BAR
615 GY/WH 614 GY/OG
616 PK/BK 607 LB/OG
C217F
C217M
151–7 C10
1258 BN/LB 1257 WH/LB
C323F
C323M
1258 BN/LB 1257 WH/LB
C322M
C322F
C326
1259 WH/YE
1260 BN/YE
C320F
C320M
1260 BN/YE 1259 WH/YE
C319M
C319F
C250F
C250M
616 PK/BK
607 LB/OG
AIR BAG SLIDING CONTACT
W/SIDE AIR BAGS
W/O SIDE AIR BAGS
1258 BN/LB 1257 WH/LB
C205F
C205M
C247F
C247M
C321F
C321M
C328F
C328M
C318F
C318M
C329F
C329M
DRIVER AIR BAG
PASSENGER AIR BAG
151–5 B10
DRIVER SIDE AIR BAG
RESISTOR A
PASSENGER SIDE AIR BAG
RESISTOR B
Inflates upon impact, according to sensor reaction.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.