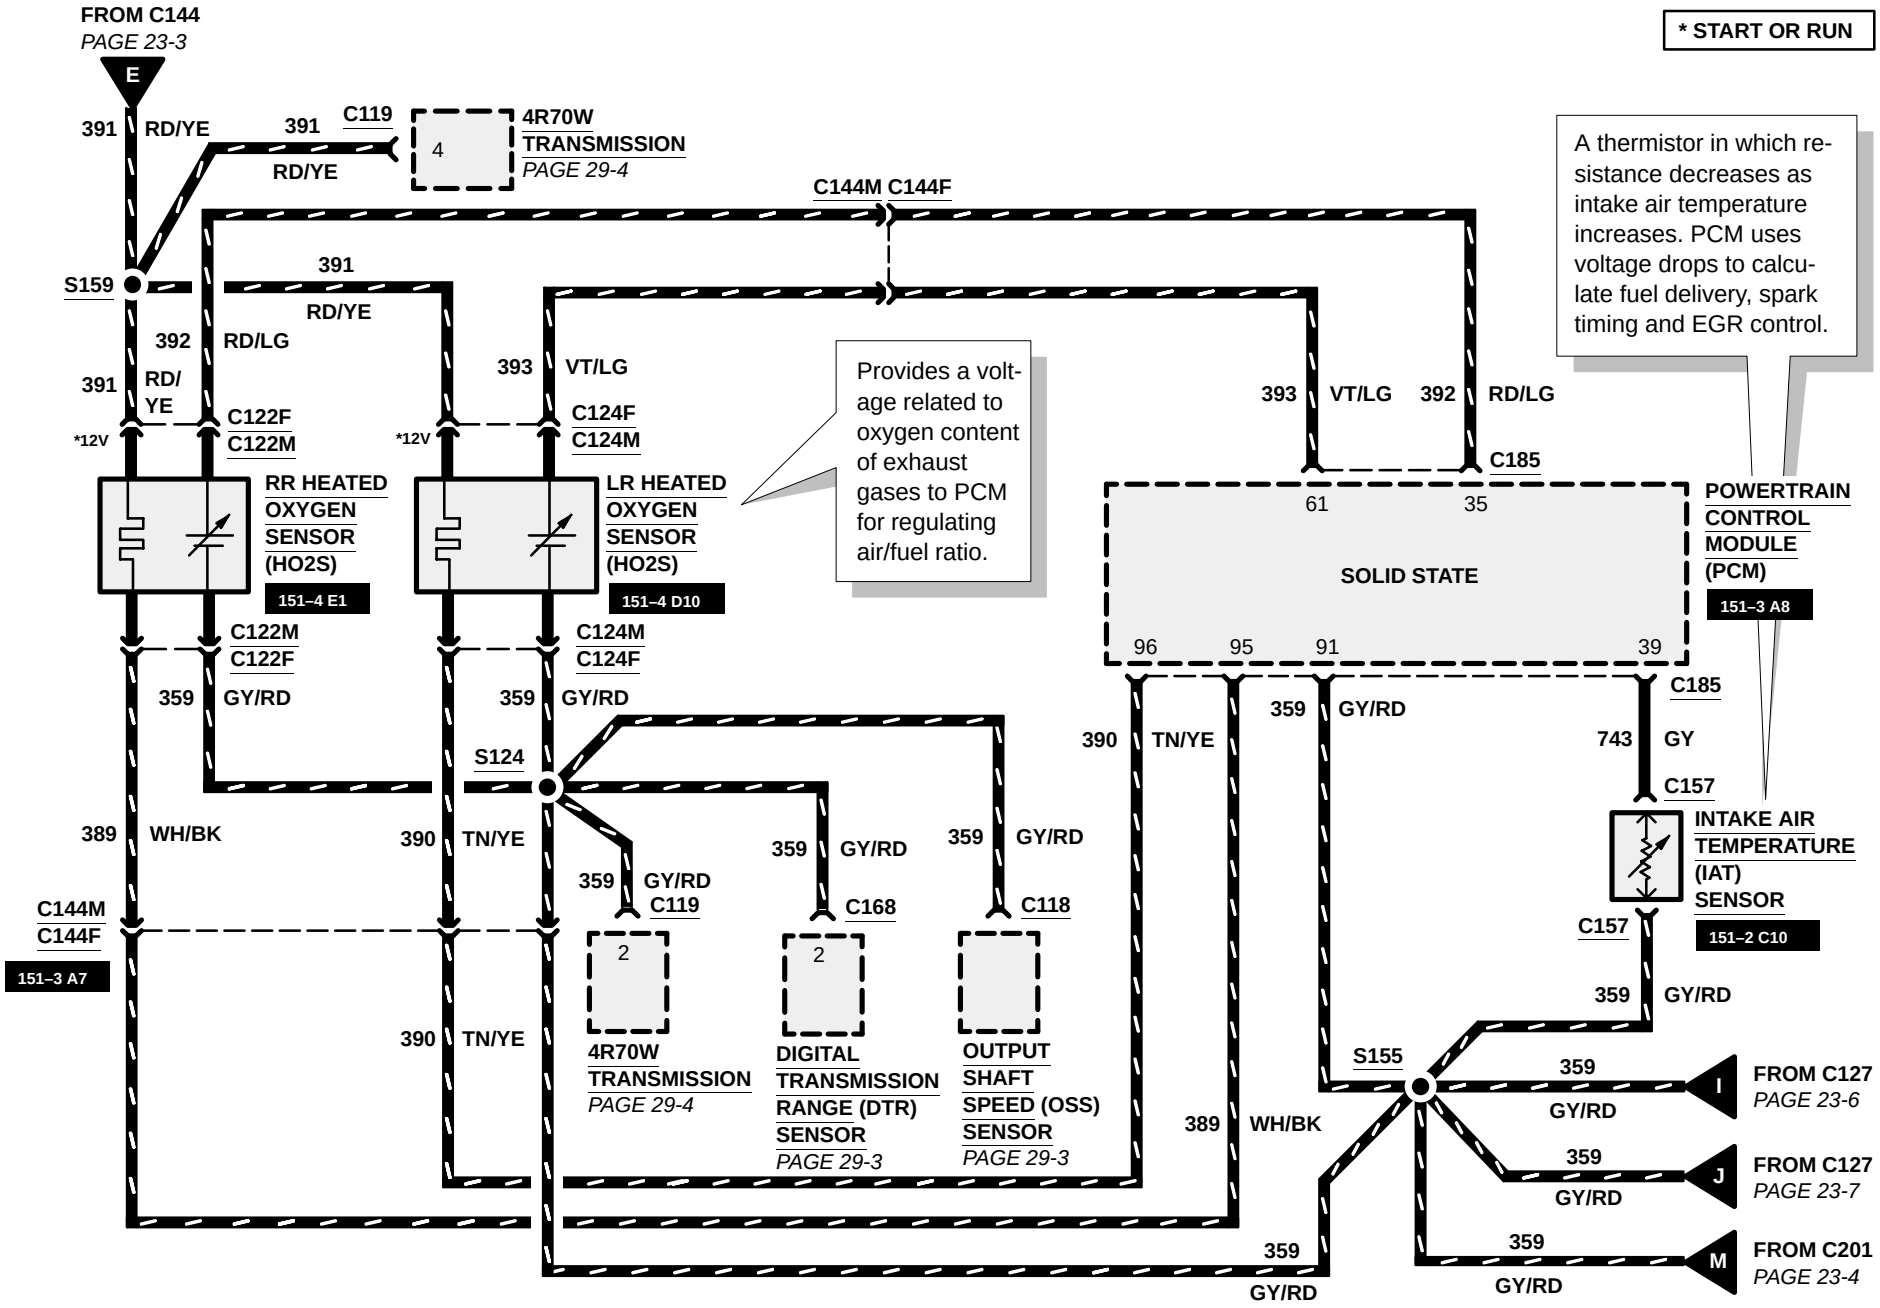
FROM C144
PAGE 23-3
E
* START OR RUN
391 RD/YE
391 RD/YE
C119
4
4R70W TRANSMISSION
PAGE 29-4
C144M C144F
S159
391 RD/YE
392 RD/LG
391 RD/YE
393 VT/LG
393 VT/LG
392 RD/LG
C185
61
35
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–3 A8
A thermistor in which resistance decreases as intake air temperature increases. PCM uses voltage drops to calculate fuel delivery, spark timing and EGR control.
*12V
C122F
C122M
RR HEATED OXYGEN SENSOR (HO2S)
151–4 E1
*12V
C124F
C124M
LR HEATED OXYGEN SENSOR (HO2S)
151–4 D10
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
C122M
C122F
359 GY/RD
C124M
C124F
359 GY/RD
96
95
91
39
390 TN/YE
359 GY/RD
C185
743 GY
C157
INTAKE AIR TEMPERATURE (IAT) SENSOR
151–2 C10
C157
359 GY/RD
S124
389 WH/BK
390 TN/YE
359 GY/RD
C119
359 GY/RD
C168
359 GY/RD
C118
C144M
C144F
151–3 A7
2
2
4R70W TRANSMISSION
PAGE 29-4
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 29-3
OUTPUT SHAFT SPEED (OSS) SENSOR
PAGE 29-3
390 TN/YE
S155
359 GY/RD
I
FROM C127
PAGE 23-6
359 GY/RD
J
FROM C127
PAGE 23-7
359 GY/RD
M
FROM C201
PAGE 23-4
389 WH/BK
359 GY/RD