C1388b

12B637

Injector Driver Module (IDM)

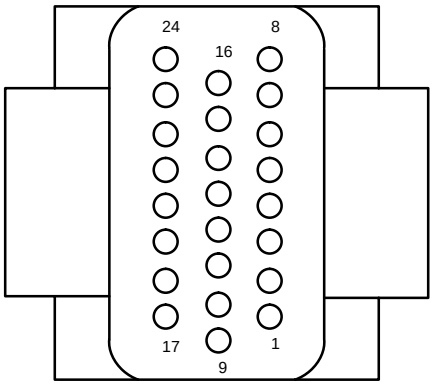

F24037

Pin	Circuit	Circuit function
1	23 (TN/LG)	Fuel injector 5, open coil, Ground
2	19 (LB/RD)	Fuel injector 2, open coil, Ground
3	31 (WH/RD)	Fuel injector 8, open coil, Ground
4	27 (OG/LG)	Fuel injector 3, open coil, Ground
5	22 (LB/BK)	Fuel injector 5, close coil, Ground
6	18 (OG/WH)	Fuel injector 2, close coil, Ground
7	30 (BK/LG)	Fuel injector 8, close coil, Ground
8	26 (WH/VT)	Fuel injector 3, close coil, Ground
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	20 (WH/LB)	Fuel injector 2, open coil, Power
18	17 (WH)	Fuel injector 2, close coil, Power
19	28 (BK/PK)	Fuel injector 3, open coil, Power
20	25 (DG/VT)	Fuel injector 3, close coil, Power
21	24 (DB/OG)	Fuel injector 5, open coil, Power
22	21 (DG/LG)	Fuel injector 5, close coil, Power
23	32 (RD/LB)	Fuel injector 8, open coil, Power
24	29 (YE/WH)	Fuel injector 8, close coil, Power