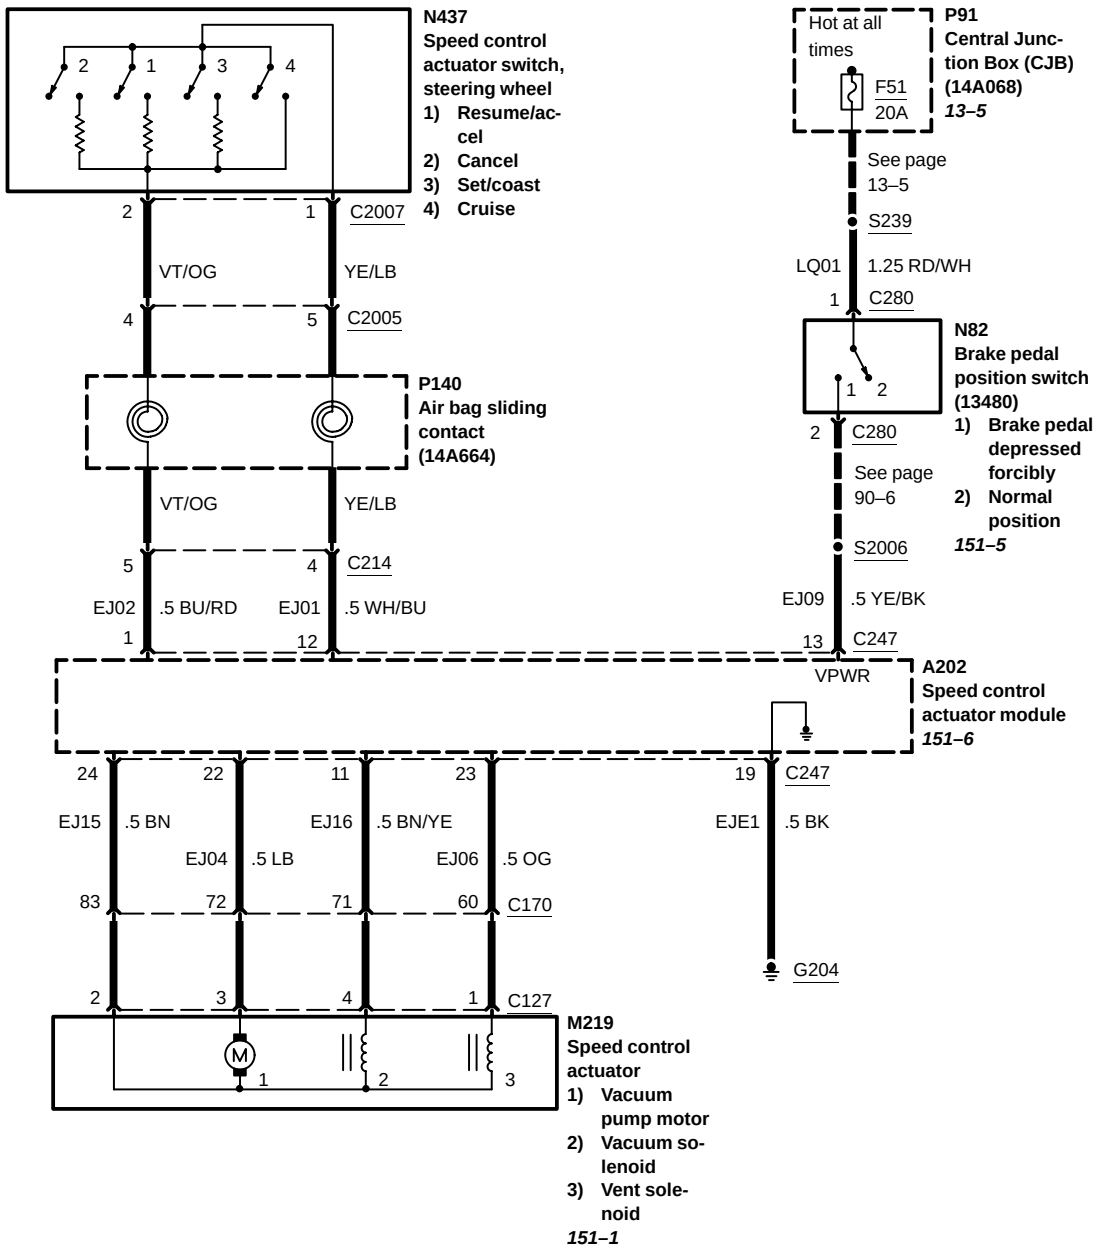
N437
Speed control actuator switch, steering wheel
1) Resume/accel
2) Cancel
3) Set/coast
4) Cruise
2
1
C2007
VT/OG
YE/LB
4
5
C2005
P140
Air bag sliding contact
(14A664)
VT/OG
YE/LB
5
4
C214
EJ02
.5 BU/RD
EJ01
.5 WH/BU
1
12
Hot at all times
F51
20A
P91
Central Junction Box (CJB)
(14A068)
13–5
See page 13–5
S239
LQ01
1.25 RD/WH
1
C280
N82
Brake pedal position switch
(13480)
1) Brake pedal depressed forcibly
2) Normal position
151–5
1
2
2
C280
See page 90–6
S2006
EJ09
.5 YE/BK
13
C247
VPWR
A202
Speed control actuator module
151–6
24
22
11
23
19
C247
EJ15
.5 BN
EJ04
.5 LB
EJ16
.5 BN/YE
EJ06
.5 OG
EJE1
.5 BK
83
72
71
60
C170
G204
2
3
4
1
C127
M
1
2
3
M219
Speed control actuator
1) Vacuum pump motor
2) Vacuum solenoid
3) Vent solenoid
151–1