C267c (BK)

14N104

A30
Instrument cluster

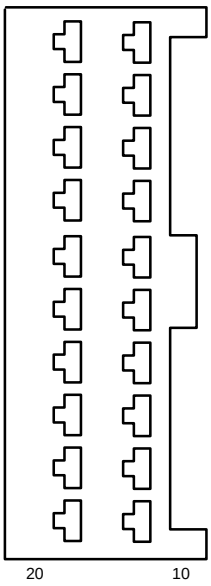

F20011

Pin	Circuit	Circuit Function
1	NR01 (VT)	Malfunction Indicator Lamp (MIL), control
2	NF01 (GN/BK)	Low washer fluid indicator
3	LB15 (RD/WH)	Turn lamps, Right, switched power
4	ZY03 (BU/OG)	Overdrive indicator, control
5	–	not used
6	LB16 (RD/GN)	Turn lamps, Left, switched power
7	MA02 (BU)	Voltage supplied in Start and Run (overload protected)
8	NM01 (YE)	Generator/Battery indica-tor, control
9	N103 (GN)	Safety belt indicator, control
10	PS15 (OG)	Air bag indicator, control
11	IG92 (PK/BK)	Illumination, Ground
12	IG01 (PK)	Illumination, feed
13	–	not used
14	BS29 (WH/BK)	Anti–lock brake indicator, control
15	NN01 (VT/WH)	Low fuel indicator, control
16	NB01 (YE/VT)	Brake indicator, control
17	MD01 (RD)	Engine oil pressure indicator, control
18	LA03 (OG/BU)	High beam lamp, left front
19	MAE1 (BK)	Ground
20	MA07 (BU)	Voltage supplied in Start and Run (overload protected)

C268 (BU)

14N104

K300
Rear blower motor relay

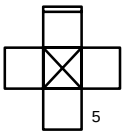

F04129

Pin	Circuit	Circuit Function
1	HA12 (YE/RD)	Rear blower motor relay, control
2	HA44 (BU)	Voltage supplied in Start and Run (overload protected)
3	HB21 (BK/WH)	Switched, Ground
4	–	not used
5	HE01 (BK)	Ground