111-11 REMOTE KEYLESS ENTRY (RKE)

EXCURSION

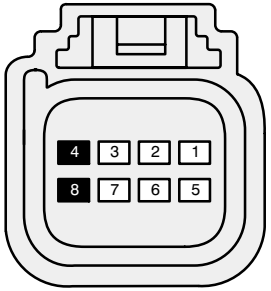

C529

KEYLESS ENTRY KEYPAD SWITCH ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	78 (LB/YE)	Keypad Button 1/2 Output
2	1013 (BN/LG)	Keypad Illumination
3	79 (LG/RD)	Keypad Button 3/4 Output
4	–	NOT USED
5	57 (BK)	Ground
6	124 (BN)	Keypad Common
7	121 (YE/BK)	Keypad Button 5/6 Output
8	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C240b	59-10
C240c	59-11
C250c	60-8
C273a	13-37