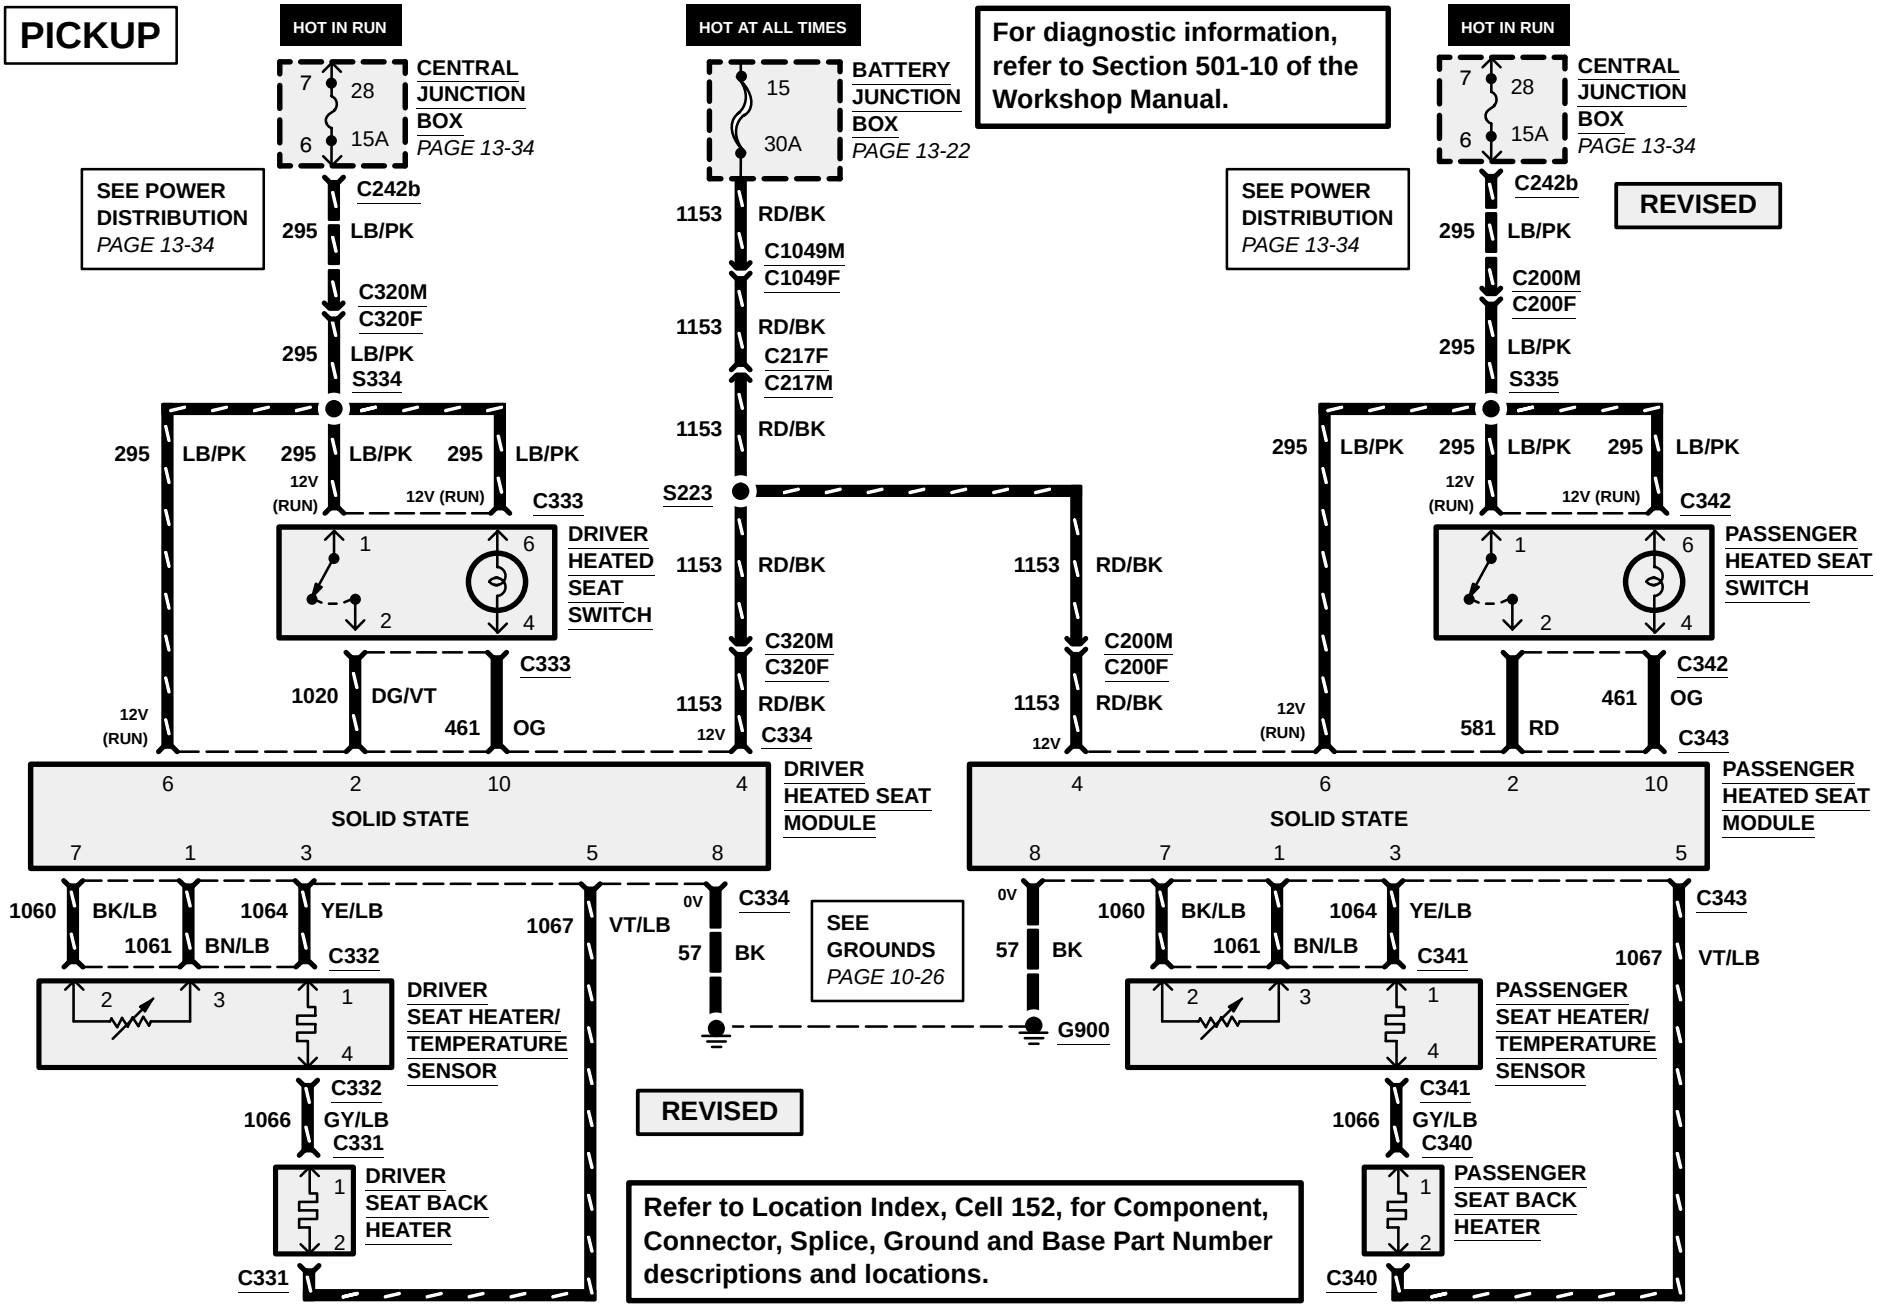
PICKUP
HOT IN RUN
HOT AT ALL TIMES
HOT IN RUN
For diagnostic information, refer to Section 501-10 of the Workshop Manual.
CENTRAL JUNCTION BOX
PAGE 13-34
BATTERY JUNCTION BOX
PAGE 13-22
CENTRAL JUNCTION BOX
PAGE 13-34
SEE POWER DISTRIBUTION
PAGE 13-34
SEE POWER DISTRIBUTION
PAGE 13-34
REVISED
C242b
295 LB/PK
C320M
C320F
295 LB/PK
S334
1153 RD/BK
C1049M
C1049F
1153 RD/BK
C217F
C217M
1153 RD/BK
S223
C200M
C200F
295 LB/PK
S335
295 LB/PK
12V (RUN)
C333
DRIVER HEATED SEAT SWITCH
C342
PASSENGER HEATED SEAT SWITCH
1020 DG/VT
461 OG
C333
C320M
C320F
C334
C200M
C200F
581 RD
461 OG
C342
C343
SOLID STATE
DRIVER HEATED SEAT MODULE
SOLID STATE
PASSENGER HEATED SEAT MODULE
1060 BK/LB
1061 BN/LB
1064 YE/LB
C332
1067 VT/LB
0V
57 BK
C334
SEE GROUNDS
PAGE 10-26
G900
C341
C343
DRIVER SEAT HEATER/ TEMPERATURE SENSOR
PASSENGER SEAT HEATER/ TEMPERATURE SENSOR
1066 GY/LB
C331
C340
DRIVER SEAT BACK HEATER
PASSENGER SEAT BACK HEATER
REVISED
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.