## C392

### VF3862

A270
Video cassette player




F12119

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Video cassette player – Ground |
| 2 | 16 (YE/WH) | Voltage supplied at all times (overload protected) |
| 3 | 18 (BK) | Voltage in Run or Accessory (overload protected) |
| 4 | – | not used |
| 5 | – | not used |
| 6 | 255 (PK/DG) | Video cassette player, control |
| 7 | 245 (YE/RD) | Video cassette player – audio, Left + |
| 8 | 235 (VT/YE) | Video cassette player – audio, Left – |
| 9 | 225 (DB/RD) | Video cassette player – audio, Right + |
| 10 | 215 (PK/BK) | Video cassette player – audio, Right – |
| 11 | 205 (BK/WH) | Video cassette player – Video display + |
| 12 | 195 (OG/PK) | Video cassette player – Video display – |

## C393a

### VF3862

A267
Rear Seat Entertainment (RSE) module

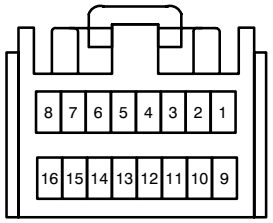


F16103

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK/LG) | Ground |
| 2 | 15 (TN/WH) | Speaker, left – output + |
| 3 | 25 (GY/BU) | Speaker, left – input + |
| 4 | 35 (TN/YE) | Speaker, left – input + |
| 5 | 57 (BK/GN) | Ground – Audio unit (18808) |
| 6 | 65 (BN/PK) | Speaker, right – input – |
| 7 | 55 (OG/RD) | Speaker, right – input + |
| 8 | 45 (TN/LG) | Speaker, right – output + |
| 9 | 19 (LG/RD) | Illumination + |
| 10 | 19 (BK) | Illumination – |
| 11 | – | not used |
| 12 | 75 (LB/PK) | ACP Bus A |
| 13 | 85 (TN) | ACP Bus B |
| 14 | 57 (BK/LG) | Ground |
| 15 | 16 (LG/PK) | Voltage supplied at all times (overload protected) |
| 16 | 23 (LG/BK) | Audio System ON (ASYSON) |