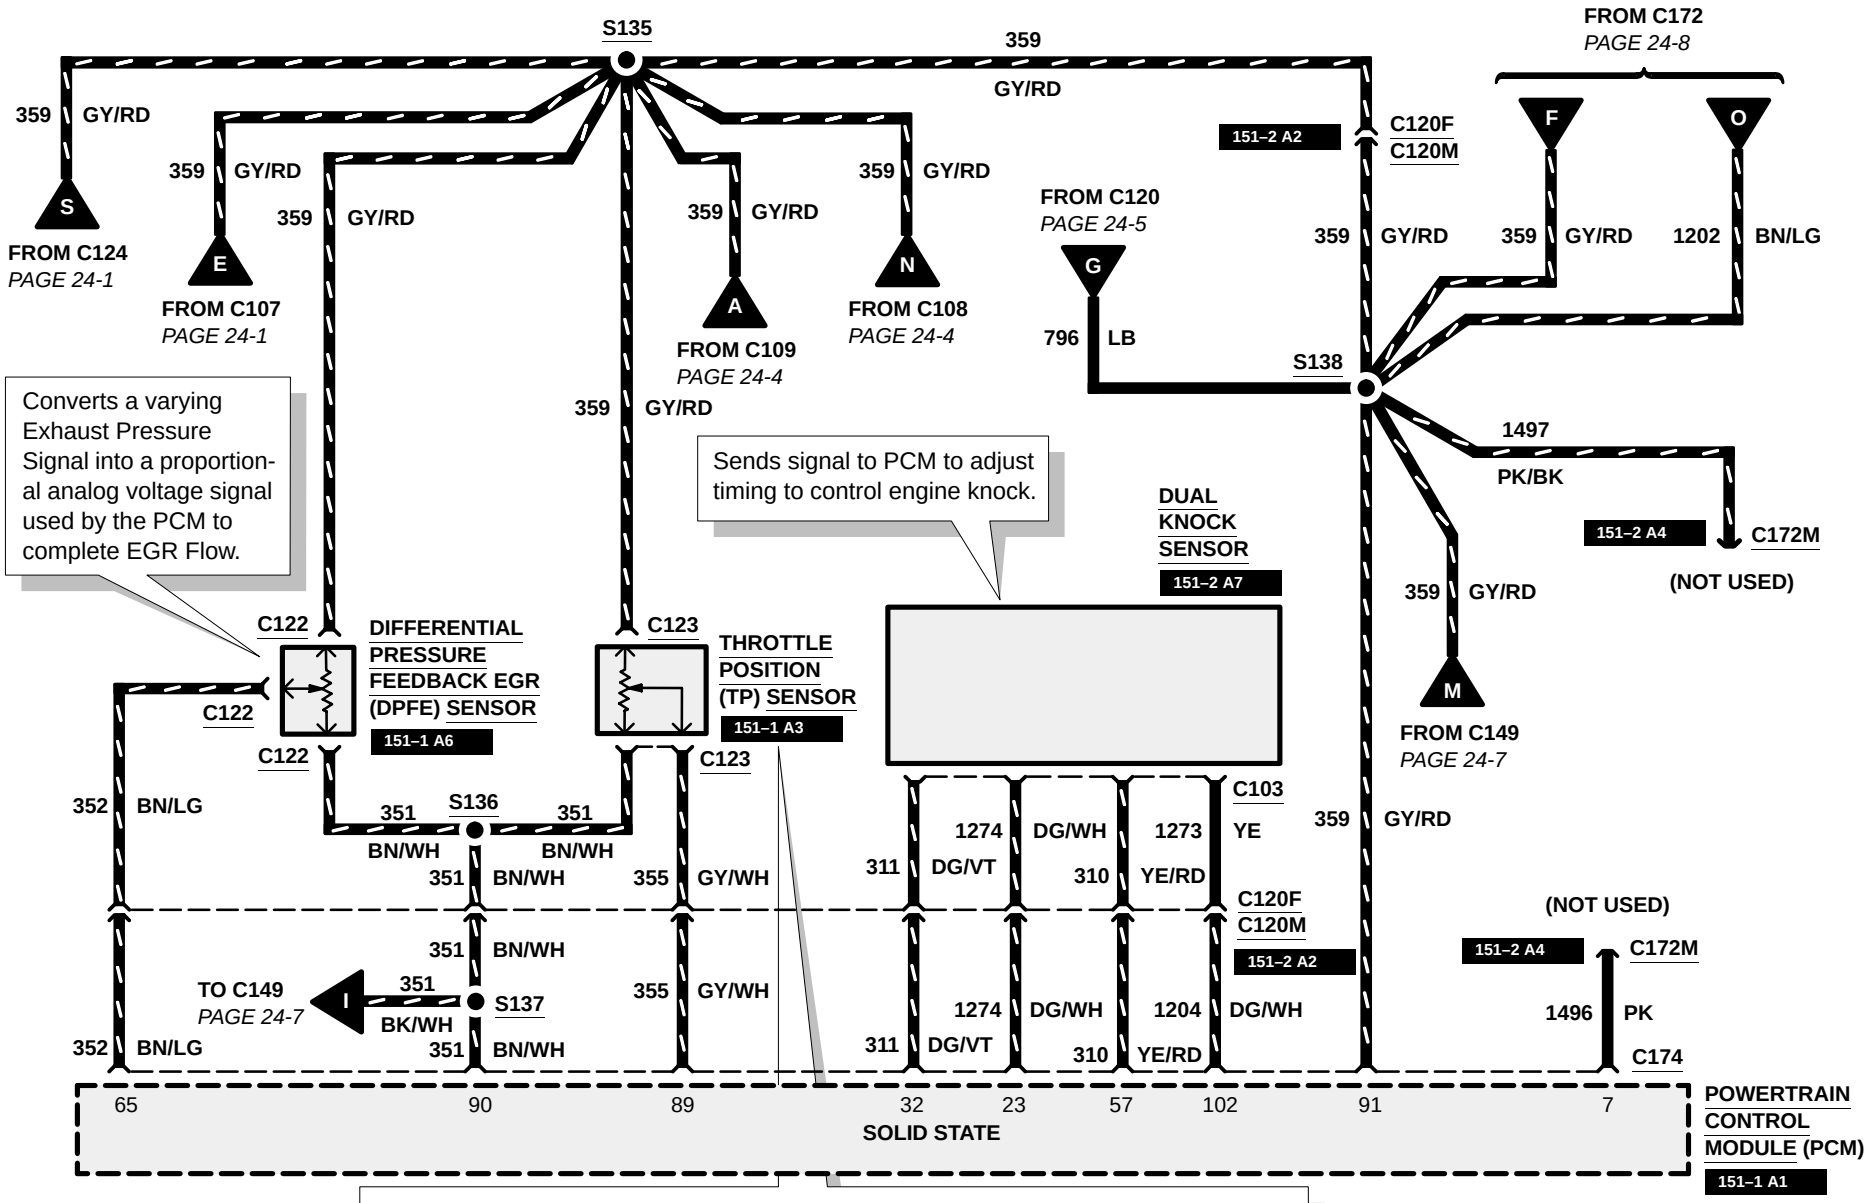
S135
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
359 GY/RD
S
FROM C124
PAGE 24-1
E
FROM C107
PAGE 24-1
A
FROM C109
PAGE 24-4
N
FROM C108
PAGE 24-4
G
FROM C120
PAGE 24-5
796 LB
S138
151–2 A2
C120F
C120M
FROM C172
PAGE 24-8
F
O
1202 BN/LG
1497
PK/BK
151–2 A4
C172M
(NOT USED)
M
FROM C149
PAGE 24-7
Converts a varying Exhaust Pressure Signal into a proportional analog voltage signal used by the PCM to complete EGR Flow.
Sends signal to PCM to adjust timing to control engine knock.
DUAL KNOCK SENSOR
151–2 A7
C122
DIFFERENTIAL PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–1 A6
C123
THROTTLE POSITION (TP) SENSOR
151–1 A3
352 BN/LG
351 BN/WH
S136
351 BN/WH
355 GY/WH
311 DG/VT
1274 DG/WH
310 YE/RD
1273 YE
C103
359 GY/RD
C120F
C120M
151–2 A2
(NOT USED)
151–2 A4
C172M
1496 PK
C174
TO C149
PAGE 24-7
I
351 BN/WH
S137
BK/WH
1204 DG/WH
65
90
89
32
23
57
102
91
7
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A1
As the resistance varies according to accelerator pedal angle, the PCM applies voltage to this sensor and then measures the voltage drop to help calculate fuel delivery.