4WABS

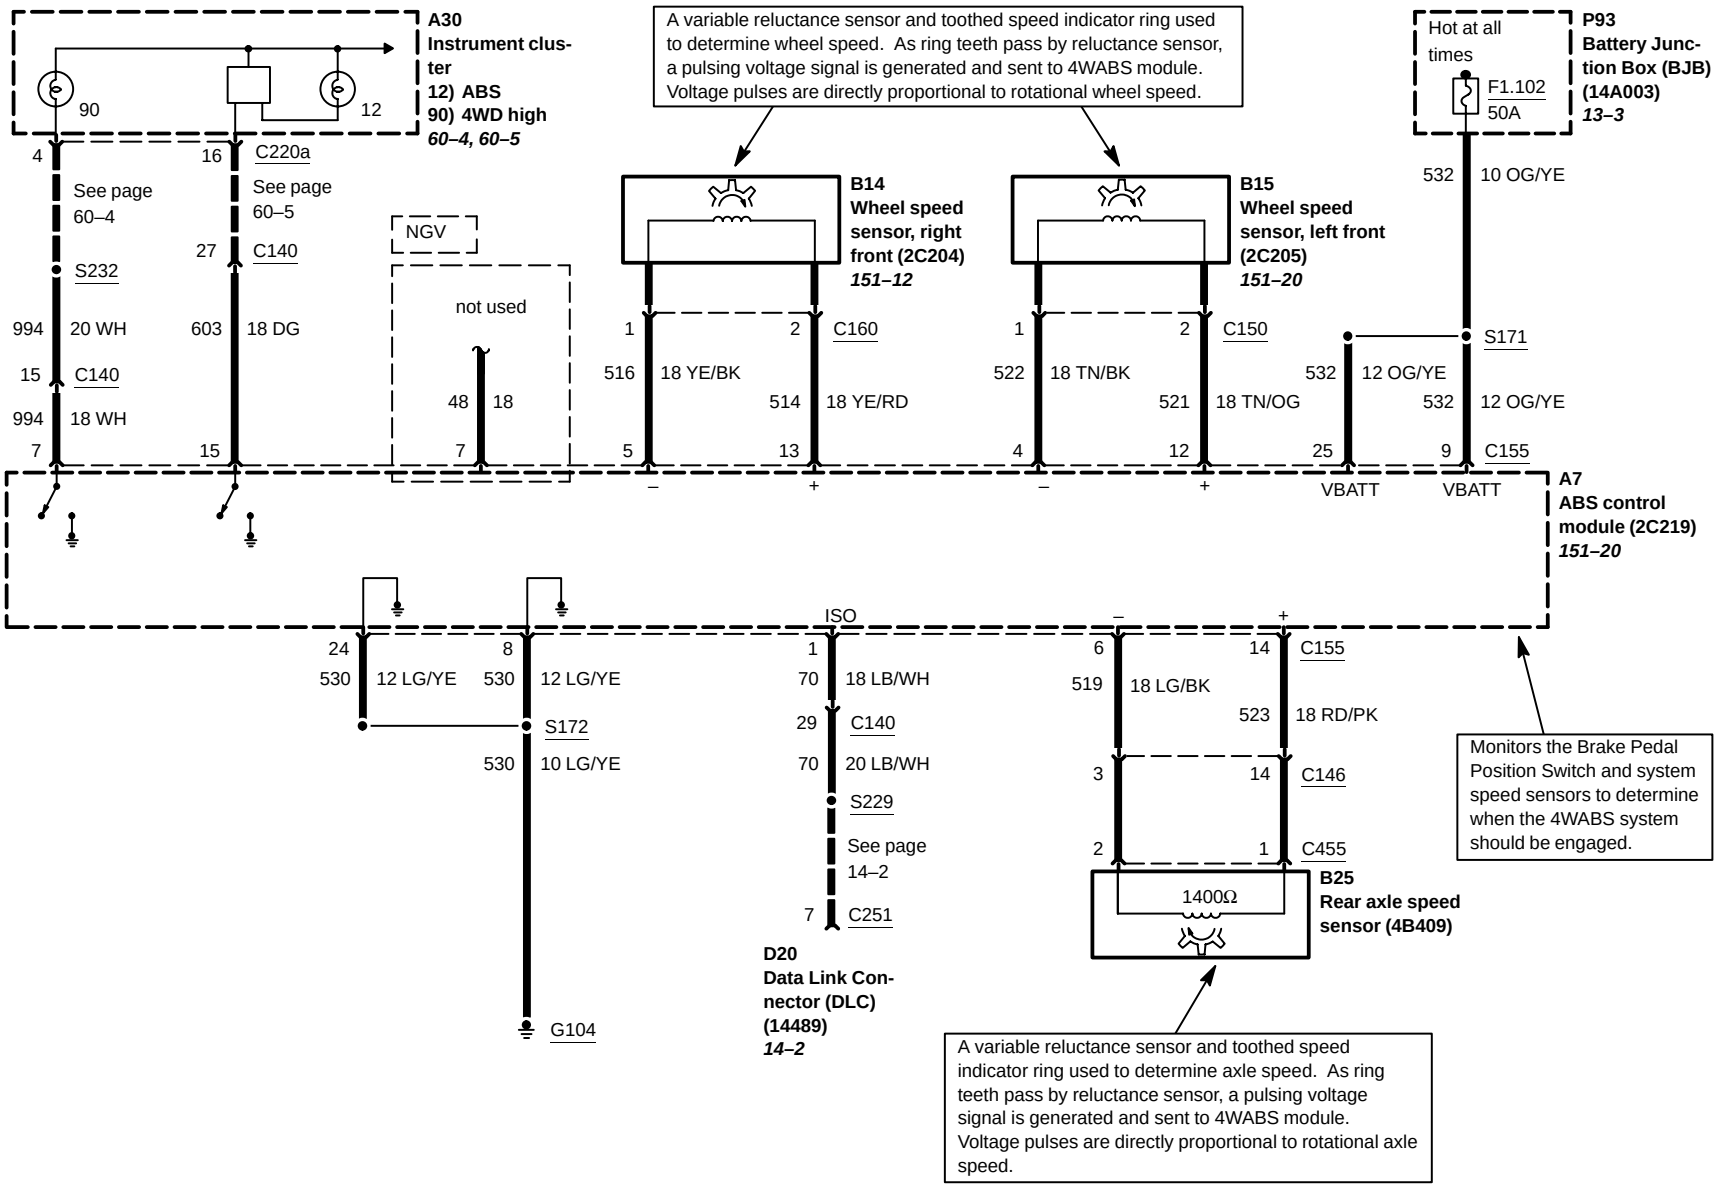
A30
Instrument cluster
12) ABS
90) 4WD high
60–4, 60–5
90
12
4
16
C220a
See page 60–4
See page 60–5
27
C140
S232
994 20 WH
15
C140
994 18 WH
7
15
603 18 DG
NGV
not used
48
18
7
A variable reluctance sensor and toothed speed indicator ring used to determine wheel speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational wheel speed.
B14
Wheel speed sensor, right front (2C204)
151–12
1
2
C160
516 18 YE/BK
514 18 YE/RD
5
13
–
+
B15
Wheel speed sensor, left front (2C205)
151–20
1
2
C150
522 18 TN/BK
521 18 TN/OG
4
12
–
+
Hot at all times
F1.102
50A
P93
Battery Junction Box (BJB)
(14A003)
13–3
532 10 OG/YE
S171
532 12 OG/YE
532 12 OG/YE
25
9
C155
VBATT
VBATT
A7
ABS control module (2C219)
151–20
24
530 12 LG/YE
8
530 12 LG/YE
S172
530 10 LG/YE
G104
ISO
1
70 18 LB/WH
29
C140
70 20 LB/WH
S229
See page 14–2
7
C251
D20
Data Link Connector (DLC)
(14489)
14–2
–
+
6
519 18 LG/BK
14
C155
523 18 RD/PK
3
14
C146
2
1
C455
1400Ω
B25
Rear axle speed sensor (4B409)
Monitors the Brake Pedal Position Switch and system speed sensors to determine when the 4WABS system should be engaged.
A variable reluctance sensor and toothed speed indicator ring used to determine axle speed. As ring teeth pass by reluctance sensor, a pulsing voltage signal is generated and sent to 4WABS module. Voltage pulses are directly proportional to rotational axle speed.