12-1 CHARGING SYSTEM

2001 CONTINENTAL

For diagnostic information, refer to Section 414-00 of the Workshop Manual.

Generates power to keep battery fully charged and to operate vehicle's electrical system. Output is variable and depends on speed at which rotor spins, as well as amount of current passing through rotor winding. Current flow through rotor winding is controlled by built in regulator. Stator generates alternating current, which is passed through series of rectifier diodes and converted to direct current.

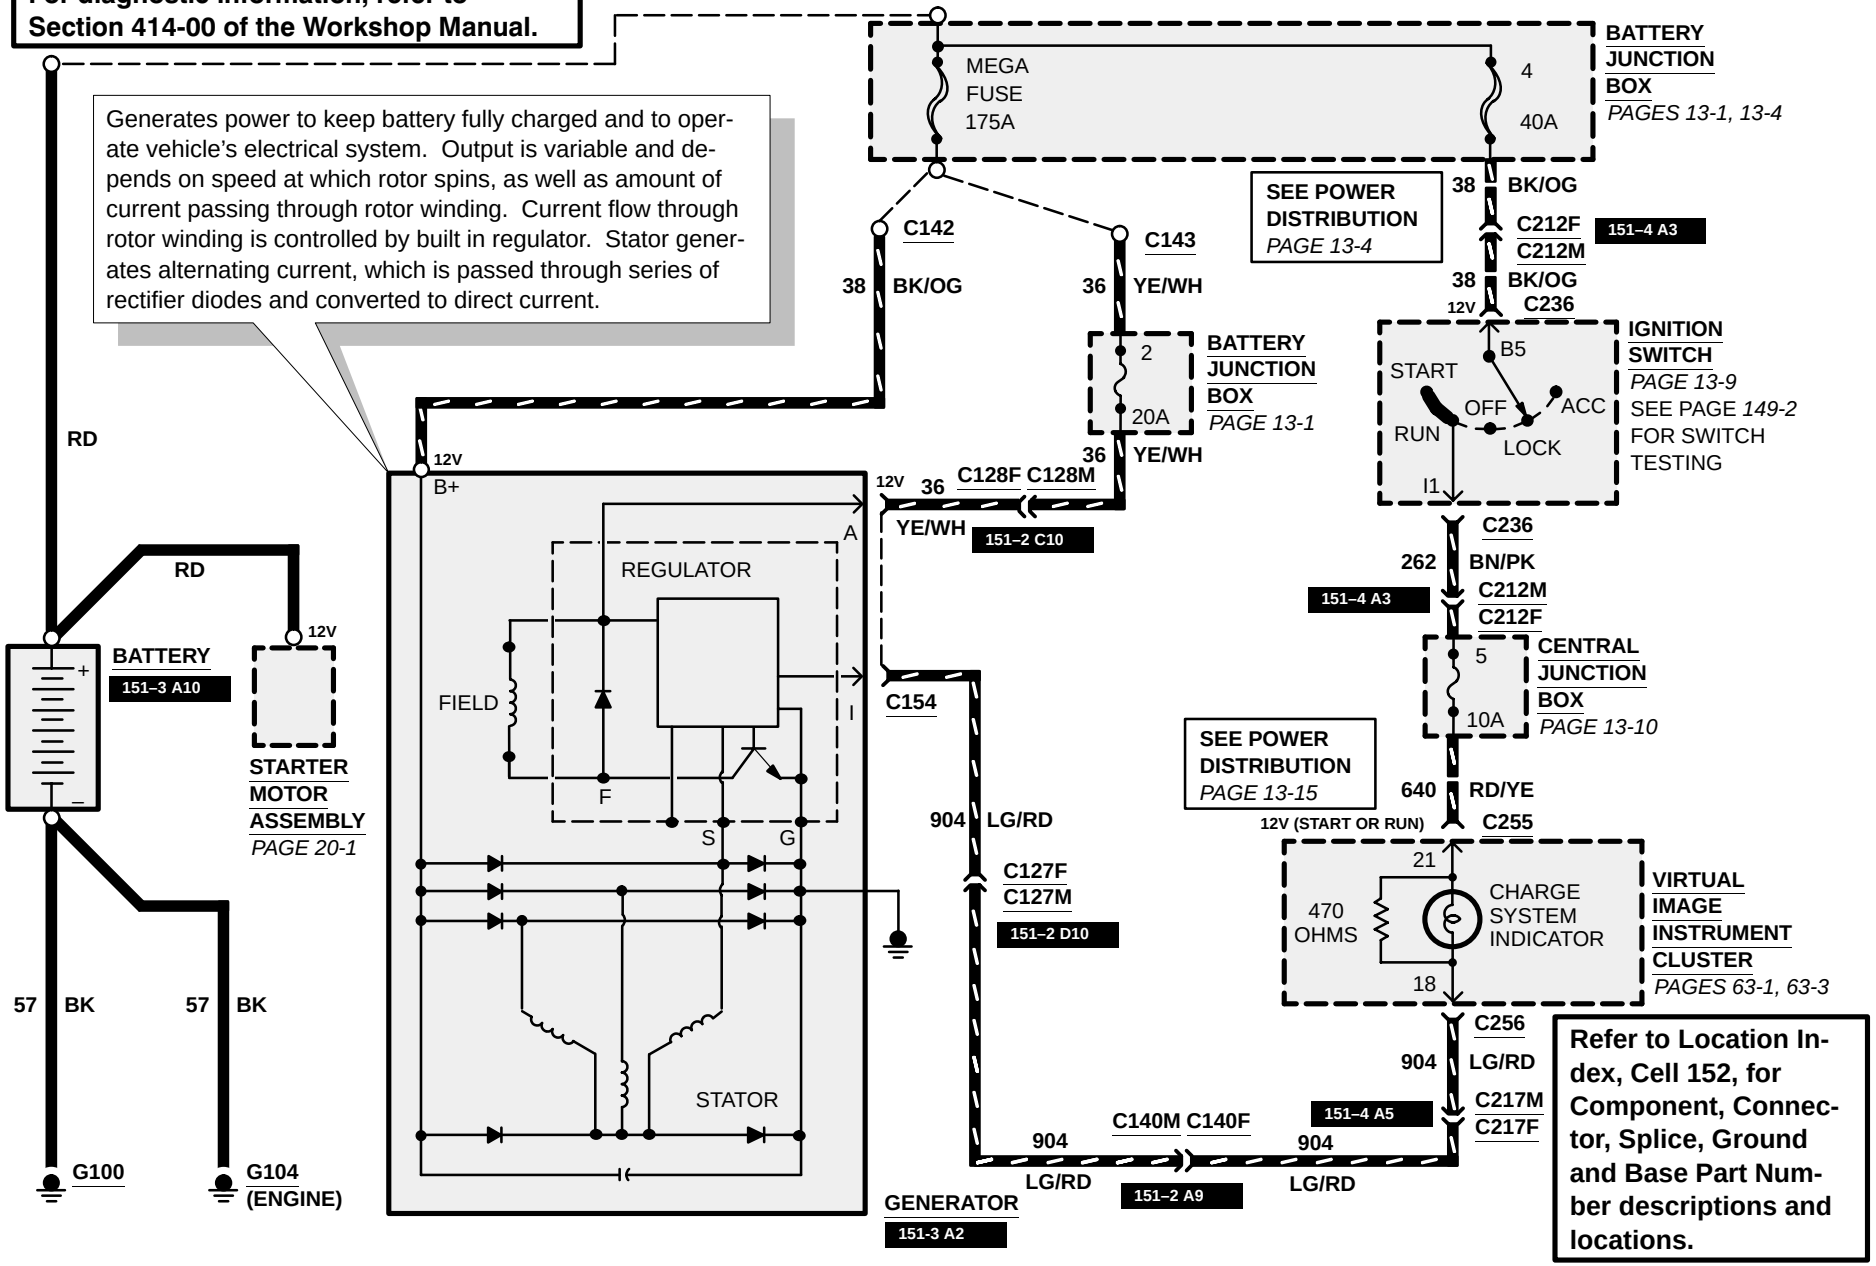

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.