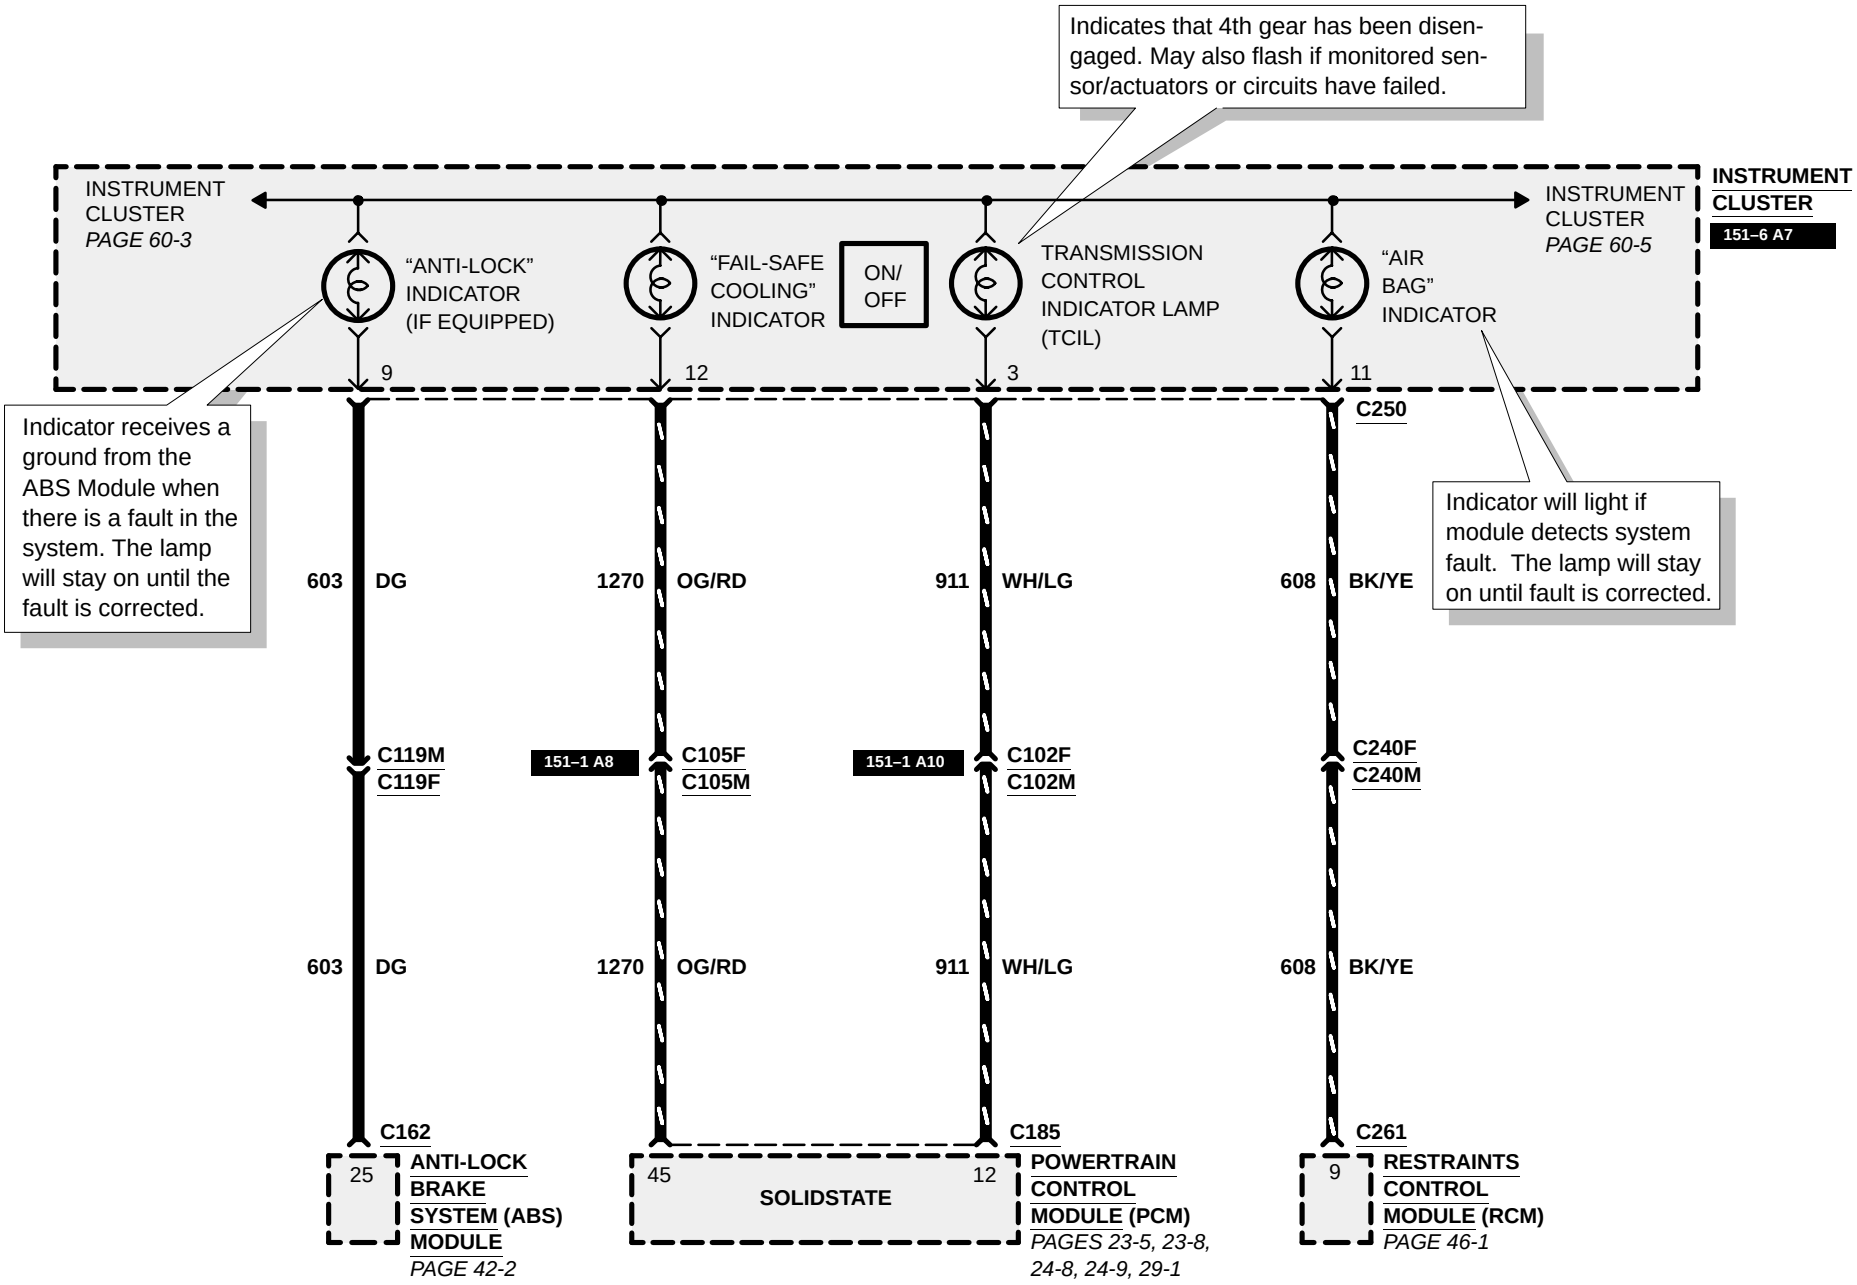
Indicates that 4th gear has been disengaged. May also flash if monitored sensor/actuators or circuits have failed.
INSTRUMENT CLUSTER
PAGE 60-3
"ANTI-LOCK" INDICATOR (IF EQUIPPED)
"FAIL-SAFE COOLING" INDICATOR
ON/ OFF
TRANSMISSION CONTROL INDICATOR LAMP (TCIL)
"AIR BAG" INDICATOR
INSTRUMENT CLUSTER
PAGE 60-5
INSTRUMENT CLUSTER
151–6 A7
9
12
3
11
Indicator receives a ground from the ABS Module when there is a fault in the system. The lamp will stay on until the fault is corrected.
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
C250
603 DG
1270 OG/RD
911 WH/LG
608 BK/YE
C119M
C119F
151–1 A8
C105F
C105M
151–1 A10
C102F
C102M
C240F
C240M
603 DG
1270 OG/RD
911 WH/LG
608 BK/YE
C162
C185
C261
25
ANTI-LOCK BRAKE SYSTEM (ABS) MODULE
PAGE 42-2
45
12
SOLIDSTATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-5, 23-8, 24-8, 24-9, 29-1
9
RESTRAINTS CONTROL MODULE (RCM)
PAGE 46-1