C120

14290

Y69
Power steering valve solenoid

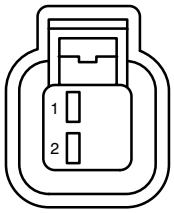

F02069

Pin	Circuit	Circuit Function
1	8-CE9 (WH/GN)	Sensor signal
2	8-CE6 (BN/GN)	Sensor signal return (reference/ ground)

C121

14290

N96
Power steering pressure switch

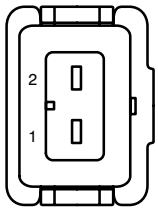

F02089

Pin	Circuit	Circuit Function
1	9-CE6 (BN)	Sensor signal return (reference/ ground)
2	8-CE6 (WH)	Sensor signal

C122

14290

M87
Speed control servo

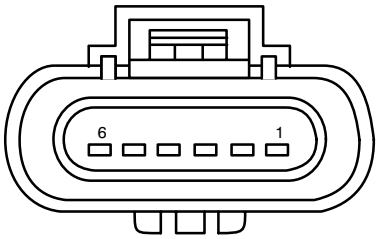

F06069

Pin	Circuit	Circuit Function
1	15S-PG12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	10-PG21 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
3	8-PG21 (WH/GN)	Sensor signal
4	10-PG12 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
5	8-PG12 (WH/VT)	Sensor signal
6	29S-PG16 (OG/YE)	Voltage supplied at all times (overload protected), Switched

C123

14290

Y134
EVAP canister purge valve

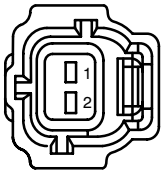

F02103

Pin	Circuit	Circuit Function
1	15S-RL25 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched
2	91S-RL25 (BN/RD)	Ground, Switched

C124

14290

N1
Brake fluid level switch

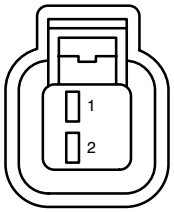

F02069

Pin	Circuit	Circuit Function
1	8-GC7 (WH/RD)	Sensor signal
2	31-GC7 (BK/BU)	Ground

C125

17A477

M111
Windshield wiper motor

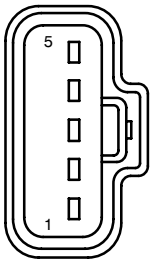

F05091

Pin	Circuit	Circuit Function
1	75S-KA11 (YE/BK)	Voltage: Ignition switch in Accessory or Run, Switched
2	75S-KA10 (YE/GN)	Voltage: Ignition switch in Accessory or Run, Switched
3	31-KA9 (BK/OG)	Ground
4	75S-KA9 (YE/BU)	Voltage: Ignition switch in Accessory or Run, Switched
5	31S-KA1 (BK/YE)	Ground, Switched