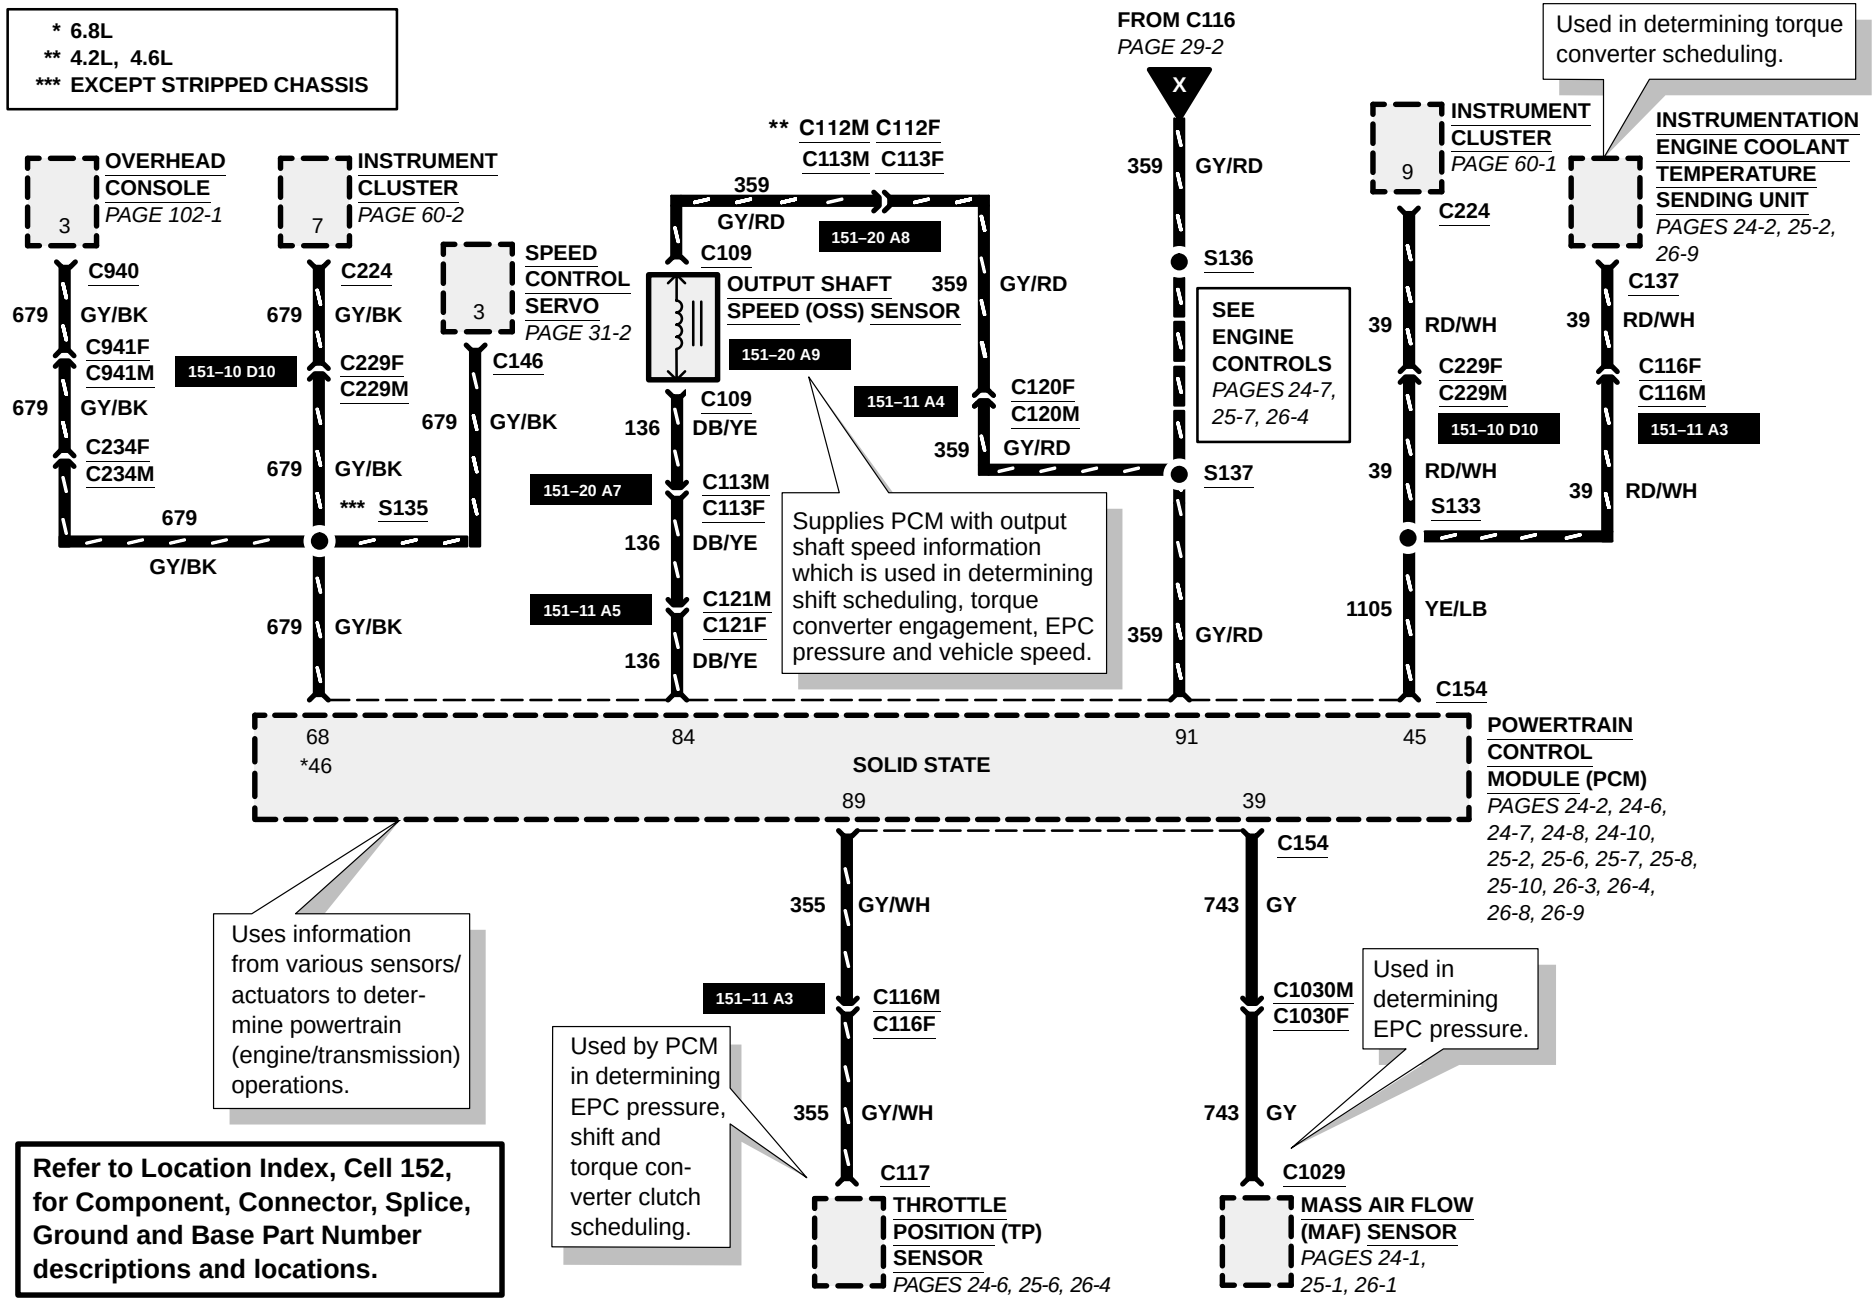
* 6.8L
** 4.2L, 4.6L
*** EXCEPT STRIPPED CHASSIS
FROM C116
PAGE 29-2
X
Used in determining torque converter scheduling.
INSTRUMENTATION ENGINE COOLANT TEMPERATURE SENDING UNIT
PAGES 24-2, 25-2, 26-9
OVERHEAD CONSOLE
PAGE 102-1
INSTRUMENT CLUSTER
PAGE 60-2
INSTRUMENT CLUSTER
PAGE 60-1
** C112M C112F
C113M C113F
SPEED CONTROL SERVO
PAGE 31-2
OUTPUT SHAFT SPEED (OSS) SENSOR
SEE ENGINE CONTROLS
PAGES 24-7, 25-7, 26-4
C940
C941F
C941M
C234F
C234M
C224
C229F
C229M
C146
C109
C113M
C113F
C121M
C121F
C120F
C120M
S135
S136
S137
S133
C137
C116F
C116M
C154
151–10 D10
151–20 A8
151–20 A9
151–11 A4
151–20 A7
151–11 A5
151–11 A3
679 GY/BK
359 GY/RD
136 DB/YE
39 RD/WH
1105 YE/LB
Supplies PCM with output shaft speed information which is used in determining shift scheduling, torque converter engagement, EPC pressure and vehicle speed.
SOLID STATE
68
*46
84
91
45
89
39
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-2, 24-6, 24-7, 24-8, 24-10, 25-2, 25-6, 25-7, 25-8, 25-10, 26-3, 26-4, 26-8, 26-9
Uses information from various sensors/ actuators to determine powertrain (engine/transmission) operations.
355 GY/WH
743 GY
C1030M
C1030F
Used in determining EPC pressure.
Used by PCM in determining EPC pressure, shift and torque converter clutch scheduling.
C117
C1029
THROTTLE POSITION (TP) SENSOR
PAGES 24-6, 25-6, 26-4
MASS AIR FLOW (MAF) SENSOR
PAGES 24-1, 25-1, 26-1
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.